

Nautica N14508

Nautica N14508 Men's Watch Instruction Manual

Model: N14508

1. OVERVIEW

Thank you for choosing the Nautica N14508 Men's Watch. This timepiece combines robust design with reliable Japanese quartz movement, making it suitable for everyday wear and recreational diving. This manual provides essential information to help you set up, operate, maintain, and troubleshoot your watch.




Image 1.1: Front view of the Nautica N14508 watch. It features a round stainless steel case, a black dial with prominent white hour markers and hands, a date window at 12 o'clock, and a vibrant orange silicone strap. The unidirectional bezel is silver-toned.

2. SETUP

2.1 Initial Battery Installation (if applicable)

Your Nautica N14508 watch requires 1 CR2 battery. If the watch is not running upon arrival, the battery may need to be installed or replaced. It is recommended to have battery replacement performed by a qualified watch technician to ensure water resistance integrity.

2.2 Setting the Time and Date

1. Pull the crown (the knob on the side of the watch) out to the first click position to adjust the date. Turn the crown clockwise or counter-clockwise until the correct date is displayed.
2. Pull the crown out to the second click position to adjust the time. Turn the crown to move the hour and minute hands to the desired time. Ensure you set the correct AM/PM for the date change.
3. Once the time and date are set, push the crown back in fully to its original position. This will start the watch movement.

Image 2.1: Rear view of the Nautica N14508 watch. The stainless steel case back is visible, along with the orange silicone strap and its buckle clasp. The crown on the side is also clearly shown.

2.3 Adjusting the Strap

The silicone strap features a traditional buckle clasp. Adjust the strap by inserting the pin into the appropriate hole for a comfortable and secure fit on your wrist. The watch comes with additional straps for customization.



Image 2.2: The Nautica N14508 watch displayed on a wrist, providing a perspective on its size and how it appears when worn. The orange strap and black dial are prominent.

3. OPERATING

3.1 Timekeeping

Your Nautica N14508 watch utilizes a precise Japanese quartz movement for accurate timekeeping. The analog display shows hours, minutes, and seconds.

3.2 Date Display

The watch features a date window at the 12 o'clock position. The date automatically advances once every 24 hours. If the date changes at noon instead of midnight, pull the crown to the second click position and advance the time by 12 hours.

3.3 Unidirectional Bezel

The watch is equipped with a unidirectional rotating bezel. This feature is commonly used for timing events, such as dive times. To use, align the zero marker on the bezel with the minute hand at the start of your activity. The minute hand will then indicate the elapsed time on the bezel's scale.

3.4 Water Resistance

The Nautica N14508 is water resistant up to 200 meters (660 feet), making it suitable for recreational diving. Ensure the crown is fully pushed in before any contact with water. Do not operate the crown or pushers (if any) while the watch is submerged or wet, as this can compromise water resistance.

4. MAINTENANCE

4.1 Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and strap regularly with a soft, dry cloth. For the silicone strap, you can use a mild soap and water solution, then rinse thoroughly and dry completely. Avoid using harsh chemicals or abrasive materials.

4.2 Battery Replacement

When the watch stops or the second hand begins to skip, it is an indication that the battery needs to be replaced. As mentioned, it is highly recommended to have battery replacement performed by an authorized service center or a professional watchmaker to ensure the watch's water resistance is maintained.

4.3 Storage

When not wearing your watch, store it in a cool, dry place, away from direct sunlight and extreme temperatures. The original packaging or a watch box is ideal for storage.

Image 4.1: The Nautica N14508 watch presented in its box. The watch with its orange strap is visible, along with two additional straps (one grey, one black) and a tool for changing straps, indicating customization options.

Image 4.2: A detailed view of the two interchangeable straps included with the watch. One strap is grey with a textured pattern, and the other is black with a smooth finish. Both feature Nautica-branded buckles, allowing for versatile styling.

5. TROUBLESHOOTING

- **Watch Not Running:**
Check if the crown is fully pushed in. If it is, the battery may need replacement.
- **Incorrect Time/Date:**
Refer to Section 2.2 for instructions on how to properly set the time and date. Ensure the crown is fully pushed in after setting.
- **Condensation Under Crystal:**
This may indicate a loss of water resistance. Avoid further contact with water and have the watch inspected by a professional service center immediately.
- **Strap Discomfort:**
Adjust the strap to a looser or tighter hole. If discomfort persists, consider using one of the alternative straps provided.

6. SPECIFICATIONS

Brand	Nautica
Model Number	N14508
Movement	Japanese Quartz
Display Type	Analog
Case Material	Stainless Steel
Dial Window Material	Mineral Crystal
Water Resistance Depth	200 Meters (660 Feet)
Battery Type	1 CR2
Product Dimensions	15 x 15 x 15 cm; 471.74 g

7. WARRANTY AND SUPPORT

Your Nautica N14508 watch is covered by a manufacturer's warranty. Please refer to the warranty card or documentation included with your purchase for specific terms and conditions, including warranty period and coverage details. For technical support, service, or warranty claims, please contact Nautica customer service or visit the official Nautica website for authorized service centers.

Note: Unauthorized repairs or modifications may void your warranty.

