

[manuals.plus](#) /

› [Sunbeam](#) /

› [Sunbeam 002524-000-NPO 200 Watt White Mixmaster Hand Mixer Instruction Manual](#)

Sunbeam 002524-000-NPO

Sunbeam 002524-000-NPO 200 Watt White Mixmaster Hand Mixer Instruction Manual

Model: 002524-000-NPO

INTRODUCTION

Thank you for purchasing the Sunbeam 002524-000-NPO 200 Watt White Mixmaster Hand Mixer. This manual provides important information regarding the safe operation, maintenance, and care of your new appliance. Please read all instructions carefully before use and retain this manual for future reference.



Figure 1: Sunbeam 200 Watt White Mixmaster Hand Mixer with its stainless steel beaters.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the hand mixer.
- To protect against electrical shock, do not immerse the mixer body, cord, or plug in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to prevent injury and/or damage to the mixer.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended household use.

SETUP AND ASSEMBLY

Before first use, wash the beaters thoroughly in warm, soapy water, then rinse and dry. The mixer body can be wiped clean with a damp cloth.

Attaching the Beaters:

1. Ensure the mixer is unplugged from the electrical outlet.
2. Insert the beaters one at a time into the openings on the underside of the mixer. Push and twist slightly until they click securely into place. The beaters are designed to fit only one way.



Figure 2: Beaters correctly inserted into the mixer ports.

OPERATING INSTRUCTIONS

The Sunbeam Hand Mixer features 6 speed settings for versatile mixing tasks.

Using Your Hand Mixer:

1. After attaching the beaters, plug the mixer into a standard electrical outlet.
2. Place the ingredients to be mixed in a bowl.
3. Lower the beaters into the mixture before turning the mixer on.
4. Select the desired speed using the speed control switch located on the handle. Start with a low speed and gradually increase as needed to prevent splashing.
5. Move the mixer slowly through the mixture until desired consistency is achieved.
6. Once mixing is complete, turn the speed control switch to the "OFF" position.
7. Lift the beaters from the bowl.
8. Unplug the mixer from the electrical outlet.

Speed Guide:

Speed Setting	Recommended Use
1-2 (Low)	Folding, stirring, slow mixing of dry ingredients, combining liquids.
3-4 (Medium)	Mixing batters, creaming butter and sugar, mashing potatoes.
5-6 (High)	Whipping cream, beating egg whites, mixing heavy batters.

Table 1: Recommended speed settings for various mixing tasks.



Figure 3: The speed control switch located on the top of the mixer handle.

CARE AND CLEANING

Proper care and cleaning will ensure the longevity of your Sunbeam Hand Mixer.

1. Always unplug the mixer before cleaning.
2. Press the beater eject button to release the beaters.
3. Wash beaters in warm, soapy water or in the dishwasher. The beaters are made of stainless steel and are dishwasher safe.
4. Wipe the mixer body with a damp cloth. Do not immerse the mixer body in water or any other liquid.
5. Dry all parts thoroughly before storing.



Figure 4: Detached beaters and mixer body ready for cleaning.

TROUBLESHOOTING

If you experience issues with your hand mixer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outlet not working.	Ensure the mixer is securely plugged into a working electrical outlet. Test the outlet with another appliance.
Beaters are difficult to insert or remove.	Beaters not aligned correctly; beater eject button not fully pressed.	Ensure beaters are aligned with the openings. Press the beater eject button firmly when removing.
Mixer slows down or struggles during operation.	Mixture is too thick or dense; speed setting is too low.	Increase the speed setting. If the mixture is very thick, consider adding a small amount of liquid or mixing in smaller batches. Do not overload the mixer.

Problem	Possible Cause	Solution
Unusual noise or smell.	Internal malfunction.	Immediately unplug the mixer. Do not use. Contact customer service for assistance.

PRODUCT SPECIFICATIONS

Model: 002524-000-NPO

Brand: Sunbeam

Color: White

Wattage: 200 watts

Number of Speeds: 6

Mixer Type: Hand

Blade Material: Stainless Steel

Controls Type: Push Button

Dishwasher Safe Parts: Beaters

Product Dimensions: 8.27 x 3.58 x 7.95 inches

Item Weight: 2.4 pounds

UPC: 027045659925

WARRANTY AND SUPPORT

For warranty information, service, or support, please contact Sunbeam customer service. Keep your purchase receipt as proof of purchase for warranty claims.

Visit the official Sunbeam website for the most up-to-date contact information and product support resources.

Online Support: www.sunbeam.com

© 2024 Sunbeam Products Inc. All rights reserved.

This manual is for informational purposes only. Sunbeam reserves the right to make changes to products and specifications at any time without notice.

Related Documents - 002524-000-NPO

 <p>Sunbeam Mixmaster® Combo Pro Hand & Stand Mixer MXP1000WH</p>	<p>Sunbeam Mixmaster Combo Pro Hand & Stand Mixer User Guide MXP1000WH</p> <p>User guide for the Sunbeam Mixmaster Combo Pro Hand & Stand Mixer (MXP1000WH), detailing safety, features, operation, care, cleaning, and recipes. Includes warranty information and support contacts.</p>
---	--

	<p><u>Sunbeam Mixmaster Combo Pro Hand & Stand Mixer User Guide MXP1000WH</u></p> <p>Comprehensive user guide for the Sunbeam Mixmaster Combo Pro Hand & Stand Mixer (Model MXP1000WH). Includes safety precautions, detailed features, operating instructions, mixing guide, care and cleaning tips, and a variety of recipes.</p>
	<p><u>Sunbeam Mixmaster Hand Mixer JMP2000BK User Guide</u></p> <p>Comprehensive user guide for the Sunbeam Mixmaster Hand Mixer model JMP2000BK, covering safety precautions, features, usage instructions, mixing tips, speed guide, care, cleaning, and recipes.</p>
	<p><u>Sunbeam Mixmaster Hand Mixer User Manual and Safety Guide</u></p> <p>User manual and safety guide for the Sunbeam Mixmaster Hand Mixer (Models 2524, 2526, 2545). Learn about features, operating instructions, and care for your kitchen appliance.</p>
	<p><u>Sunbeam 2623-33 Stand Mixer Owner's Manual - Features, Care, and Operation</u></p> <p>Comprehensive owner's manual for the Sunbeam 2623-33 Mixmaster stand mixer. Includes detailed information on features, safety instructions, care and cleaning, preparation, operation, and warranty.</p>
	<p><u>Sunbeam Mixmaster Stand Mixer User Manual and Warranty Information</u></p> <p>Comprehensive user manual and warranty details for the Sunbeam Mixmaster Stand Mixer, covering models 2370, 2371, 2395, and 2397. Includes essential safety precautions, operating instructions, maintenance guidelines, helpful hints, and a detailed mixing guide.</p>