

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm FinePix S5700 Digital Camera User Manual

Fujifilm S5700

Fujifilm FinePix S5700 Digital Camera User Manual

Model: S5700

INTRODUCTION

The Fujifilm FinePix S5700 is a versatile digital camera designed for ease of use while offering advanced features. It incorporates an impressive 10x long zoom Fujinon lens and a 7-megapixel sensor, delivering clear images with minimal noise and blur even in challenging conditions. This manual provides comprehensive instructions for setting up, operating, maintaining, and troubleshooting your FinePix S5700 camera.



Image: The Fujifilm FinePix S5700 Digital Camera, showcasing its compact yet robust design with the Fujinon 10x optical zoom lens prominently featured.

WHAT'S IN THE BOX

Upon opening your FinePix S5700 package, please ensure all the following items are present:

- Fujifilm FinePix S5700 Digital Camera Body
- USB Cable
- Shoulder Strap
- CD-ROM (Software and User Manual)

Note: Batteries and memory card are typically sold separately.

SETUP

1. Battery Installation

1. Open the battery compartment cover located on the bottom of the camera.
2. Insert four AA-size batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
3. Close the battery compartment cover securely until it clicks into place.

2. Memory Card Insertion

1. Locate the memory card slot, usually next to the battery compartment.
2. Insert an xD-Picture Card or SD/SDHC memory card (depending on model variant and adapter used) into the slot with the label facing the correct direction until it clicks.
3. To remove, press the card gently until it springs out.

3. Initial Power On

1. Turn the mode dial to any shooting mode (e.g., AUTO).
2. The camera will power on, and the LCD screen will display the shooting information.
3. Set the date and time if prompted.

OPERATING INSTRUCTIONS

1. Basic Photography Modes

- **AUTO Mode:** The camera automatically adjusts settings for optimal exposure. Ideal for beginners.
- **PROGRAM (P) Mode:** The camera sets aperture and shutter speed, but you can adjust other settings like ISO and white balance.
- **MANUAL (M) Mode:** Provides full control over aperture and shutter speed for creative photography.
- **SCENE (SP) Modes:** Select from various scene modes (e.g., Portrait, Landscape, Sport) for specific shooting conditions.

2. Using the Zoom

The FinePix S5700 features a 10x optical zoom lens. Use the zoom lever located around the shutter button to zoom in (T) or out (W) to frame your subject.

3. Flash Usage

The built-in flash can be set to various modes:

- **Auto:** Flash fires automatically when needed.
- **Forced Flash:** Flash fires regardless of lighting conditions.
- **Flash Off:** Flash is disabled.
- **Slow Synchro:** Used for night portraits or scenes to balance subject and background exposure.

4. Reviewing Images

Press the PLAY button to enter playback mode. Use the directional pad to navigate through your photos. Press the DISP/BACK button to change display information or return to shooting mode.

5. Connecting to a Computer

Use the supplied USB cable to connect the camera to your computer. The camera will appear as a removable disk, allowing you to transfer photos and videos.

MAINTENANCE

- **Cleaning the Lens:** Use a soft, lint-free cloth or a lens brush to gently remove dust. For stubborn smudges, use a specialized lens cleaning solution. Avoid touching the lens with your fingers.
- **Cleaning the Camera Body:** Wipe the camera body with a soft, dry cloth. Do not use organic solvents or strong cleaning agents.
- **Battery Care:** Remove batteries when the camera will not be used for an extended period. Store batteries in a cool, dry place.
- **Storage:** Store the camera in a dry, well-ventilated area, away from direct sunlight, high temperatures, and humidity. Use a desiccant if storing in humid environments.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Dead or incorrectly inserted batteries.	Replace batteries with fresh ones, ensuring correct polarity.
Images are blurry.	Camera shake, low light, incorrect focus.	Hold the camera steady, use a tripod, increase ISO sensitivity (up to 1600), or use flash. Ensure autofocus is engaged.
"Memory Card Error" displayed.	Corrupted card, incompatible card, or card not inserted correctly.	Reinsert the card. Try formatting the card (this will erase all data). Try a different, compatible memory card.
Flash does not fire.	Flash mode set to "Off" or insufficient charge.	Change flash mode to "Auto" or "Forced Flash". Allow time for the flash to recharge.
Cannot transfer photos to computer.	Incorrect USB connection, driver issue, or camera not in transfer mode.	Ensure USB cable is securely connected. Check camera settings for USB mode. Try a different USB port or computer.

SPECIFICATIONS

Feature	Detail
Brand	Fujifilm
Model Name	FINEPIX S5700
Photo Sensor Resolution	7 MP
Optical Zoom	10x
Image Stabilization	Digital
Supported File Format	RAW, JPEG
Expanded ISO Maximum	1600
Display Type	LCD
Video Resolution	1080p
Connectivity Technology	USB
Power Source	AA Batteries (not included)
Form Factor	Compact
Autofocus	Yes, Phase Detection
Shutter Speed Description	1/4000th of a second to several seconds

WARRANTY AND SUPPORT

For detailed warranty information and technical support, please refer to the warranty card included with your product or visit the official Fujifilm website. You can also find additional resources and FAQs on the Fujifilm Store page on Amazon:

Visit the Fujifilm Store on Amazon

Please retain your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question