



Manuals.plus /

› **The Box** /

› The Box Closer Together Audio CD User Manual

## The Box Closer Together

# The Box Closer Together Audio CD User Manual


## INTRODUCTION

---

This document serves as a comprehensive guide for the "Closer Together" Audio CD by the band The Box. It provides essential information regarding the proper handling, playback, and maintenance of your Audio CD to ensure optimal listening experience and longevity of the product.

# THE BOX

CLOSER TOGETHER

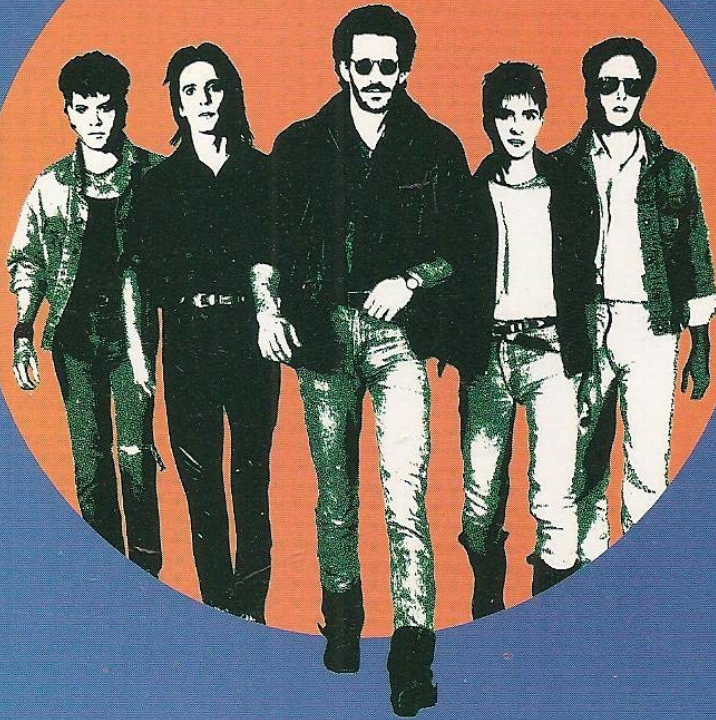

# THE BOX

CLOSER TOGETHER

- 1 CRYING OUT LOUD FOR LOVE
- 2 ORDINARY PEOPLE
- 3 I'M BACK
- 4 WITHOUT LOVE
- 5 UNDER MY SKIN
- 6 CLOSER TOGETHER
- 7 TELL ME A STORY
- 8 FRONT COVER LOVERS
- 9 EMILIE
- \* 10 CLOSER TOGETHER - 54TH STREET MIX

© 1987 Alert Records, a division of Alert Music Inc. Manufactured in Canada by/Fabriqué au Canada par Alert Records, a division of Alert Music Inc., 41 Britain St., Suite 305, Toronto, Ontario, Canada M5A 1R7.

Also available on Record and Cassette/Aussi disponible sur Disque et Cassette.

**Alert**  
Records Cassettes

Image: Album cover for "Closer Together" by The Box. This image displays the front artwork of the Audio CD.

## USAGE INSTRUCTIONS

Follow these steps to play your Audio CD:

- 1. Insert the CD:** Gently place the "Closer Together" Audio CD into the disc tray of your CD player, car stereo, or computer's optical drive with the label side facing upwards.
- 2. Close the Tray:** Close the disc tray. Most players will automatically detect the CD and begin playback.
- 3. Select Track (Optional):** If the CD does not start automatically, press the 'Play' button on your device. Use the 'Next Track' or 'Previous Track' buttons to navigate between songs.
- 4. Adjust Volume:** Use your device's volume controls to set the desired listening level.
- 5. Eject the CD:** When finished, press the 'Eject' button on your device to safely remove the CD.

## CARE AND HANDLING

Proper care ensures the longevity and optimal performance of your Audio CD:

- Hold by Edges:** Always handle the CD by its edges or the center hole to avoid touching the playing surface.
- Keep Clean:** If the CD becomes dirty, gently wipe it with a soft, lint-free cloth in a straight line from the center to the outer edge. Do not wipe in circular motions. Use a specialized CD cleaning solution if necessary.
- Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity.
- Avoid Scratches:** Do not place the CD on rough surfaces or expose it to sharp objects that could scratch the playing surface.

## TROUBLESHOOTING

Refer to the following table for common issues and their solutions:

Problem	Possible Cause	Solution
CD does not play or is not recognized.	CD is dirty or scratched; CD player lens is dirty; CD is inserted incorrectly.	Clean the CD carefully. Ensure the CD is inserted label-side up. Try playing another CD to check if the player is functioning correctly.
Audio skips or stutters during playback.	CD surface is dirty, scratched, or damaged; CD player is vibrating or unstable.	Clean the CD. Ensure the CD player is on a stable surface. Inspect the CD for deep scratches; severely damaged CDs may not be repairable.
No sound output.	Volume is too low or muted; audio cables are disconnected; incorrect input selected on receiver.	Check volume levels and mute settings. Verify all audio connections. Ensure the correct input source is selected on your audio system.

## SPECIFICATIONS

- **Title:** Closer Together
- **Artist:** The Box
- **Format:** Audio CD
- **Label:** Unidisc Music
- **ASIN:** B000RERWDW
- **Number of Discs:** 1
- **Original Release Date:** 2008
- **Language:** English
- **Package Dimensions:** 5.63 x 4.88 x 0.31 inches
- **Item Weight:** 3.84 ounces

## WARRANTY AND SUPPORT

---

For information regarding product warranty or support, please refer to the policies of the retailer from which the Audio CD was purchased or contact the record label, Unidisc Music, directly. Specific warranty details for music CDs are typically handled at the point of sale or by the distributor.