

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Premier](#) /

› [Premier SCK3XRBP 24-inch Electronic Spark Gas Range User Manual](#)

Premier SCK3XRB

Premier SCK3XRBP 24-inch Electronic Spark Gas Range User Manual

Model: SCK3XRB

PRODUCT OVERVIEW

The Premier SCK3XRBP is a 24-inch electronic spark gas range designed for residential use. It features a 3 cubic foot oven capacity, four cooktop burners, a lift-up top, and a 1.5-inch porcelain vent rail backguard. The oven includes a windowed door and interior light for easy viewing of your cooking.



Image: Front view of the Premier SCK3XRBP 24-inch black gas range. The oven door has a window, and an interior light illuminates a baking pan inside. The cooktop features four burners and control knobs are located on the front panel.

IMPORTANT SAFETY INFORMATION

Read all instructions carefully before using this appliance to reduce the risk of fire, electric shock, or injury to persons. Failure to follow these instructions can result in property damage or personal injury.

- Ensure proper ventilation when operating the gas range.
- Do not store flammable materials in or near the appliance.

- Keep children and pets away from the appliance during operation.
- Always use dry pot holders when removing hot items from the oven or cooktop.
- Do not use water on grease fires. Smother fire or use a dry chemical or foam-type extinguisher.
- Never use the appliance for space heating.

For detailed safety guidelines, consult a qualified installer or service technician and refer to local building codes.

SETUP AND INSTALLATION

This freestanding gas range requires proper installation by a qualified technician to ensure safe and efficient operation. Incorrect installation can void the warranty and create hazards.

Unpacking

- Carefully remove all packaging materials from the range.
- Inspect the appliance for any shipping damage. Report any damage immediately to the carrier and retailer.

Location Requirements

- Ensure the installation area has adequate clearance from combustible surfaces.
- The range must be installed on a level surface to ensure proper operation and stability.
- Provide proper gas and electrical connections as per local codes and national standards.

Dimensions and Weight

- Product Dimensions (Length x Width x Height): 26 x 24 x 37.5 inches
- Item Weight: 145 pounds

Refer to the comprehensive installation guide provided with the appliance for detailed instructions on gas line connection, electrical hookup, and anti-tip bracket installation. The anti-tip bracket is a critical safety device and must be installed.

OPERATING INSTRUCTIONS

Cooktop Burners

The cooktop features four burners with electronic ignition for convenient lighting.

1. Place cookware centrally on the burner grate.
2. Push in and turn the corresponding control knob to the "LITE" position. You will hear a clicking sound as the electronic igniter sparks.
3. Once the burner is lit, release the knob and adjust the flame size by turning the knob between "HI" (high flame) and "LOW" (low flame) settings.
4. To turn off, turn the knob clockwise to the "OFF" position.

Oven Operation

The oven has a 3 cubic foot capacity and features a windowed door with an interior light for easy monitoring of your baking.

1. Ensure oven racks are in the desired position for your cooking needs.
2. Turn the oven control knob to the desired temperature.
3. The oven will begin to preheat. The indicator light will typically turn off when the set temperature is reached, signaling the oven is ready.
4. To view contents during cooking, use the interior oven light by pressing the dedicated light switch (if available) or by opening the oven door briefly.
5. To turn off, turn the oven control knob to the "OFF" position.

Broiler Drawer

The range includes a broiler drawer located beneath the oven, suitable for grilling and browning foods.

1. Place food on the broiler pan.
2. Slide the broiler pan into the broiler drawer.
3. Turn the broiler control knob to the "BROIL" setting.
4. Monitor food closely to prevent burning, as broiling is a high-heat cooking method.
5. To turn off, turn the knob to the "OFF" position.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your gas range.

Cooktop Cleaning

- Allow burners, grates, and chrome heat reflector trays to cool completely before cleaning.
- Remove grates and burner caps. Wash with warm, soapy water. Rinse thoroughly and dry before replacing.
- Wipe the porcelain cooktop surface with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner designed for porcelain surfaces.

Oven Cleaning

- For light spills, wipe with a damp cloth when the oven is cool.
- For heavier soil, use an oven cleaner according to product instructions. Ensure adequate ventilation during and after use.
- The oven door glass can be cleaned with a glass cleaner. Avoid harsh abrasives that may scratch the surface.

General Care

- Regularly check gas connections for leaks (use soapy water, not a flame). If you suspect a gas leak, turn off the gas supply and contact a qualified technician immediately.
- Keep the area around the range clear of debris and combustible materials.

TROUBLESHOOTING

This section provides solutions to common issues you may encounter. For problems not listed, or if the issue persists, contact customer support or a qualified service technician.

Problem	Possible Cause	Solution
Burner not igniting	No gas supply; Igniter dirty/wet; Power outage; Loose connection	Check that the gas supply valve is open; Clean igniter with a dry brush; Check household circuit breaker; Ensure power cord is securely plugged in
Oven not heating	Gas supply off; Incorrect temperature setting; Thermostat issue	Check that the gas supply valve is open; Verify temperature setting; If problem persists, contact service technician
Uneven baking	Oven not fully preheated; Improper rack position; Worn thermostat; Overcrowding oven	Allow full preheat time; Adjust rack position for optimal air circulation; Avoid overcrowding; If problem persists, contact service technician
Gas odor	Minor leak; Unlit burner; Major leak	Ensure all burners are off and lit; Ventilate area; If odor persists or is strong, immediately turn off gas supply, evacuate, and call gas company/fire department

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Premier
Model Number	SCK3XRB
Dimensions (L x W x H)	26 x 24 x 37.5 inches
Item Weight	145 pounds
Color	Black
Material	Glass (Oven Door)
Ignition Type	Electronic Spark
Oven Capacity	3 cu. ft.
Cooktop Burners	Four
Controls Type	Knob
Form Factor	Freestanding
Special Features	Lift Up Top, 1.5" Porcelain Vent Rail Backguard, Windowed Oven Door, Interior Oven Light, Chrome Heat Reflector Trays

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Premier website. Specific warranty terms and conditions may vary by region and purchase date.

No official product videos from the seller were provided for this model in the available data.

Premier SCK3XRBP User Manual. All rights reserved.