

[Manuals.plus](#) /

› [KORG](#) /

› Korg PX4D Pandora Personal Multi Effects Processor User Manual

KORG PX4D

Korg PX4D Pandora Personal Multi Effects Processor User Manual

Model: PX4D

INTRODUCTION

The Korg PX4D Pandora Personal Multi Effects Processor is a compact and versatile unit designed for guitarists and bassists. It offers a wide array of high-quality effects, amplifier models, and cabinet simulations, making it suitable for practice, recording, and live performance. This manual provides essential information for setting up, operating, and maintaining your PX4D unit.

SAFETY INFORMATION

- Do not expose the unit to rain or moisture.
- Avoid placing the unit near heat sources or in direct sunlight.
- Use only the specified power adapter or batteries.
- Do not attempt to disassemble or modify the unit. Refer all servicing to qualified personnel.
- Keep out of reach of small children.

PRODUCT OVERVIEW

The PX4D combines guitar and bass effects into a single, pocket-sized unit. It features a comprehensive range of sounds, including vintage amplifier models, various cabinet types, and a diverse selection of effects. The unit is designed for intuitive editing with its knob-based interface.

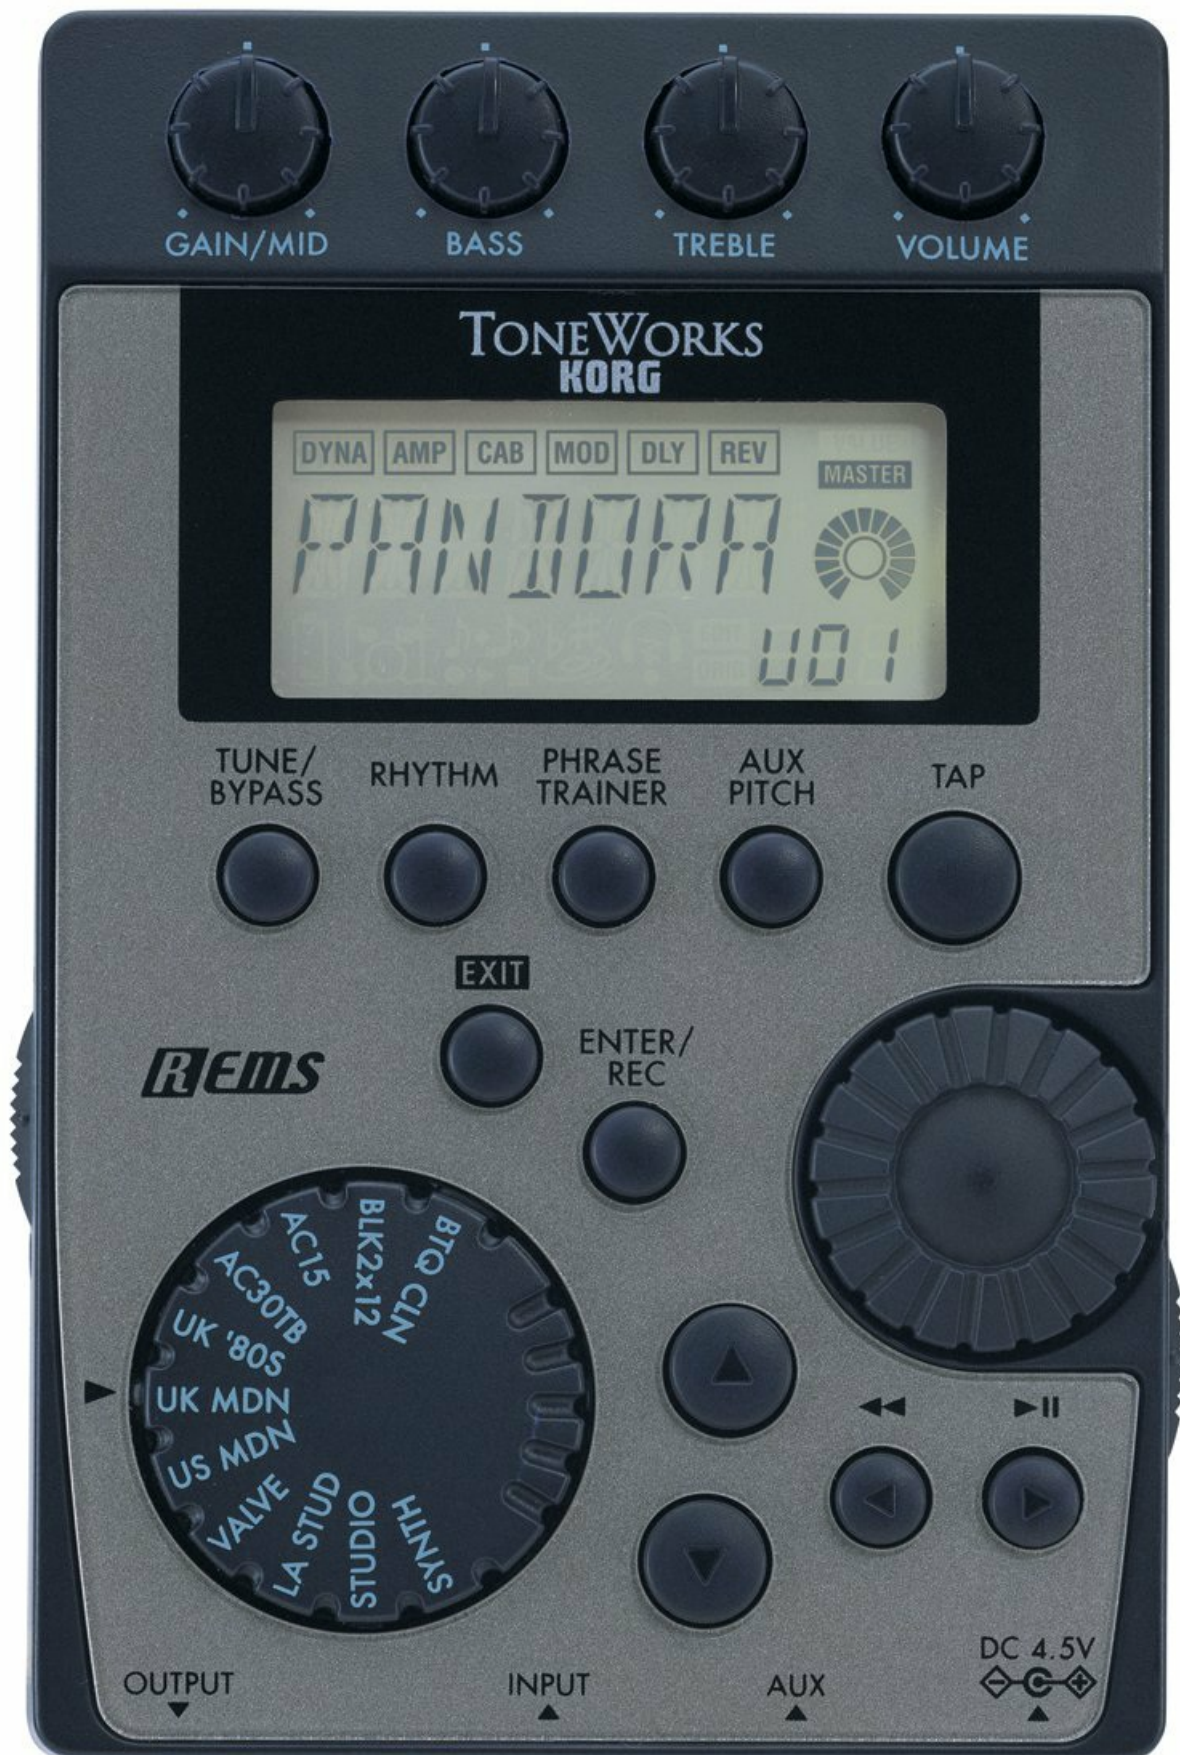


Figure 1: Front view of the Korg PX4D unit, showing the display, control knobs, and buttons.

Key Features:

- **REMS Modeling Effects:** High-quality modeling technology for realistic sounds.
- **Extensive Effect Types:** A total of 158 effect types, including 25 amp types and 23 cabinet effects.
- **Program Memory:** 200 programs (100 preset, 100 user-programmable).
- **Simultaneous Effects:** Up to seven effects can be used simultaneously.
- **Intuitive Interface:** Knob-based controls for quick and easy editing.
- **Built-in Tuner and Drum Machine:** Essential tools for practice.

SETUP

1. Powering the Unit

The PX4D can be powered by either batteries or an optional AC adapter (9V). Ensure the power source is correctly connected before use.

- **Battery Installation:** Open the battery compartment on the rear of the unit and insert the required batteries, observing polarity.
- **AC Adapter Connection:** Connect the AC adapter to the DC IN jack on the unit and then to a power outlet.

2. Connecting Your Instrument and Output Devices

1. Connect your guitar or bass to the INPUT jack on the PX4D.
2. Connect headphones to the PHONES jack for private practice, or connect the LINE OUT jack to an amplifier, mixer, or recording device.
3. Adjust the volume levels on your instrument, the PX4D, and your output device to a comfortable listening level.

OPERATING INSTRUCTIONS

Basic Operation

- **Power On/Off:** Press and hold the POWER button to turn the unit on or off.
- **Program Selection:** Use the PROGRAM dial or buttons to navigate through the 200 available programs (100 preset, 100 user).
- **Effect Editing:** The PX4D features a knob-based interface for quick parameter adjustments. Select an effect module and use the corresponding knobs to modify its settings.
- **Saving Programs:** After editing a program, follow the on-screen prompts to save your changes to a user program slot.

Advanced Features

- **Amp and Cabinet Modeling:** Experiment with the 25 amp types and 23 cabinet effects to create diverse tones. You can combine guitar amps with bass cabinets for unique sounds.
- **Special Effects:** Explore effects such as pickup modeling (single-coil to humbucker or vice versa), guitar/bass synth, intelligent pitch shifter for harmonies, talk effect, slow attack for violin-like swells, feedback simulation, and rotary speaker effects.
- **Tuner:** Activate the built-in tuner for accurate instrument tuning.
- **Rhythm Machine:** Utilize the integrated drum machine with various rhythm patterns and adjustable tempos for practice.

MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, remove batteries to prevent leakage. Store the unit in a cool, dry place away from direct sunlight.
- **Battery Replacement:** Replace batteries when the low battery indicator appears or when the unit's performance degrades.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Dead batteries or AC adapter not connected/faulty.	Replace batteries or check AC adapter connection and functionality.
No sound output	Incorrect cable connections, low volume, or incorrect program selected.	Verify all cable connections, increase volume on PX4D and output device, select a different program.
Buzzing or unwanted noise	Ground loop, faulty cable, or high gain settings.	Try a different power outlet, replace cables, or reduce gain/volume settings.
Display frozen or unresponsive	Software issue or temporary glitch.	Turn the unit off and on again. If the problem persists, perform a factory reset (refer to the full manual for specific instructions). If still unresolved, contact Korg support.

SPECIFICATIONS

- **Model:** PX4D
- **Effect Types:** 158 (including amp and cabinet models)
- **Programs:** 200 (100 preset, 100 user)
- **Simultaneous Effects:** Up to 7
- **Dimensions (L x W x H):** 5.5 x 2.25 x 4 inches (approximately)
- **Weight:** 5.3 ounces (approximately)
- **Power:** 9V DC (AC adapter) or batteries
- **Signal Format:** Analog
- **Color:** Black, Grey

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Korg website or contact your local Korg distributor. Keep your purchase receipt as proof of purchase.

Korg Official Website: www.korg.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B000S5MV3Q>

More documents and user manuals: <https://manuals.plus/>