

Proctor Silex 32700

Proctor Silex 32700 Portable Roaster Oven

Instruction Manual

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your Proctor Silex 32700 Portable Roaster Oven. Please read all instructions thoroughly before first use and retain this manual for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or roaster oven in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF," then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Proctor Silex 32700 Portable Roaster Oven is designed for versatile cooking, including roasting, baking, and slow cooking. It features a removable cooking pan for easy cleaning and serving.



Figure 1: Removable inner cooking pan for easy handling and cleaning.



Figure 2: The roaster oven lid, designed to retain heat and moisture during cooking.

Components:

- Roaster Oven Base with Temperature Control Dial
- Removable Enamel-Coated Cooking Pan

- Lid with Handle

SETUP

Before First Use:

1. Unpack the roaster oven and all its components. Remove any packaging materials, labels, or stickers.
2. Wash the removable cooking pan and lid in warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the exterior of the roaster oven base with a damp cloth. Do not immerse the base in water.
4. Place the roaster oven on a stable, heat-resistant surface, away from walls or cabinets to allow for proper ventilation.

OPERATING INSTRUCTIONS

General Operation:

1. Insert the clean, dry removable cooking pan into the roaster oven base.
2. Place food into the cooking pan.
3. Cover the roaster oven with the lid.
4. Plug the power cord into a standard electrical outlet.
5. Turn the temperature control dial to the desired setting. The dial ranges from 90°F to 450°F.
6. A red indicator light will illuminate when the roaster oven is heating. It will cycle on and off to maintain the set temperature.
7. When cooking is complete, turn the temperature control dial to "OFF" and unplug the roaster oven from the outlet.
8. Allow the roaster oven to cool completely before cleaning.

Cooking Applications:

This roaster oven is suitable for a variety of cooking tasks:

- **Roasting:** Ideal for meats such as chicken, turkey breasts, and roasts. The enclosed environment helps keep food moist.
- **Baking:** Can be used for casseroles, baked potatoes, and other dishes typically prepared in a conventional oven.
- **Slow Cooking:** The lower temperature settings are perfect for slow-cooked stews, soups, and chili.



Figure 3: The roaster oven is suitable for preparing soups and stews.



Figure 4: Use the roaster oven to bake potatoes evenly.



Figure 5: The roaster oven is effective for roasting meats and vegetables.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and performance of your roaster oven.

1. Always unplug the roaster oven and allow it to cool completely before cleaning.
2. Remove the cooking pan and lid. Wash them in warm, soapy water using a non-abrasive sponge or cloth. They are also dishwasher safe.
3. For stubborn food residue, soak the cooking pan in warm, soapy water for a period before cleaning.
4. Wipe the exterior of the roaster oven base with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
5. Never immerse the roaster oven base, cord, or plug in water or any other liquid.
6. Ensure all parts are thoroughly dry before storing or next use.

TROUBLESHOOTING

If you encounter issues with your roaster oven, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Roaster oven does not turn on.	Not plugged in; power outlet malfunction; temperature dial set to OFF.	Ensure plug is securely in outlet; check circuit breaker; turn temperature dial to a desired setting.
Food not cooking evenly.	Lid not properly sealed; incorrect temperature setting; overcrowding.	Ensure lid is seated correctly; verify temperature setting; avoid overfilling the pan.
Smoke or unusual odor during first use.	Residual manufacturing oils burning off.	This is normal for first use. Ensure good ventilation. If smoke persists, discontinue use and contact support.

SPECIFICATIONS

- **Model Name:** 32700
- **Brand:** Proctor Silex
- **Capacity:** 6.5 Quarts
- **Color:** White
- **Material:** Metal (Enamel-coated cooking vessel)
- **Control Type:** Knob
- **Power Source:** Electric
- **Temperature Range:** 90°F to 450°F (4.5E+2 Degrees Fahrenheit)
- **Item Weight:** Approximately 9 Pounds
- **Dimensions:** Approximately 19 by 14 by 8 inches

WARRANTY AND SUPPORT

This Proctor Silex 32700 Portable Roaster Oven comes with a**1-year limited warranty**. For warranty claims, technical support, or replacement parts, please refer to the contact information provided with your purchase documentation or visit the official Proctor Silex website.
Please retain your proof of purchase for warranty service.

© 2023 Proctor Silex. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question