



[Manuals.plus](#) /

> [Timex](#) /

> Timex Classic Digital 34mm Watch Instruction Manual (Model T786779J)

Timex T786779J

Timex Classic Digital 34mm Watch Instruction Manual

Model: T786779J

Brand: Timex

INTRODUCTION

Welcome to your Timex Classic Digital 34mm Watch. This timepiece combines a timeless retro design with essential modern features, including a chronograph, alarm, and the signature INDIGLO night-light. This manual will guide you through the setup, operation, and care of your watch to ensure optimal performance and longevity.




Front view of the Timex Classic Digital 34mm Watch, showcasing its gold-tone finish and digital display.

SETUP

Before using your watch, it is important to set the correct time, date, and configure any desired features.

1. Setting Time and Date

1. Press the **SET** button (top left) once to enter time setting mode. The seconds will begin to flash.
2. Press the **MODE** button (bottom left) to cycle through the settings: seconds, hours, minutes, month, date, day of the week.
3. Use the **START/STOP** button (top right) to adjust the flashing value.
4. Once all settings are correct, press the **SET** button again to exit setting mode.

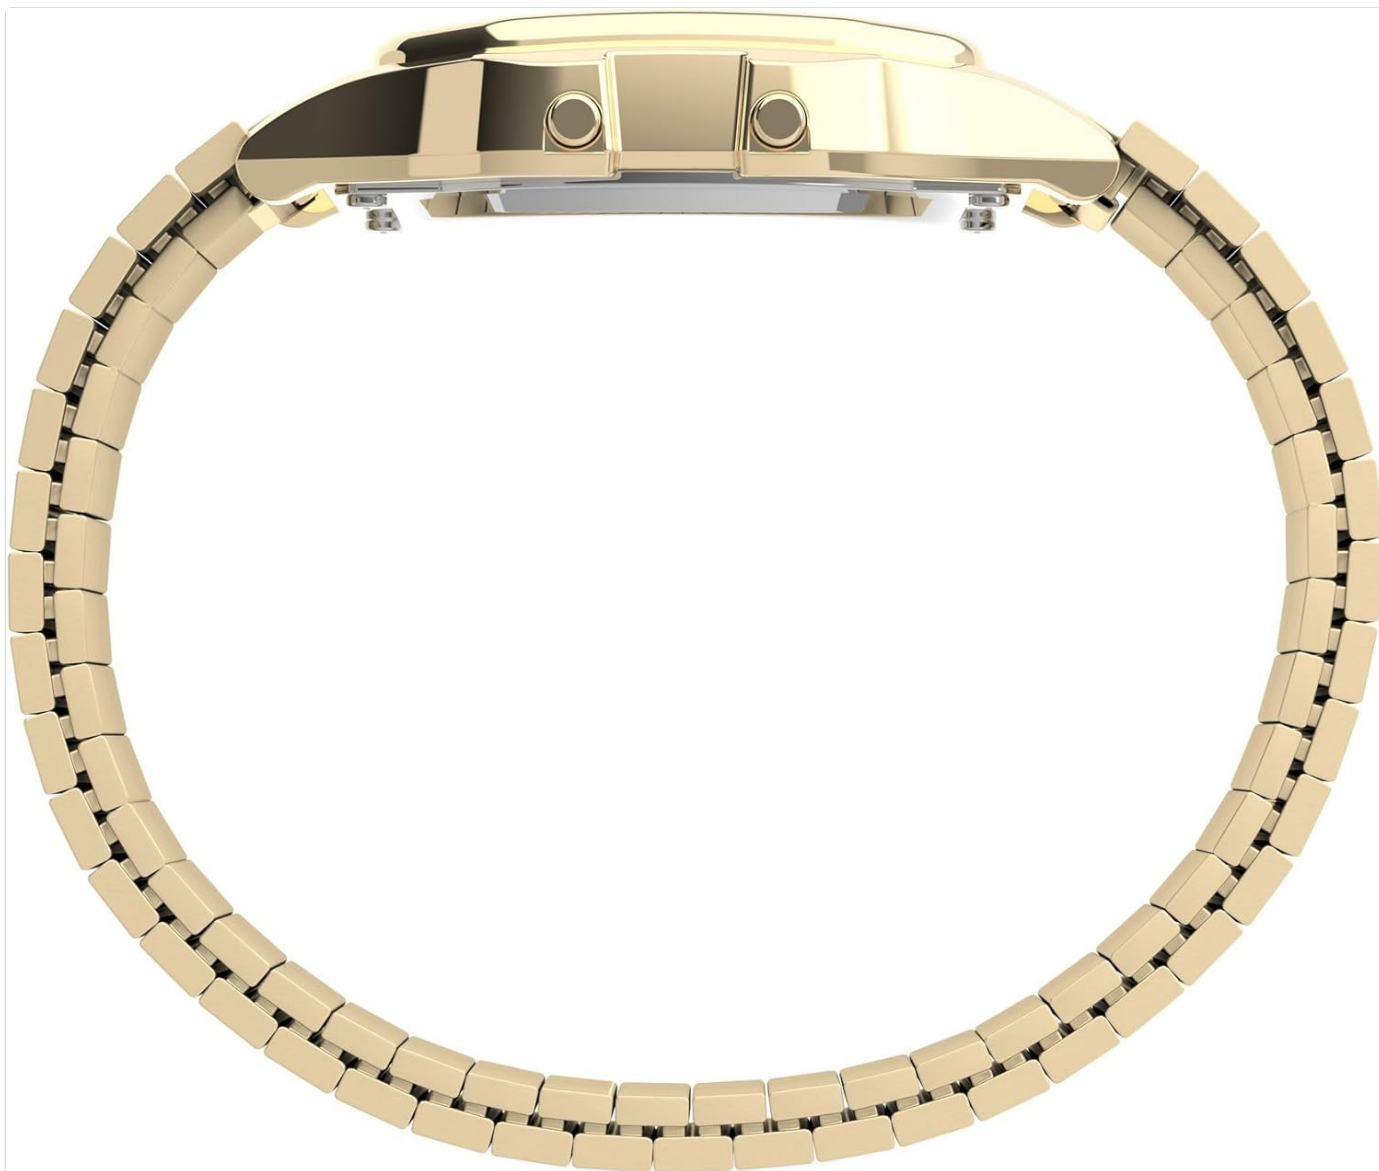

Side view of the watch, highlighting the control buttons for setting and operation.

2. Setting the Alarm

1. From the normal time display, press the **MODE** button until "ALARM" appears on the display.
2. Press the **SET** button. The alarm hour will flash.
3. Use the **START/STOP** button to adjust the alarm hour.
4. Press **MODE** to select minutes, then use **START/STOP** to adjust.
5. Press **SET** to confirm and exit alarm setting mode.
6. To activate/deactivate the alarm, press the **START/STOP** button while in alarm mode. An alarm icon will appear when active.

3. Using 24-Hour (Military) Time Mode

Your watch supports both 12-hour (AM/PM) and 24-hour (military) time formats. To switch between modes, enter time setting mode (as described in "Setting Time and Date"), and when the hour is flashing, press the **START/STOP** button to toggle between 12-hour and 24-hour display.

OPERATING INSTRUCTIONS

1. Using the INDIGLO Night-Light

The INDIGLO night-light illuminates the watch display for easy viewing in low-light conditions. To activate, press and hold the **INDIGLO** button (bottom right). The light will remain on as long as the button is pressed.

2. Using the Chronograph (Stopwatch)

1. From the normal time display, press the **MODE** button until "CHRONO" or "STOPWATCH" appears.
2. Press the **START/STOP** button to start the chronograph.
3. To record a split time, press the **SPLIT/RESET** button (bottom right) while the chronograph is running. The display will show the split time, while the chronograph continues to run in the background. Press **SPLIT/RESET** again to return to the running time.
4. Press **START/STOP** to pause the chronograph.
5. To reset the chronograph to zero, press **SPLIT/RESET** while the chronograph is paused.

3. Water Resistance

Your Timex watch is water resistant to 30 meters (100 feet). This means it is suitable for splashes, rain, or brief immersion in water. It is **not recommended** for swimming, diving, or showering, as prolonged water exposure or high-pressure water jets can compromise the water resistance seals.

MAINTENANCE

1. Battery Replacement

The watch uses one Lithium Metal battery. When the display becomes dim or the functions stop working, it's time to replace the battery. Due to the specialized tools and procedures required to maintain water resistance, it is highly recommended to have the battery replaced by an authorized Timex service center or a professional watch repairer.



Rear view of the watch, showing the stainless steel back plate.

2. Cleaning Your Watch

To clean your watch, wipe it gently with a soft, damp cloth. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or seals.

3. Band Care

The expansion band is designed for comfort and durability. To clean the band, you can gently stretch it and wipe between the links with a soft, damp cloth. Ensure it is completely dry before wearing. Avoid excessive stretching or bending that could damage the links.

TROUBLESHOOTING

- **Display is Blank or Faint:** This usually indicates a low battery. Refer to the "Battery Replacement" section for guidance.
- **Buttons are Unresponsive:** Try pressing the buttons firmly. If the issue persists, a battery replacement might be needed, or contact customer support.
- **Time is Incorrect:** Re-set the time and date as described in the "Setting Time and Date" section. Ensure the 12/24-hour mode is set correctly.

SPECIFICATIONS

Model Number	T786779J
Case Diameter	34mm (Resin)
Band Width	18mm (Stainless Steel Expansion Band)
Movement Type	Quartz
Display Type	Digital (Green)
Water Resistance	30 Meters (100 Feet)
Special Features	INDIGLO Night-Light, Chronograph, Alarm, Month/Day/Date Calendar, 24-Hour Mode
Battery Type	1 Lithium Metal (included)
Item Weight	1.6 ounces

PRODUCT VIDEOS

Timex Sizing Chart

Your browser does not support the video tag.

This video provides a visual guide to Timex watch sizing, demonstrating how different case sizes appear on various wrist sizes.

Timex Men's T78677 Classic Digital Gold-Tone Stainless Steel Expansion Band Watch Overview

Your browser does not support the video tag.

An official overview video showcasing the features and design of the Timex Classic Digital Gold-Tone Stainless Steel Expansion Band Watch.

WARRANTY AND SUPPORT

Warranty Information

Your Timex watch is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

Customer Support

For further assistance, technical support, or service inquiries, please visit the official Timex website or contact their customer service department. Contact information can typically be found on the Timex website or in the packaging materials.

