

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Karlsson](#) /

› [Karlsson Vintage Wall Clock, White - Instruction Manual](#)

Karlsson KA4402

Karlsson Vintage Wall Clock, White - Instruction Manual

Model: KA4402

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Karlsson Vintage Wall Clock. Please read these instructions carefully before use to ensure proper functioning and longevity of your product.

PRODUCT OVERVIEW

The Karlsson Vintage Wall Clock is a modern decorative timepiece designed for indoor use. It features a classic design with chrome numbers and brushed metal hands, encased in a durable glass finish. Its minimalist aesthetic complements various interior styles.



Image: The Karlsson Vintage Wall Clock in white, featuring large, raised chrome numbers and sleek metal hands, mounted on a light blue wall.

SETUP

1. Unpacking

Carefully remove all components from the packaging. Ensure all parts are present: the clock unit, and the necessary mounting hardware (screws and drywall anchors).

2. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Insert one (1) AA battery, ensuring the polarity (+/-) matches the indicators inside the compartment. **Note:** The battery is not included with the clock.
3. **Recommendation:** Use a fresh, high-quality AA battery for optimal performance and accurate timekeeping.

3. Wall Mounting

1. Select a suitable location on a wall for the clock. Ensure the surface is clean and capable of securely supporting the clock's weight (approximately 2.55 pounds or 1.16 kg).
2. Use the included screws and drywall anchors for secure installation. Mark the desired mounting point on the wall.
3. Drill a pilot hole if necessary, insert the drywall anchor flush with the wall surface, and then screw in the screw, leaving a small portion exposed for the clock's hanging mechanism.
4. Carefully hang the clock onto the exposed screw head. Ensure it is stable and level before releasing.



Image: A close-up view of the Karlsson Vintage Wall Clock, highlighting its glass finish and the brushed metal hands, suitable for illustrating mounting points.

OPERATING INSTRUCTIONS

1. Setting the Time

1. Locate the time-setting knob on the back of the clock, typically a small wheel or dial.
2. Gently turn the knob to move the clock hands clockwise until the correct time is displayed.
3. **Caution:** Do not attempt to move the clock hands directly, as this may damage the internal mechanism.

2. Silent Operation

This clock features a silent movement mechanism, designed to operate without an audible ticking sound, providing a quiet environment suitable for bedrooms, offices, and living areas.

MAINTENANCE

1. Cleaning

1. To clean the clock face and frame, use a soft, dry, lint-free cloth.
2. For stubborn marks on the glass surface, a slightly damp cloth with a mild glass cleaner can be used. Avoid direct contact with the clock mechanism or frame material.
3. **Warning:** Do not use abrasive cleaners, harsh chemicals, or solvents, as these can damage the clock's finish.

2. Battery Replacement

1. When the clock begins to lose time or stops functioning, it indicates that the battery needs to be replaced.
2. Follow the battery installation steps (Section 2.2) to replace the AA battery.
3. Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Clock Not Running

- Check if the battery is inserted correctly with the positive (+) and negative (-) terminals aligned as indicated.
- Replace the battery with a new, fresh AA battery.
- Ensure the battery compartment contacts are clean and free of corrosion. Gently clean them if necessary.

Incorrect Time Display

- Reset the time using the time-setting knob on the back of the clock.
- If the clock consistently loses or gains time, replace the battery. A weak battery can affect accuracy.

Clock Falls from Wall

- Ensure the mounting hardware is securely installed and appropriate for the wall material.
- Verify the clock is properly seated on the mounting screw or hook.

SPECIFICATIONS

Feature	Detail
Model Number	KA4402
Brand	Karlsson
Color	White
Display Type	Analog
Product Dimensions	14"W x 14"H (35 cm diameter)
Item Weight	2.55 pounds (1.16 kg)
Power Source	Battery Powered
Battery Type	1 x AA (not included)
Material	Glass (face), Metal (frame)
Special Feature	Silent Clock
Mounting Type	Wall Mount
Indoor/Outdoor Usage	Indoor

WARRANTY INFORMATION

For detailed warranty information regarding your Karlsson Vintage Wall Clock, please refer to the official Karlsson website or contact their customer support directly. It is recommended to keep your purchase receipt as proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you encounter any issues not covered in this manual, require further assistance, or have questions about your Karlsson Vintage Wall Clock, please visit the official Karlsson website for support resources or contact their customer service department.

You can also find more information and contact details through the official Karlsson Store on Amazon [Karlsson Store on Amazon](#)