

Rowenta IS1430

Rowenta IS1430 Pro Compact Garment Steamer User Manual

Model: IS1430

INTRODUCTION

The Rowenta IS1430 Pro Compact Garment Steamer is designed for efficient and easy garment care. This 1400-watt steamer heats up in approximately 2.5 minutes and features a large 32 oz water reservoir for continuous steam output. The steam hose connector includes a 360-degree swivel base, and the wide steam head ensures effective steam distribution. The cool-touch fabric hose wraps around the base for convenient storage.

Key features include:

- Compact 1400-watt steamer with wide steam head heats up in 2 minutes.
- 33-ounce water tank can be refilled during use for continuous steam.
- Fabric hose with 360-degree swivel base for steam from any angle.
- Includes Upholstery brush, lint pad, fabric brush, crease attachment, and door hook.
- Measures approximately 15 by 10-1/2 by 9-1/2 inches.

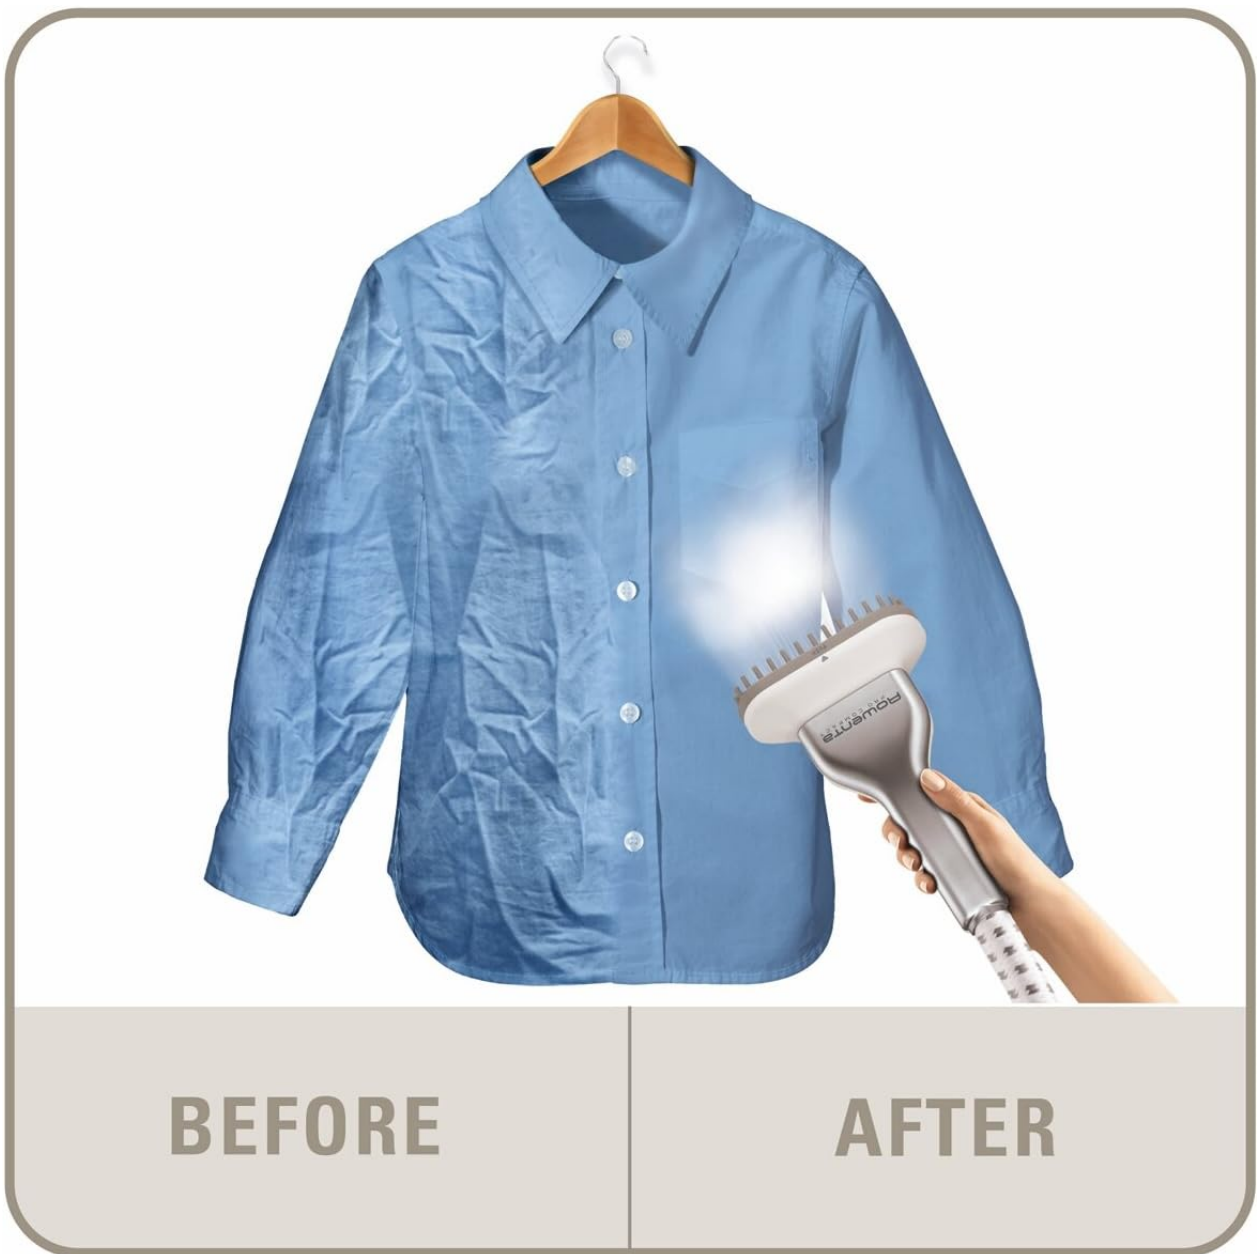


Image: A blue shirt, half wrinkled (Before) and half smooth (After) after being steamed with the Rowenta Pro Compact Steamer.

SETUP

1. **Unpack the Steamer:** Carefully remove all components from the packaging.
2. **Position the Steamer:** Place the steamer unit on a flat, stable surface, preferably on the floor, to allow for proper hose drainage.
3. **Fill the Water Reservoir:** Remove the water tank and fill it with clean, distilled water up to the 'MAX' line. The reservoir has a capacity of 32-33 ounces. Using distilled water helps prevent mineral buildup.
4. **Connect the Hose:** Ensure the steam hose is securely connected to the main unit.
5. **Plug In:** Insert the power cord into a suitable electrical outlet.
6. **Heat Up:** Turn on the steamer. The unit will heat up in approximately 2 to 2.5 minutes.

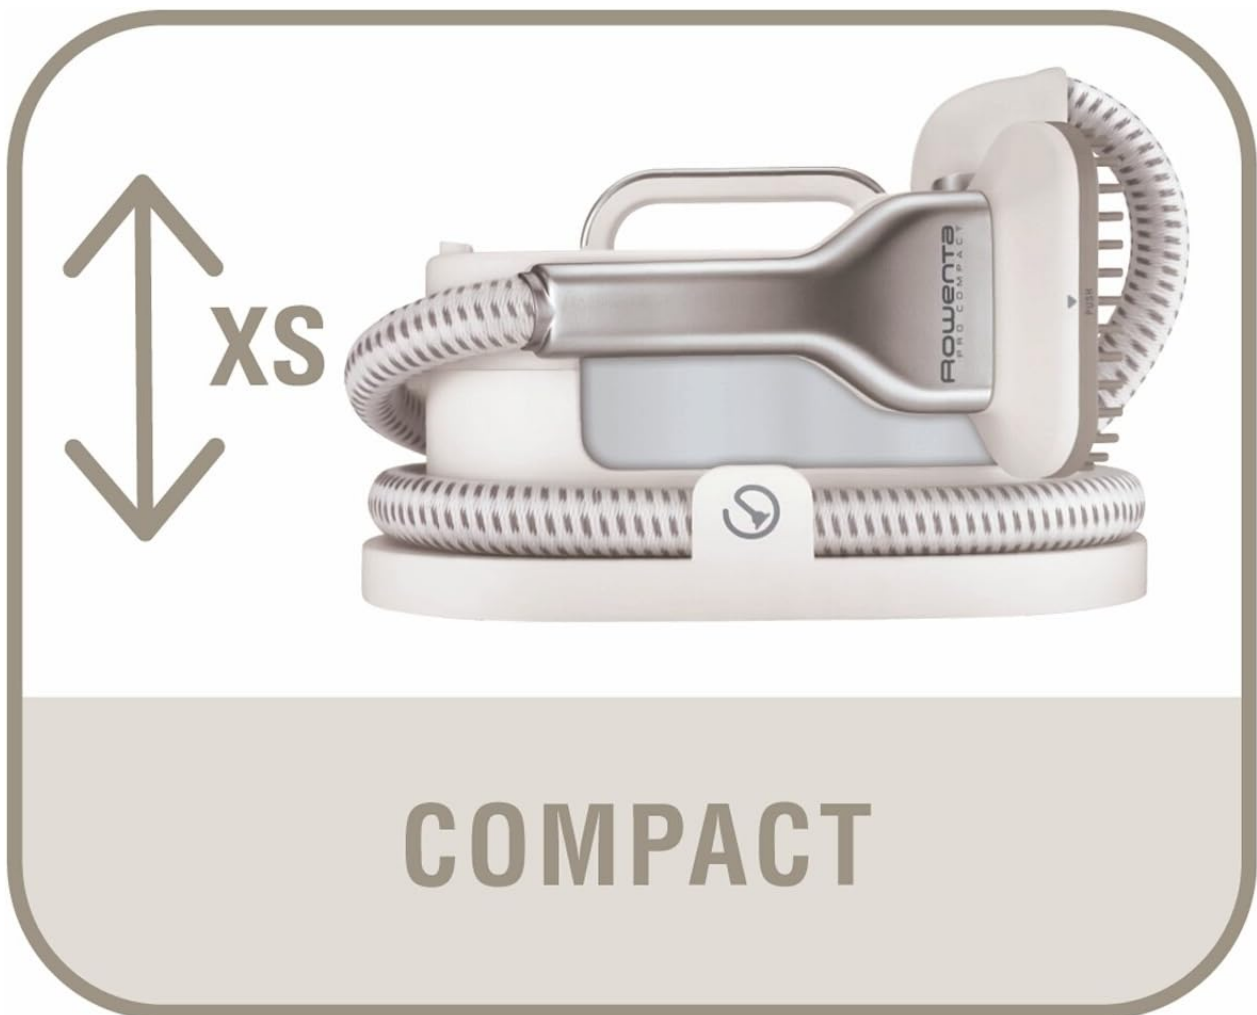


Image: The Rowenta Pro Compact Steamer showcasing its compact design with the hose neatly wrapped around the base.

OPERATING INSTRUCTIONS

- 1. Prepare Garment:** Hang the garment you wish to steam on a hanger. The included door hook can be used to hang clothes on any door for vertical steaming.
- 2. Attach Accessories (Optional):** Select the appropriate accessory for your fabric type or task and attach it to the steam head.
 - **Upholstery Brush:** Aids steam penetration into difficult, heavy fabrics.
 - **Lint Pad:** Removes hair, lint, and animal fur.
 - **Fabric Brush:** Opens weaves of fabrics for better steam penetration.
 - **Crease Attachment:** Helps create sharp creases and remove stubborn wrinkles.
- 3. Begin Steaming:** Once the steamer is ready (indicated by steam output), hold the steam head a few inches from the fabric. Gently glide the steam head over the garment from top to bottom. For best results, pull the fabric taut with your free hand.
- 4. Continuous Steam:** The large water reservoir allows for continuous steaming. If the water level gets low, you can refill it during use without waiting for the unit to cool down.
- 5. Hose Management:** Periodically straighten the hose vertically to allow any condensed water to drain back into the main unit, preventing sputtering.
- 6. Safety:** Keep hands and face away from the steam head during operation. The steam is hot and can cause burns.



Image: A user demonstrating steaming a blue shirt hung on a door using the steamer.



Image: A user demonstrating steaming brown pants hung on a door using the steamer.



Image: A user demonstrating steaming white curtains using the steamer.



Image: A close-up view of the steamer head, highlighting its continuous steam output.

MAINTENANCE

1. **Empty Water Tank:** After each use, or at least regularly, ensure the water tank is emptied. This prevents mineral buildup and rust, especially if using tap water. The unit has a convenient drain hole for this purpose.
2. **Cleaning:** Wipe the exterior of the steamer with a damp cloth. Do not use abrasive cleaners.
3. **Storage:** Allow the steamer to cool completely before storing. Wrap the fabric hose around the base for compact storage. Store in a dry place.

TROUBLESHOOTING

- **No Steam or Low Steam:**
 - Check if the water tank is filled.
 - Ensure the unit is properly plugged in and powered on.
 - Allow sufficient time for the steamer to heat up (approx. 2-2.5 minutes).
- **Sputtering or Water Droplets:**
 - This can occur if water condenses in the hose. Lift the hose straight up periodically during use to allow accumulated water to drain back into the main unit.
 - Ensure the main unit is placed on the floor, below the garment being steamed, to facilitate gravity

drainage.

- **Plastic Odor:**

- A strong plastic odor may be present during initial uses due to manufacturing residues. This typically dissipates over time with continued use.

SPECIFICATIONS

Feature	Detail
Brand	Rowenta
Model Number	1110019212
Style	Compact
Wattage	1400 watts
Voltage	1400 Volts
Heat Time	2 Minutes
Water Tank Capacity	33 ounces (approx. 2.1 Pounds)
Item Weight	6 Pounds
Dimensions	Approximately 15 x 10.5 x 9.5 inches
Product Benefits	Remove Wrinkles, Sanitize, Soften, Fabric Refreshing

WARRANTY AND SUPPORT

The Rowenta IS1430 Pro Compact Garment Steamer comes with a 1-year limited warranty.

For warranty claims, technical support, or further assistance, please refer to the contact information provided in your product packaging or visit the official Rowenta website.