

simplehuman CW1814

simplehuman 38 Liter / 10 Gallon Rectangular Kitchen Step Trash Can Instruction Manual

Model: CW1814

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)
[Support](#)

[Specifications](#)

[Warranty &](#)

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your simplehuman 38 Liter / 10 Gallon Rectangular Kitchen Step Trash Can. Please read these instructions carefully before use and retain for future reference.

SETUP

1. Unpacking

Carefully remove all packaging materials from the trash can. Inspect the product for any damage. If damage is found, do not use the product and contact customer support.

2. Placement

Due to its internal hinge and space-efficient rectangular shape, this trash can can be placed directly against a wall or cabinet without the lid hitting the surface when opened. Ensure there is enough clearance for the lid to open fully if desired.



Image: The simplehuman rectangular step trash can positioned flush against a kitchen cabinet, demonstrating its space-saving design.

3. Dimensions Overview

Familiarize yourself with the product dimensions to ensure it fits your intended space.



Image: A diagram illustrating the length (15.8 inches), width (12.5 inches), and height (25.7 inches) of the trash can, with an additional note for lid open height (34.8 inches).

4. Liner Installation

This trash can is designed for use with simplehuman Code J custom fit liners. These liners are engineered to fit perfectly, preventing slipping and bunching.

1. Lift the inner bucket out of the trash can.
2. Place a simplehuman Code J liner into the inner bucket, ensuring the top edge of the liner is folded over the rim of the bucket.

3. Lower the inner bucket back into the trash can.

custom fit liner

Designed to fit this can perfectly with no slipping, leaking or ripping.



Image: A simplehuman trash can with its lid open, showing a white custom fit liner (Code J) perfectly seated within the inner bucket, with the top edge neatly tucked over the rim.

OPERATION

1. Using the Step Pedal

The trash can features a strong steel pedal for hands-free operation. Simply step on the pedal to open the lid. Release the pedal to allow the lid to close.

silent close lid

Dampers control the lid so it closes slowly and softly.

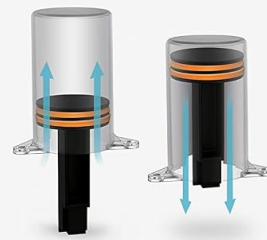


Image: A close-up view of the durable, wide steel pedal at the base of the simplehuman trash can, designed for long-lasting use.

2. Silent Close Lid

The patented lid shox technology ensures a slow, silent close every time. This mechanism prevents abrupt slamming and reduces noise.



Image: A visual representation of the lid shox technology, showing how dampers control the lid's motion for a smooth and silent closing action.

3. Stay-Open Lid Feature

For longer tasks or when frequently disposing of items, the lid can be set to stay open. Manually lift the lid to its full open position until it locks into place. To close, gently push the lid down to disengage the lock.

4. Inner Bucket and Liner Change

The removable inner bucket facilitates easy cleaning and liner changes. To change the liner:

1. Open the lid.
2. Lift the inner bucket a few inches.
3. Tilt the inner bucket towards you and rest it in the "bucket park" position, which holds it securely while you remove the full liner.
4. Remove the full liner and replace it with a new simplehuman Code J liner.
5. Lower the inner bucket back into the trash can.

MAINTENANCE

1. Cleaning the Exterior

The brushed stainless steel exterior is fingerprint-proof. To clean, wipe with a soft, damp cloth and a mild stainless steel cleaner if necessary. Avoid abrasive cleaners or scouring pads, which can damage the finish.

2. Cleaning the Inner Bucket

The durable inner bucket can be removed for thorough cleaning. Wash with warm, soapy water, rinse thoroughly, and dry completely before placing it back into the trash can.

3. Odor Control

For enhanced odor control, consider using simplehuman odorsorb pods (sold separately). These pods fit discreetly under the lid and continuously release a natural plant oil-based formula to neutralize trash odors for approximately 45 days.

TROUBLESHOOTING

- **Lid not closing silently:** Ensure no obstructions are preventing the lid from closing fully. Check the lid shox mechanism for any visible damage or debris.
- **Lid not opening or closing properly with pedal:** Inspect the steel pedal and its connection to the lid mechanism for any obstructions or damage. Ensure the pedal is fully depressed.
- **Liner slipping:** Ensure you are using simplehuman Code J custom fit liners. Verify the liner is properly folded over the inner bucket's rim.
- **Trash can unstable:** Check the non-skid base for any damage or missing rubber pads. Ensure the trash can is placed on a flat, even surface.

If you encounter issues not listed here or if troubleshooting steps do not resolve the problem, please contact simplehuman customer support.

SPECIFICATIONS

Feature	Detail
Brand	simplehuman
Model Number	CW1814
Capacity	38 Liters / 10 Gallons
Dimensions (L x W x H)	15.8"L x 12.5"W x 25.7"H
Material	Stainless Steel
Color	Brushed Stainless Steel
Opening Mechanism	Step Pedal
Special Feature	Silent Close Lid, Fingerprint-Proof, Internal Hinge, Stay-Open Lid, Non-Skid Base

Feature	Detail
Compatible Liners	simplehuman Code J
UPC	838810005539

WARRANTY INFORMATION

simplehuman products are designed for durability and are backed by a manufacturer's warranty. For specific details regarding the warranty period and terms for your 38 Liter Rectangular Kitchen Step Trash Can, please refer to the warranty card included with your purchase or visit the official simplehuman website.

CUSTOMER SUPPORT

For further assistance, product inquiries, or to purchase replacement parts and liners, please visit the simplehuman website or contact their customer service department:

- **Website:** www.simplehuman.com
- **Contact Information:** Refer to the "Contact Us" section on the simplehuman website for phone numbers, email, or live chat options.