

Hasbro Hasbro Monopoly Lcd Interactive

Hasbro Monopoly Electronic Handheld Game

MODEL: HASBRO MONOPOLY LCD INTERACTIVE (B000TH6TOK)

1. Introduction

This manual provides essential instructions for the setup, operation, and maintenance of your Hasbro Monopoly Electronic Handheld Game. This interactive LCD game offers a portable version of the classic property trading game, featuring electronic transactions and sound effects.

2. Safety Information

- **Battery Safety:** Use only the specified battery type (2 AA batteries). Do not mix old and new batteries, or different types of batteries. Insert batteries with correct polarity (+/-). Remove batteries if the device will not be used for an extended period.
- **Choking Hazard:** This product contains small parts and is not suitable for children under 3 years of age.
- **General Care:** Avoid exposing the device to extreme temperatures, direct sunlight, or moisture. Do not drop or disassemble the unit.

3. Package Contents

- 1 x Hasbro Monopoly Electronic Handheld Game Unit
- Instruction Manual (this document)
- Batteries (2 AA batteries, typically included)

4. Setup

1. **Battery Installation:** Locate the battery compartment on the back of the unit. Open the cover and insert 2 AA batteries, ensuring correct polarity. Close the battery cover securely.
2. **Power On:** Press the **ON/OFF** button (usually located near the top left of the unit) to power on the game.

3. **New Game:** To start a new game, press and hold the **NEW** button.



Figure 1: The Hasbro Monopoly Electronic Handheld Game in its original packaging. The device features an LCD screen and various control buttons for gameplay.

5. Operating Instructions

The game simulates the classic Monopoly experience with electronic banking and AI opponents. Familiarize yourself with the buttons for seamless gameplay.

5.1. Basic Controls

- **GO Button:** Press to continue gameplay or confirm selections.
- **NEW Button:** Press and hold to start a new game.

- **CLEAR Button:** Clears current input or cancels an action.
- **ENTER Button:** Confirms an action or selection.
- **FWD/BACK Buttons:** Navigate through options or menus.
- **SELECT Button:** Used to choose an item from a list.
- **RESET Pinhole Button:** Use a thin object (like a paperclip) to press this button for a hard reset if the device malfunctions.
- **ROLL Button:** Simulates dice roll to move your token.
- **SOUND Button:** Toggles game sounds on or off.

5.2. Transaction Buttons

The right side of the unit features dedicated buttons for various game transactions:

- **0-BUY:** Purchase properties.
- **1-SELL:** Sell properties or houses/hotels.
- **2-TRADE:** Initiate property trades with AI opponents.
- **3-RAISE BID:** Increase your bid during auctions.
- **4-MORTGAGE:** Mortgage properties.
- **5-UN-MORTGAGE:** Un-mortgage properties.
- **6-DEED INFO:** View information about property deeds.
- **7-PROPERTY:** Access property management options.
- **8-ASSETS:** View your current assets.
- **9-BUILDING COUNT:** Check the number of houses/hotels on properties.



Figure 2: A closer view of the handheld unit, highlighting the control buttons on both sides of the LCD screen, including transaction keys.

6. Game Modes and Features

- **Interactive LCD:** The central LCD screen displays game progress, property information, and transaction details.
- **AI Opponents:** Play against up to 5 computer-controlled opponents, each with distinct personalities and strategies.
- **Sound Effects:** Enjoy classic Monopoly sounds and spoken phrases from Rich Uncle Pennybags.
- **Electronic Banking:** All monetary transactions, including rent, purchases, and sales, are handled electronically by the device, eliminating the need for physical cash.

7. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the game in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods to prevent leakage.

8. Troubleshooting

- **Device does not power on:** Ensure batteries are correctly inserted and are not depleted. Replace with fresh AA batteries if necessary.
- **Screen is blank or frozen:** Press the RESET pinhole button on the unit using a thin, pointed object. This will restart the device and may resolve the issue.
- **Sound issues:** Check the SOUND button to ensure it is not muted. If the issue persists, try replacing the batteries.
- **Buttons are unresponsive:** Ensure the buttons are clean and free from debris. If a specific button is consistently unresponsive, a hard reset (using the RESET pinhole) may be required.

9. Specifications

Feature	Detail
Brand	Hasbro
Model Number	Hasbro Monopoly LCD Interactive
Item Weight	1.59 Pounds
Product Dimensions	7.1 x 6 x 1.5 inches
Power Source	Battery Powered
Number of Batteries	2 AA batteries required
Battery Description	Alkaline
Display Type	LCD
Material	Plastic
Form Factor	Handheld
Manufacturer Recommended Age	0 - 10 years (Note: Product description also states Ages 8 and up)

10. Warranty and Support

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official Hasbro website. Keep your purchase receipt as proof of purchase.

Note: No official product videos from the seller were available for embedding in this manual.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question