

[manuals.plus](#) /› [Lasko](#) /› [Lasko Oscillating Ceramic Tower Space Heater User Manual](#)**Lasko 751320**

Lasko Oscillating Ceramic Tower Space Heater User Manual

Model: 751320

Brand: Lasko

1. INTRODUCTION

Thank you for choosing the Lasko Oscillating Ceramic Tower Space Heater. This manual provides important information regarding the safe operation, setup, and maintenance of your new heater. Please read it thoroughly before use and retain it for future reference.

This ceramic heater is designed to provide efficient and comfortable heating for various rooms in your home or office. It features an elongated heating element, widespread oscillation for even heat distribution, an electronic programmable thermostat, and a convenient 7-hour timer. All functions can be easily controlled via the multi-function remote control.

2. IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electrical shock, or injury, always follow these basic precautions:

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions or has been dropped or damaged in any manner.
- Do not use outdoors.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 meters) from the front of the heater and keep them away from the sides and rear.
- The heater is equipped with overheat protection and a cool-touch exterior for enhanced safety.

For detailed safety guidelines, please refer to the official Safety Information PDF document provided with your

product or available on the manufacturer's website.



Figure 2.1: Built-in Safety & Protection features of the Lasko Ceramic Tower Heater.

3. PACKAGE CONTENTS

Your Lasko Oscillating Ceramic Tower Space Heater package should include the following items:

- Lasko Oscillating Ceramic Tower Space Heater
- Multi-Function Remote Control
- User Manual (this document)

4. SETUP

The Lasko Ceramic Tower Space Heater comes fully assembled, allowing for quick and easy setup.

1. **Unpack the Heater:** Carefully remove the heater and all packaging materials from the box. Retain packaging for storage if needed.

2. **Placement:** Place the heater on a firm, level surface. Ensure it is at least 3 feet (0.9 meters) away from walls, furniture, and other combustible materials.
3. **Power Connection:** Plug the heater directly into a 110-volt AC wall outlet. Do not use extension cords or power strips. The power cord length is 6 feet (72 inches).
4. **Remote Control Batteries:** Insert 2 AAA batteries (not included) into the remote control, observing polarity.



Figure 4.1: Lasko Ceramic Tower Space Heater ready for use.

Designed for Convenience



**Convenient
Carry Handle**



**Lightweight
Only 5.6 lbs**



**Easy to Use
Remote Control**



**Up to
7 Hour Timer**

Figure 4.2: The heater is designed for convenience, featuring a small, stable footprint and coming fully assembled.

5. OPERATING INSTRUCTIONS

Your Lasko heater can be operated using the control panel on top of the unit or the included remote control.

5.1 Control Panel and Remote Functions

Key Features



Figure 5.1: Key Features of the Control Panel.



Figure 5.2: Multi-Function Remote Control.

- **Power ()**: Press to turn the heater ON or OFF.

- **Heat Settings:** The heater offers two quiet comfort settings: High Heat and Low Heat. An Auto setting is also available.
- **Adjustable Thermostat (TEMP):** Use the TEMP button (or +/- on remote) to set your desired temperature. The digital display shows the selected temperature in Fahrenheit or Celsius. The heater will cycle on and off to maintain the set temperature. Temperature range is 60 to 85 degrees Fahrenheit.
- **Oscillation (OSC):** Press the OSC button to activate or deactivate the widespread oscillation feature, which distributes warm air throughout the room.
- **Timer (TIMER):** Press the TIMER button to set the auto-off timer. You can select intervals from 1 hour to 8 hours. The heater will automatically turn off after the set time.

6. MAINTENANCE

Proper maintenance ensures the longevity and efficient operation of your Lasko heater.

- **Cleaning:** Always unplug the heater before cleaning. Use a vacuum cleaner or a dry cloth to remove dust from the heater's surfaces and air intake/output grilles. Do not use water or liquid cleaners.
- **Storage:** When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.

7. TROUBLESHOOTING

If your Lasko heater is not operating as expected, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power, tripped circuit breaker, or safety feature activated.	Ensure the heater is securely plugged into a working outlet. Check your household circuit breaker. If the heater has overheated, unplug it and let it cool for 10 minutes before plugging it back in.
No heat output.	Thermostat set too low, or unit is in fan-only mode.	Increase the thermostat setting. Ensure the heater is set to a heat mode (High or Low) and not just fan.
Oscillation not working.	Oscillation feature is off.	Press the OSC button on the control panel or remote to activate oscillation.
Remote control not working.	Dead batteries or obstruction.	Replace the batteries in the remote control. Ensure there is no obstruction between the remote and the heater's sensor.

8. SPECIFICATIONS

Brand: Lasko

Model Number: 751320

Color: Grey/Black

Form Factor: Tower

Indoor/Outdoor Usage: Indoor

Product Dimensions: 8.3"D x 7.25"W x 22.5"H

Item Weight: 2.5 pounds

Recommended Uses: Office, Garage, Home

Mounting Type: Stand Alone

Heating Coverage: 300 Sq. ft

Burner Type: Ceramic

Fuel Type: Electric

Power: 1500 Watts

Voltage: 110 Volts

Amperage: 12.5 Amps

Number of Speeds: 2 (High Heat, Low Heat)

Cable Length: 72 Inches (6 feet)

Min Temperature Setting: 60 Degrees Fahrenheit

Max Temperature Setting: 85 Degrees Fahrenheit

Special Features: Adjustable Thermostat, 7-Hour Auto-Off Timer, Multi-Function Remote Control, Widespread Oscillation, Overheat Protection, Cool-Touch Exterior

Assembly Required: No (Fully Assembled)

Batteries Required for Remote: Yes (2 x AAA)

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This Lasko product is covered by a **3-year limited warranty**. Please refer to the warranty card included with your purchase or visit the official Lasko website for full details on warranty coverage and terms.

9.2 Customer Support

For any questions, technical assistance, or service inquiries not covered in this manual, please contact Lasko customer support. Contact information can typically be found on the manufacturer's website or on the product packaging.