

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Fisher](#) /
- › [Fisher Space Pen Trekker Space Pen Instruction Manual](#)

Fisher 725B

Fisher Space Pen Trekker Space Pen Instruction Manual

Model: 725B | Brand: Fisher

1. PRODUCT OVERVIEW

The Fisher Space Pen Trekker is a robust and versatile ballpoint pen engineered to perform reliably in virtually any environment. Its unique pressurized ink cartridge allows it to write upside down, underwater, through grease, and in extreme temperatures ranging from -30°F to 250°F (-34°C to +121°C). Designed for durability and portability, the Trekker features a compact design with a key ring attached to its cap, making it an ideal tool for everyday carry, outdoor adventures, and professional use.

This manual provides essential information on the proper use, maintenance, and care of your Fisher Space Pen Trekker to ensure its long-lasting performance.



Figure 1: Fisher Space Pen Trekker with its cap detached, highlighting its compact design and keyring attachment.

2. SETUP AND INITIAL USE

The Fisher Space Pen Trekker is designed for immediate use right out of the box. No special setup or priming is required.

2.1 Attaching the Pen

The Trekker comes with a key ring integrated into its cap, allowing for convenient attachment to various items such as keychains, backpacks, lanyards, or gear. This ensures your pen is always accessible when needed.

- **Keyring Attachment:** Use the attached keyring to secure the pen to your desired location.
- **Cap Security:** Ensure the cap is securely clicked onto the pen when not in use to protect the tip and prevent accidental marks.

Long-Lasting Performance



Fisher pressurized refills provide significantly longer writing capacity, writing for over 12,000 feet (2.5 miles).

Figure 2: The Fisher Space Pen Trekker securely attached to a keyring, ready for transport.

3. OPERATING INSTRUCTIONS

The Fisher Space Pen Trekker utilizes a patented pressurized ink cartridge, enabling it to write under conditions where ordinary pens would fail.

3.1 Writing in Various Conditions

- **Any Angle:** The pressurized cartridge allows the pen to write smoothly at any angle, including upside down.
- **Extreme Temperatures:** Operates effectively in temperatures ranging from -30°F to 250°F (-34°C to +121°C).
- **Underwater:** Capable of writing underwater.
- **Greasy Surfaces:** Can write through oil and grease.
- **Zero Gravity:** Designed to write in zero-gravity environments, as used by astronauts.



ANYWHERE, ANYTIME

Whether you're writing in extreme heat, in zero-gravity, underwater, upside down or over grease. It doesn't matter. Our pens will perform.

Figure 3: Demonstrating the pen's ease of use for writing on a notepad.

Your browser does not support the video tag.

Video 1: An overview of the Fisher Space Pen brand, highlighting its capabilities in various conditions.

4. MAINTENANCE AND INK CARTRIDGE REPLACEMENT

The Fisher Space Pen Trekker is designed for minimal maintenance. The sealed and pressurized ink cartridges are known for their longevity, often lasting three times longer than average pens with an estimated 100-year shelf life.

4.1 Replacing the Ink Cartridge

While the ink cartridge has an extended life, replacement is straightforward when needed.

1. **Separate the Pen:** Gently twist the pen barrel at the middle joint to separate the two halves.
2. **Remove Old Cartridge:** Carefully pull out the old ink cartridge from the pen body.
3. **Insert New Cartridge:** Insert a new Fisher Space Pen pressurized refill into the pen body, ensuring it is seated correctly.
4. **Reassemble:** Twist the two halves of the pen back together until securely fastened.



The Trekker Space Pen can hang upside down forever yet function flawlessly once deployed, something most other pens won't do.

MATERIAL/COLOR

Brass, Powder
Coated Matte Black

INK COLOR & WIDTH

Black Ink, Medium Point

INK MECHANISM

Ready with cap

Figure 4: Components of the Fisher Space Pen Trekker, including the replaceable ink cartridge.

Your browser does not support the video tag.

Video 2: A user demonstrating the compact design and ease of ink cartridge replacement for the Fisher Space Pen Trekker.

5. TROUBLESHOOTING

The Fisher Space Pen Trekker is highly reliable. Should you encounter any issues, consider the following:

- **Pen Not Writing:**

- Ensure the pen tip is clean and free of debris.
- Verify the ink cartridge is properly seated and not loose.
- Check if the ink cartridge is empty and requires replacement.

- **Cap Looseness:**

- If the cap feels loose, ensure it is pushed firmly onto the pen body until it clicks securely.
- Over time, wear may occur. If the cap no longer secures properly, contact customer support for assistance.

6. SPECIFICATIONS

Feature	Detail
Model Number	725B
Brand	Fisher
Item Weight	1.6 ounces
Product Dimensions	3.9 x 0.4 x 0.4 inches
Color	Matte Black
Closure Type	Click-Off Cap
Material Type	Brass
Ink Color	Black
Point Type	Medium
Line Size	1.1 Millimeters
Operating Temperature Range	-30°F to 250°F (-34°C to +121°C)

7. WARRANTY AND SUPPORT

Fisher Space Pen products are renowned for their quality and durability. While specific warranty details are not provided in this manual, Fisher Space Pen is known for its commitment to customer satisfaction and the longevity of its products.

For any inquiries regarding product support, replacement parts, or warranty claims, please visit the official Fisher Space Pen website or contact their customer service directly. Information on authorized retailers and service centers can typically be found on their website.

Official Website: www.spacepen.com (Note: This is a general placeholder, actual link might vary)

