

[Manuals.plus](#) /

› [Leviton](#) /

› Leviton 6-Gang Decora Plus Wallplate Screwless Snap-On Mount, 80326-SW, White - Instruction Manual

Leviton 80326-SW

Leviton 6-Gang Decora Plus Wallplate Instruction Manual

Model: 80326-SW | Brand: Leviton

PRODUCT OVERVIEW

The Leviton 6-Gang Decora Plus Wallplate, model 80326-SW, is a screwless, snap-on wallplate designed to provide a sleek and modern finish for electrical installations. Made from durable polycarbonate, this wallplate is engineered for quick and flawless installation, coordinating seamlessly with various interior designs. It is specifically designed for use with Decora-style devices, covering up to six gangs.

This wallplate consists of two main components: a subplate that mounts to the electrical box and a decorative outer cover that snaps onto the subplate, concealing all mounting screws for a clean appearance.

SETUP AND INSTALLATION

Proper installation of the Leviton 6-Gang Decora Plus Wallplate ensures both aesthetic appeal and secure fit. Follow these steps carefully:

- Safety First:** Before beginning any electrical work, ensure the power to the circuit is turned off at the main breaker or fuse box. Verify with a voltage tester.
- Prepare the Electrical Box:** Ensure all Decora-style devices (switches, outlets, dimmers) are properly installed and secured within the electrical box. The mounting screws for these devices should be tightened.
- Mount the Subplate:**



Image: Rear view of the wallplate's subplate, showing the screw mounting points for attachment to the electrical box.

Position the subplate (the part with visible screw holes) over the installed Decora devices. Align the screw holes on the subplate with the mounting holes on the electrical box. Secure the subplate using the provided screws. Ensure the subplate is level and flush with the wall surface.

4. **Attach the Decorative Cover:**



Image: The two components of the wallplate, the outer decorative cover and the inner subplate, displayed separately.

Take the decorative outer cover. Align the cover with the mounted subplate. Gently press the cover onto the subplate until it snaps securely into place. You should hear a distinct click as the tabs engage. Ensure all edges are flush and there are no gaps.

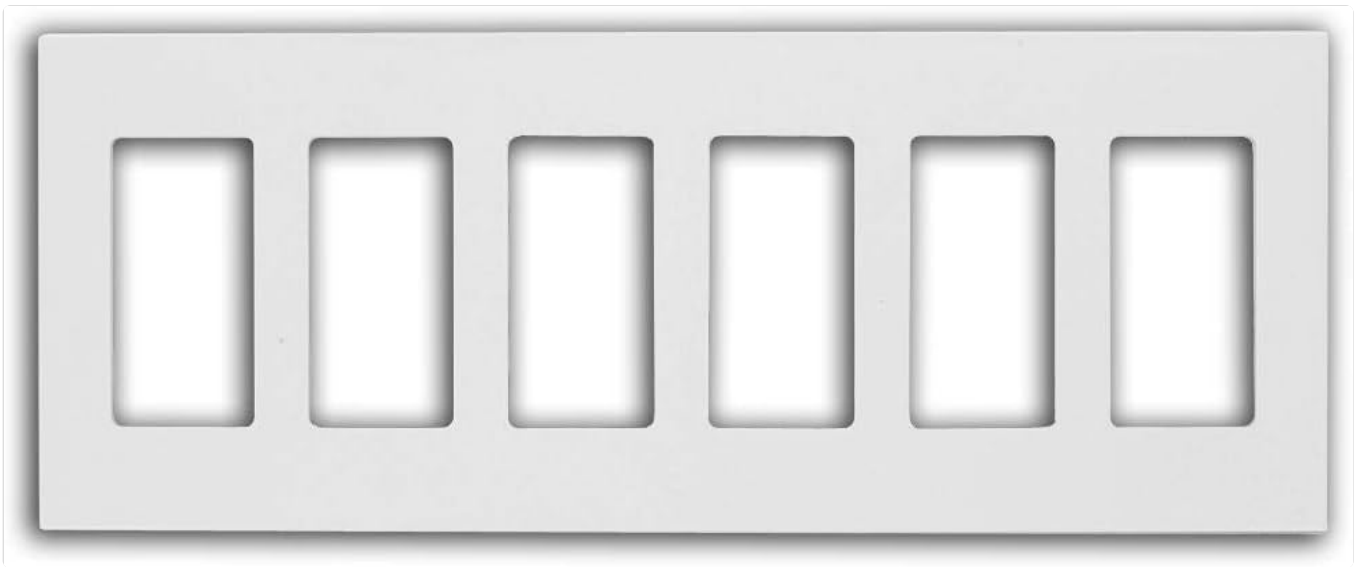


Image: Front view of the fully assembled Leviton 6-Gang Decora Plus Wallplate, showcasing its screwless design.

5. **Restore Power:** Once the wallplate is fully installed and secure, you may restore power to the circuit at the main breaker or fuse box.

OPERATING INSTRUCTIONS

The Leviton 6-Gang Decora Plus Wallplate serves as a protective and decorative cover for your electrical devices. It does not have active operational components. Its function is to provide a clean, finished appearance and to protect the wiring and devices behind it. Operation of the electrical devices (switches, outlets, etc.) covered by the wallplate remains unchanged and is performed directly on those devices.

MAINTENANCE

To maintain the appearance and integrity of your Leviton Decora Plus Wallplate, follow these simple maintenance guidelines:

- **Cleaning:** Use a soft, damp cloth with mild soap and water to clean the surface of the wallplate. Avoid abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- **Dusting:** Regularly dust the wallplate with a dry, soft cloth to prevent buildup.
- **Inspection:** Periodically check that the wallplate remains securely snapped onto the subplate. If it becomes loose, gently press it back into place until it clicks.

TROUBLESHOOTING

If you encounter issues with your wallplate, consider the following common solutions:

- **Wallplate Does Not Snap On Securely:**
 - Ensure the subplate is mounted flush and level against the wall. Any unevenness can prevent the cover from snapping on correctly.
 - Check for any obstructions (e.g., excess wire, debris) behind the subplate or within the electrical box that might prevent a flush fit.
 - Verify that the Decora devices are properly seated and not protruding from the electrical box.
- **Gaps Around the Wallplate:**
 - This often indicates the subplate is not perfectly flush or the wall surface is uneven. Adjust the subplate's mounting screws if possible.
 - Ensure the decorative cover is fully engaged with all snapping tabs on the subplate.

- **Difficulty Removing the Wallplate:**
 - To remove the screwless cover, gently pry it off from the bottom edge using a small, flat-head screwdriver or a plastic prying tool. Apply even pressure to avoid damaging the wall or the plate.

SPECIFICATIONS

Feature	Detail
Brand	Leviton
Model Number	80326-SW
Switch Type	Decorator
Material	Polycarbonate (PC)
Color	White
Product Dimensions	11.81"W x 4.5"H
Finish Type	Smooth Finish
Configuration	6-Gang
Installation Type	Screw-In (for subplate) / Snap-On (for cover)
Item Weight	1.6 ounces
UPC	078477160336

WARRANTY INFORMATION

This Leviton product is covered by a manufacturer's warranty. For specific details regarding the terms, conditions, and duration of the warranty, please refer to the documentation included with your purchase or visit the official Leviton website. Retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, product inquiries, or support, please contact Leviton customer service. You can find contact information and additional resources on the official Leviton website:

[Visit Leviton Official Website](#)

For more products and information, you can also visit the [Leviton Store on Amazon](#).

© 2024 Leviton. All rights reserved. Decora is a registered trademark of Leviton Mfg. Co., Inc.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question