

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DeLonghi](#) /

› [DeLonghi EN660.R Nespresso Lattissima Espresso Maker Instruction Manual](#)

DeLonghi EN660.R

DeLonghi EN660.R Nespresso Lattissima Espresso Maker Instruction Manual

Model: EN660.R

INTRODUCTION

Welcome to the DeLonghi EN660.R Nespresso Lattissima Single-Serve Espresso Maker. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read all instructions carefully before first use and keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and personal injury, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the capsule compartment is opened during the brewing process.

PRODUCT COMPONENTS

Familiarize yourself with the main parts of your DeLonghi EN660.R Nespresso Lattissima machine:



Image: The DeLonghi EN660.R Nespresso Lattissima Espresso Maker, showcasing its compact design and red finish.

1. **Water Tank:** Removable tank for fresh water supply.
2. **Milk Container:** Detachable container for milk, with frothing system.
3. **Capsule Insertion Lever:** Mechanism to open and close the capsule compartment.
4. **Coffee Outlet:** Where the brewed coffee dispenses.

5. **Milk Frother Nozzle:** Dispenses frothed milk.
6. **Drip Tray:** Collects excess liquid and accommodates various cup sizes.
7. **Used Capsule Container:** Stores ejected used capsules.
8. **Control Panel Buttons:** Illuminated buttons for Espresso, Lungo, Cappuccino, Latte Macchiato, and Clean functions.

SETUP

1. Unpacking and Positioning

1. Remove all packaging materials from the machine.
2. Place the machine on a stable, heat-resistant, and level surface, away from water splashes and heat sources.
3. Ensure the power cord is not trapped or touching hot surfaces.

2. First Use and Rinsing

1. Fill the water tank with fresh drinking water.
2. Place a container (at least 0.5L) under the coffee outlet.
3. Plug the machine into a grounded power outlet. The buttons will flash.
4. Press any coffee button (e.g., Espresso). The machine will start a rinsing cycle, dispensing water through the coffee outlet. Repeat this process 2-3 times until clear water flows.
5. The machine is now ready for use.

OPERATING INSTRUCTIONS

1. Making Espresso or Lungo

1. Ensure the water tank is filled.
2. Lift the capsule insertion lever completely.
3. Insert a Nespresso capsule into the compartment.
4. Close the lever firmly.
5. Place a cup under the coffee outlet.
6. Press the **Espresso** button for a small cup or the **Lungo** button for a larger cup. The machine will brew and stop automatically.
7. After brewing, lift the lever to eject the used capsule into the container.

2. Making Cappuccino or Latte Macchiato

1. Fill the milk container with fresh, cold milk (skimmed or semi-skimmed recommended).
2. Attach the milk container to the machine.
3. Lift the capsule insertion lever and insert a Nespresso capsule. Close the lever.
4. Adjust the drip tray to the appropriate height for your cup.
5. Place your cup under the milk frother nozzle and coffee outlet.
6. Press the **Cappuccino** or **Latte Macchiato** button. The machine will automatically froth milk, brew coffee, and stop.
7. After brewing, remove the cup. For hygiene, press the **Clean** button on the milk container to rinse the milk system.

3. Programming Cup Volume

You can customize the volume of your Espresso, Lungo, Cappuccino, and Latte Macchiato:

- **For Espresso/Lungo:** Insert a capsule and place a cup. Press and hold the desired coffee button (Espresso or Lungo). Release the button when the desired volume is reached. The machine will remember this setting for future brews.
- **For Cappuccino/Latte Macchiato:** Prepare the machine with milk and capsule. Press and hold the desired milk-based drink button. The machine will first dispense milk. Release the button when the desired milk volume is reached. The machine will then dispense coffee. Press the button again when the desired coffee volume is reached. The machine will remember these settings.

MAINTENANCE

1. Daily Cleaning

- **Milk System:** After each milk-based drink, press the **Clean** button on the milk container. This rinses the milk frother nozzle. For thorough cleaning, disassemble the milk container parts and wash them with warm soapy water or in a dishwasher.
- **Drip Tray and Used Capsule Container:** Empty and rinse daily.
- **Water Tank:** Rinse regularly and refill with fresh water.
- **Exterior:** Wipe the machine with a damp cloth. Do not use abrasive cleaning agents.

2. Descaling

Descaling is crucial for maintaining machine performance and coffee quality. The descaling light will illuminate when descaling is required.

1. Refer to the specific descaling instructions provided with your Nespresso descaling kit.
2. Empty the drip tray and used capsule container.
3. Fill the water tank with the descaling solution as per the kit instructions.
4. Place a large container (at least 1L) under the coffee outlet and milk frother nozzle.
5. Follow the machine's descaling sequence, typically involving pressing and holding specific buttons.
6. After the descaling cycle, rinse the water tank and perform several rinsing cycles with fresh water to remove any descaling residue.

3. Storage

If the machine will not be used for an extended period, empty the water tank and clean all components. Store in a dry, dust-free place.

TROUBLESHOOTING

Review the following table for common issues and their solutions:

Problem	Possible Cause	Solution
No coffee flow	Water tank empty; machine not primed; capsule not inserted correctly; descaling needed.	Fill water tank; perform first use rinsing; ensure capsule is correctly placed and lever closed; descale the machine.
No milk froth or poor froth quality	Milk container not clean; milk type/temperature; milk system blocked.	Clean milk container thoroughly; use fresh, cold, semi-skimmed or skimmed milk; ensure milk system is not blocked and clean button is used after each milk preparation.

Problem	Possible Cause	Solution
Water leaking under machine	Drip tray full; water tank not correctly positioned; internal leak.	Empty drip tray; ensure water tank is firmly seated; contact customer support if problem persists.
Machine not turning on	No power; power cord not plugged in.	Check power outlet; ensure power cord is securely plugged into both the machine and the wall outlet.

SPECIFICATIONS

Feature	Detail
Brand	DeLonghi
Model	EN660.R
Wattage	1300 watts
Capacity	1.2 Liters (Water Tank)
Product Dimensions	33.02 x 20.32 x 26.04 cm
Item Weight	5.85 kg
Material	Plastic
Special Features	Cup Warmer, Patented "Single Touch" hot milk system

WARRANTY AND SUPPORT

For warranty information, service, or technical support, please refer to the warranty card included with your product or visit the official DeLonghi or Nespresso website for your region. Keep your proof of purchase for warranty claims.