

Toastmaster t100

Toastmaster 2-Slice Toaster

Model: t100 | User Manual

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.

SAVE THESE INSTRUCTIONS

PRODUCT OVERVIEW



Figure 1: Front view of the Toastmaster 2-Slice Toaster (Model t100).

The Toastmaster 2-Slice Toaster (Model t100) is designed for efficient and consistent toasting of various bread types. It features wide, self-adjusting bread slots and an electronic timer for uniform results. The toaster is equipped with an auto hi-lift function for easy food removal and a patented auto safety shut-off for enhanced safety.

Key components include:

- Wide Toasting Slots
- Browning Control Dial (1-6 settings)
- Toast Lever / Auto Hi-lift
- Hinged Crumb Tray

SETUP

1. **Unpacking:**

Carefully remove the toaster from its packaging. Retain packaging for future storage or transport if needed. Remove any protective films or packing materials from the toaster body and slots.

2. **Placement:**

Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure there is adequate ventilation around the toaster.

3. **First Use (Seasoning):**

Before first use, operate the toaster without bread for a few cycles at the highest setting (6) to burn off any manufacturing residues. A slight odor or smoke may be present; this is normal and will dissipate. Ensure the area is well-ventilated during this process.

4. **Power Connection:**

Plug the power cord into a standard 57 Volt (AC) electrical outlet. Ensure the outlet matches the toaster's voltage requirements.

OPERATING INSTRUCTIONS

1. **Insert Bread:**

Place one slice of bread, bagel, or pastry into each toasting slot. The wide slots accommodate various bread thicknesses.

2. **Select Browning Level:**

Turn the browning control dial to your desired setting. Settings range from 1 (lightest) to 6 (darkest). Start with a medium setting (e.g., 3 or 4) and adjust according to preference.

3. **Start Toasting:**

Press the toast lever down until it latches. The toaster will begin the toasting cycle. The lever will automatically pop up when the toasting cycle is complete.

4. **Remove Toast:**

Once the toast pops up, the auto hi-lift feature raises the toast for easy and safe removal. Use caution as toast and the toaster interior will be hot.

5. **Canceling Toasting:**

To stop the toasting cycle at any time, simply lift the toast lever upwards. This will immediately raise the toast and turn off the heating elements.

Note: The compensating electronic timer adjusts for consistent toasting results across multiple cycles.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your toaster.

1. **Unplug and Cool:**

Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.

2. **Empty Crumb Tray:**

Locate the hinged crumb tray at the bottom of the toaster. Open the tray and slide it out to remove accumulated crumbs. Dispose of crumbs and wipe the tray clean with a damp cloth. Ensure the tray is completely dry before reinserting and closing it.

3. **Exterior Cleaning:**

Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the white finish. For stubborn spots, a mild detergent can be used, followed by wiping with a clean, damp cloth.

4. **Interior Cleaning:**

Never insert utensils or fingers into the toasting slots. If food becomes lodged, unplug the toaster and carefully turn it upside down to dislodge the item. Do not attempt to clean the interior heating elements.

Caution: Never immerse the toaster, cord, or plug in water or any other liquid.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet not working; safety shut-off activated.	Ensure toaster is securely plugged into a working outlet. Check household circuit breaker. If safety shut-off activated (e.g., due to overheating), unplug and allow to cool for 10-15 minutes before plugging back in.
Toast is too light/dark.	Browning control setting is incorrect.	Adjust the browning control dial to a higher setting for darker toast or a lower setting for lighter toast.
Toast gets stuck.	Bread too thick; crumbs accumulated.	Ensure bread fits freely in slots. Unplug toaster and clean crumb tray. If bread is still stuck, unplug and carefully dislodge with a non-metallic utensil.

Problem	Possible Cause	Solution
Smoke coming from toaster.	Food lodged inside; crumbs burning; first use residue.	Immediately unplug the toaster. If food is burning, carefully remove it once cooled. Clean crumb tray. For first use, this is normal and will dissipate. Ensure good ventilation.

SPECIFICATIONS

Brand	Toastmaster
Model Number	t100
Color	White
Material	Plastic
Wattage	850 watts
Number of Slices	2
Voltage	57 Volts (AC)
Dimensions (L x W x H)	11.9" x 6.5" x 9.1"
Item Weight	4 pounds
Special Feature	Automatic Shut-Off, Auto Hi-lift

Note: Product specifications are subject to change without notice for product improvement.

WARRANTY AND SUPPORT

Warranty information for the Toastmaster Model t100 2-Slice Toaster is not provided within this manual. For detailed warranty terms and conditions, please refer to the warranty card included with your product packaging or visit the official Toastmaster website.

For customer support, service, or to inquire about replacement parts, please contact Toastmaster customer service directly. Contact information can typically be found on the manufacturer's website or on the product packaging.

No official product videos are available for this model at this time.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B000UZZB09A>

More documents and user manuals: <https://manuals.plus/>