

[Manuals.plus](#) /

> [Casio](#) /

> Casio Enticer MTP-1165A-7C2DF Analog Watch Instruction Manual

Casio MTP-1165A-7C2DF

Casio Enticer MTP-1165A-7C2DF Analog Watch Instruction Manual

INTRODUCTION

This manual provides essential information and instructions for the proper use and care of your Casio Enticer MTP-1165A-7C2DF Analog Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. Keep this manual for future reference.

PRODUCT OVERVIEW

The Casio Enticer MTP-1165A-7C2DF is an analog watch designed for men, featuring a rectangular white dial and a silver stainless steel band. It is equipped with a quartz movement for accurate timekeeping and offers water resistance up to 50 meters.

Key Features:

- **Dial Color:** White
- **Case Shape:** Rectangular
- **Band Color:** Silver
- **Band Material:** Stainless Steel
- **Movement Type:** Quartz
- **Display Type:** Analog (3 hands: hour, minute, second)
- **Case Material:** Stainless Steel
- **Case Diameter:** 39 millimeters
- **Water Resistance Depth:** 50 meters
- **Crystal:** Mineral Glass / Spherical Glass
- **Buckle:** Triple-fold
- **Battery Life:** Approximately 3 years on SR626SW







Figure 1: Front view of the Casio Enticer MTP-1165A-7C2DF Analog Watch, showcasing its rectangular white dial and silver stainless steel band.

SETUP

Unpacking and Initial Inspection:

1. Carefully remove the watch from its packaging.
2. Inspect the watch for any visible damage or defects.
3. Ensure all protective films are removed from the crystal and case back.



Figure 2: The Casio Enticer MTP-1165A-7C2DF watch presented in its white packaging box.

Adjusting the Band:

The stainless steel band may require adjustment to fit your wrist comfortably. This typically involves removing or adding links. It is recommended to have this procedure performed by a qualified jeweler or watch technician to prevent damage to the band or watch.

1. Identify the pins on the underside of the band links.
2. Using a specialized tool, carefully push out the pins to remove links.
3. Reassemble the band by inserting pins back into the links.



Figure 3: Rear view of the watch, illustrating the stainless steel band and its triple-fold buckle, which may require adjustment for proper fit.



Figure 4: The Casio Enticer MTP-1165A-7C2DF watch worn on a wrist, demonstrating its fit and appearance after band adjustment.

OPERATING INSTRUCTIONS

Setting the Time:

Your Casio Enticer watch features a simple crown mechanism for time adjustment.

1. **Pull out the crown:** Locate the crown on the right side of the watch case. Gently pull it out to the first click position. The second hand will stop.
2. **Set the time:** Rotate the crown to move the hour and minute hands to the desired time. Ensure you set the correct AM/PM if your watch has a date function (this model does not, but it's good practice for analog watches).
3. **Push in the crown:** Once the time is set, push the crown back into its normal position. The second hand will resume movement.



Figure 5: Side view of the watch, highlighting the crown used for setting the time.

MAINTENANCE

Water Resistance:

This watch is water resistant up to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown while the watch is wet or submerged to prevent water intrusion.

Battery Replacement:

The watch is powered by an SR626SW battery, with an approximate life of 3 years. When the battery runs low, the watch hands may stop or operate erratically. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

Cleaning:

To maintain the appearance of your watch, wipe the case and band periodically with a soft, dry cloth. For stainless steel bands, a slightly damp cloth can be used, followed by a dry cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the watch's finish.

TROUBLESHOOTING

If you encounter any issues with your watch, please refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
Watch hands do not move.	Battery is depleted.	Replace the battery (recommended by a professional).
Time is inaccurate.	Crown is not fully pushed in.	Ensure the crown is pushed all the way in.
Condensation inside the watch.	Exposure to extreme temperature changes or water intrusion.	Seek professional service immediately to prevent damage.
Band feels too tight or too loose.	Incorrect band size.	Adjust the band by adding or removing links (recommended by a professional).

SPECIFICATIONS

Detailed technical specifications for the Casio Enticer MTP-1165A-7C2DF Analog Watch:

Feature	Detail
Model Number	MTP-1165A-7C2DF
Movement	Quartz
Display Type	Analog (3 hands)
Case Material	Stainless Steel (Ion plated)
Case Diameter	39 Millimeters
Case Dimensions (LxWxH)	41.6 X 27 X 8.5 mm
Band Material	Stainless Steel
Band Color	Silver
Dial Color	White

Feature	Detail
Crystal Material	Mineral Glass / Spherical Glass
Water Resistance Depth	50 Meters (5 ATM)
Accuracy	±20 seconds per month
Battery Type	SR626SW
Approx. Battery Life	3 years
Total Weight	98 g

WARRANTY AND SUPPORT

Warranty Information:

This Casio watch comes with a **2 Years Domestic Warranty** provided by the manufacturer. The warranty covers manufacturing defects under normal use. Please retain your purchase receipt as proof of purchase for warranty claims. The warranty does not cover damage resulting from improper use, accidents, unauthorized repairs, or normal wear and tear.

Customer Support:

For warranty service, technical assistance, or any other inquiries regarding your Casio watch, please contact your authorized Casio dealer or visit the official Casio website for support contact details in your region. Always ensure that any repairs or battery replacements are carried out by authorized service centers to maintain the validity of your warranty and the integrity of your watch.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B000V7KUYI>

More documents and user manuals: <https://manuals.plus/>