



[Manuals.plus](#) /

> [Casio](#) /

> Casio F-94WA-9 Digital Watch User Manual

Casio F-94WA-9DG

Casio F-94WA-9 Digital Watch User Manual

Model: F-94WA-9DG

INTRODUCTION

Thank you for choosing the Casio F-94WA-9 Digital Watch. This manual provides detailed instructions on how to set up, operate, and maintain your watch to ensure its longevity and accurate performance. Please read this manual thoroughly before using your watch.



Figure 1: Front view of the Casio F-94WA-9 Digital Watch.

SETUP

Initial Time and Date Setting

Your watch comes with a pre-installed battery. To set the time and date:

1. In the normal timekeeping mode, press the **Mode** button (bottom-left) repeatedly until the seconds begin to flash. This indicates the setting mode.
2. Press the **Adjust** button (top-right) to cycle through the settings: Seconds → Hour → Minutes → Month → Date → Day of the week.

3. While a setting is flashing, use the **Light** button (top-left) to increase the value or the **Start/Stop** button (bottom-right) to decrease it (if applicable).
4. Once all settings are correct, press the **Mode** button to exit the setting mode.

Strap Adjustment

The resin strap is designed for comfort and durability. To adjust the strap length, locate the buckle and slide the pin to the desired hole for a snug yet comfortable fit on your wrist.



Figure 2: Side view showing watch buttons.

OPERATING MODES

Your Casio F-94WA-9 watch features several operating modes accessible via the **Mode** button (bottom-left).

- **Timekeeping Mode:** Displays the current time, day of the week, and date. This is the default mode.
- **Alarm Mode:** Allows you to set a daily alarm. Press the **Light** button (top-left) to turn the alarm on/off.
- **Stopwatch Mode:** Measures elapsed time. Press the **Start/Stop** button (bottom-right) to start/stop, and the **Adjust** button (top-right) to reset.
- **Hourly Time Signal:** An audible beep every hour on the hour. This can be toggled on or off in the alarm mode by pressing the **Start/Stop** button.



Figure 3: Watch display in timekeeping mode.

MAINTENANCE

Cleaning

To maintain the appearance of your watch, wipe it regularly with a soft, dry cloth. For stubborn dirt, use a soft cloth dampened with water and a mild neutral detergent, then wipe dry. Avoid using volatile agents like thinner or benzene, as they may damage the resin components.

Water Resistance

This watch is marked as "WATER RESIST", indicating it is suitable for daily use and can withstand splashes or brief immersion. It is not designed for swimming, showering, or diving. Avoid operating buttons while the watch is wet.

Battery Replacement

The watch uses a single product-specific battery. When the display becomes dim or functions become erratic, it is time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance.



Figure 4: Rear view of the watch, showing the case back.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time not set properly or accidental button press.	Re-set the time and date as per the Setup section.
Alarm does not sound.	Alarm is turned off.	Ensure the alarm is activated in Alarm Mode.
Water inside the display.	Water resistance compromised.	Stop using the watch immediately and take it to a qualified service center.

SPECIFICATIONS

- **Model Number:** F-94WA-9DG
- **Display Type:** Digital
- **Case Material:** Resin
- **Band Material:** Resin
- **Water Resistance:** Water Resist (Splash Resistant)
- **Battery:** 1 Product Specific battery required
- **Functions:** Timekeeping, Daily Alarm, Stopwatch, Hourly Time Signal, LED Light

- **Dimensions:** Approximately 4.13 x 3.74 x 2.36 inches (Package Dimensions)
- **Weight:** Approximately 3 ounces (Package Weight)

WARRANTY AND SUPPORT

Your Casio F-94WA-9 Digital Watch is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical support, service, or warranty claims, please contact Casio customer service or visit the official Casio website for authorized service centers in your region. Keep your proof of purchase for warranty validation.

Note: Specifications and design are subject to change without notice for product improvement.