

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [INSIGNIA](#) /

› [Insignia NS-P4112 Portable CD Player with Skip Protection for CD, CD-R, CD-RW - Includes Headphones](#)

## INSIGNIA NS-P4112

# Insignia NS-P4112 Portable CD Player User Manual

Model: NS-P4112

## INTRODUCTION

---

Thank you for purchasing the Insignia NS-P4112 Portable CD Player. This manual provides essential information for setting up, operating, and maintaining your device. Please read this manual thoroughly before use to ensure proper functionality and longevity of your CD player.

## PRODUCT OVERVIEW

---

The Insignia NS-P4112 is a compact and portable CD player designed for on-the-go audio playback. It features skip protection to minimize interruptions during movement and is compatible with standard CD, CD-R, and CD-RW discs. The player is powered by AA batteries, offering flexibility for portable use.



Figure 1: Front view of the Insignia NS-P4112 Portable CD Player in its retail packaging, showing the player and its controls.

## PACKAGE CONTENTS

---

Ensure all items are present in the package:

- Insignia NS-P4112 Portable CD Player
- Headphones (behind-the-head type)
- 2 x AA Batteries
- User Manual (this document)



Figure 2: Rear view of the Insignia NS-P4112 Portable CD Player packaging, illustrating the included headphones and AA batteries.

## SETUP

### 1. Installing Batteries

1. Locate the battery compartment on the back of the CD player.
2. Open the battery compartment cover.
3. Insert two (2) AA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

## 2. Connecting Headphones

- Locate the headphone jack on the side of the CD player.
- Insert the 3.5mm plug of your headphones firmly into the headphone jack.

# OPERATING INSTRUCTIONS

---

## 1. Loading a CD

1. Gently press the OPEN button or slide the OPEN latch to open the CD compartment lid.
2. Place a CD, CD-R, or CD-RW disc onto the center spindle with the label side facing up.
3. Gently press down on the center of the disc until it clicks into place.
4. Close the CD compartment lid firmly until it latches.

## 2. Basic Playback

- **Play/Pause:** Press the **PLAY/PAUSE** button (▶ ||) to start or pause playback.
- **Stop:** Press the **STOP** button (■) to stop playback.
- **Skip Tracks:** Press the **SKIP FORWARD** (▶ ▶) or **SKIP BACKWARD** (◀ ◀) buttons to move to the next or previous track.
- **Fast Forward/Rewind:** Press and hold the **SKIP FORWARD** or **SKIP BACKWARD** buttons during playback to fast forward or rewind within a track.

## 3. Volume Control

Adjust the volume using the dedicated volume control wheel or buttons, typically located on the side or front of the player. Rotate the wheel or press the buttons to increase or decrease the audio output level.

## 4. Skip Protection

This CD player features up to 60 seconds of electronic skip protection. This function buffers audio data to prevent interruptions caused by minor shocks or vibrations during portable use. While effective, severe impacts may still cause skipping.

# MAINTENANCE

---

## Cleaning the CD Player

- Use a soft, dry cloth to wipe the exterior of the player.
- For stubborn marks, slightly dampen the cloth with water; avoid harsh chemicals or abrasive cleaners.
- Do not use liquids directly on the CD compartment or laser lens. If necessary, use a specialized CD lens cleaner disc.

## Battery Care

- Remove batteries if the player will not be used for an extended period to prevent leakage.
- Replace all batteries at the same time with new ones of the same type.

- Dispose of used batteries responsibly according to local regulations.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not turn on.	Batteries are dead or incorrectly inserted.	Replace batteries with new ones, ensuring correct polarity.
No sound from headphones.	Headphones not fully plugged in; volume too low; faulty headphones.	Ensure headphones are fully inserted. Increase volume. Test with another pair of headphones.
CD skips frequently.	Disc is dirty, scratched, or damaged; excessive movement; laser lens is dirty.	Clean the CD with a soft, lint-free cloth. Avoid strong vibrations. Clean the laser lens with a specialized cleaner.
CD does not play or "No Disc" error.	Disc inserted incorrectly; disc is severely damaged; incompatible disc type.	Ensure the disc is inserted correctly, label side up. Try a different, known-good CD. Verify disc type (CD, CD-R, CD-RW only).
Sudden loud noise or static.	Interference; internal electronic issue.	Move away from other electronic devices. If problem persists, contact customer support.

## SPECIFICATIONS

<b>Model Number</b>	NS-P4112
<b>Compatible Disc Types</b>	CD, CD-R, CD-RW
<b>Skip Protection</b>	Up to 60 seconds
<b>Power Source</b>	2 x AA Batteries
<b>Dimensions (L x W x H)</b>	9.02 x 7.01 x 2.36 inches
<b>Weight</b>	13.6 ounces
<b>Included Accessories</b>	Headphones, AA Batteries

## WARRANTY AND SUPPORT

### Limited Warranty

This Insignia product is covered by a 1-year limited warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. For full terms and conditions, please refer to the warranty information provided with your product packaging or visit the official Insignia website.

### Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact Insignia customer support. Contact information can typically be found on the product packaging or the official Insignia website. Please have your model

number (NS-P4112) and proof of purchase ready when contacting support.

You can also visit the [INSIGNIA Store on Amazon](#) for more product information and support resources.