

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Dodge](#) /
- › [Dodge 2000 Ram Pickup Owner's Manual](#)

## Dodge Ram Pickup

# 2000 Dodge Ram Pickup Owner's Manual

Essential information for the operation and maintenance of your vehicle.

## INTRODUCTION

---

This manual provides essential information for the basic operation of your 2000 Dodge Ram Pickup. It covers key aspects of vehicle use, maintenance, and safety to ensure a reliable and informed driving experience. Please read this manual thoroughly to familiarize yourself with your vehicle's features and functions.



Image: Front cover of the 2000 Dodge Ram Pickup Owner's Manual. The cover features the vehicle's branding and title.

## VEHICLE SETUP AND FAMILIARIZATION

---

Before operating your Dodge Ram Pickup, it is important to familiarize yourself with its controls and features. This section outlines initial setup procedures.

## Initial Checks

- **Fluid Levels:** Verify engine oil, coolant, brake fluid, and windshield washer fluid levels are within recommended ranges.
- **Tire Pressure:** Check tire pressure using a reliable gauge and adjust to the specifications found on the driver's side door jamb.
- **Lighting:** Confirm all exterior and interior lights are functioning correctly.
- **Seat and Mirror Adjustment:** Adjust the driver's seat and all mirrors for optimal visibility and comfort before driving.

## Understanding Controls

Locate and understand the function of the following key controls:

- Ignition switch and steering column controls.
- Headlight, turn signal, and wiper controls.
- Climate control system.
- Audio system.
- Power window and door lock switches.

## OPERATING INSTRUCTIONS

---

This section provides guidance on starting, driving, and parking your 2000 Dodge Ram Pickup.

### Starting the Engine

1. Ensure the transmission is in **Park (P)** or **Neutral (N)**.
2. Insert the key into the ignition and turn it to the **START** position.
3. Release the key once the engine starts.

### Driving the Vehicle

- **Automatic Transmission:** Select the desired gear (D for Drive, R for Reverse) after starting the engine.
- **Manual Transmission:** Depress the clutch pedal fully, select a gear, and slowly release the clutch while applying accelerator.
- Observe all traffic laws and speed limits.
- Maintain a safe following distance from other vehicles.

### Parking

- Apply the parking brake firmly.
- For automatic transmissions, shift to **Park (P)**. For manual transmissions, shift to **Reverse (R)** or **First (1st)** gear.
- Turn off the engine and remove the key.

## MAINTENANCE

---

Regular maintenance is crucial for the longevity and performance of your Dodge Ram Pickup. Refer to the full manual for detailed service schedules.

## Routine Checks

- **Oil Change:** Follow the recommended intervals for oil and filter changes.
- **Tire Rotation:** Rotate tires at specified mileage to ensure even wear.
- **Brake Inspection:** Regularly check brake pad wear and fluid levels.
- **Battery:** Inspect battery terminals for corrosion and ensure proper charge.
- **Wiper Blades:** Replace wiper blades when they no longer clear the windshield effectively.

## Fluid Specifications

Always use fluids that meet the specifications outlined in your full owner's manual to prevent damage to vehicle components.

## TROUBLESHOOTING COMMON ISSUES

---

This section addresses common issues you might encounter with your vehicle and provides basic troubleshooting steps.

### Engine Will Not Start

- **Battery:** Check for a dead or weak battery. Ensure terminals are clean and tight.
- **Fuel:** Verify there is sufficient fuel in the tank.
- **Ignition:** Ensure the key is fully inserted and turned correctly.
- **Transmission:** Confirm the transmission is in **Park (P)** or **Neutral (N)**.

### Warning Lights Illuminated

- **Check Engine Light:** This indicates an issue with the engine or emissions system. Consult a qualified service technician.
- **Oil Pressure Light:** Stop the vehicle immediately and check engine oil level. Do not drive with low oil pressure.
- **Brake Warning Light:** Indicates a problem with the braking system. Have the vehicle inspected by a professional.

### Flat Tire

- Safely pull over to the side of the road.
- Refer to the full manual for instructions on using the spare tire and jack.
- Contact roadside assistance if needed.

## SPECIFICATIONS

---

Key specifications for the 2000 Dodge Ram Pickup Owner's Manual document.

Specification	Detail
ASIN	B000VCV3XK
Publisher	Dodge

Specification	Detail
Publication Date	January 1, 2000
Language	English
Print Length	293 pages
Item Weight	12 ounces
Dimensions	11 x 8.5 x 0.58 inches

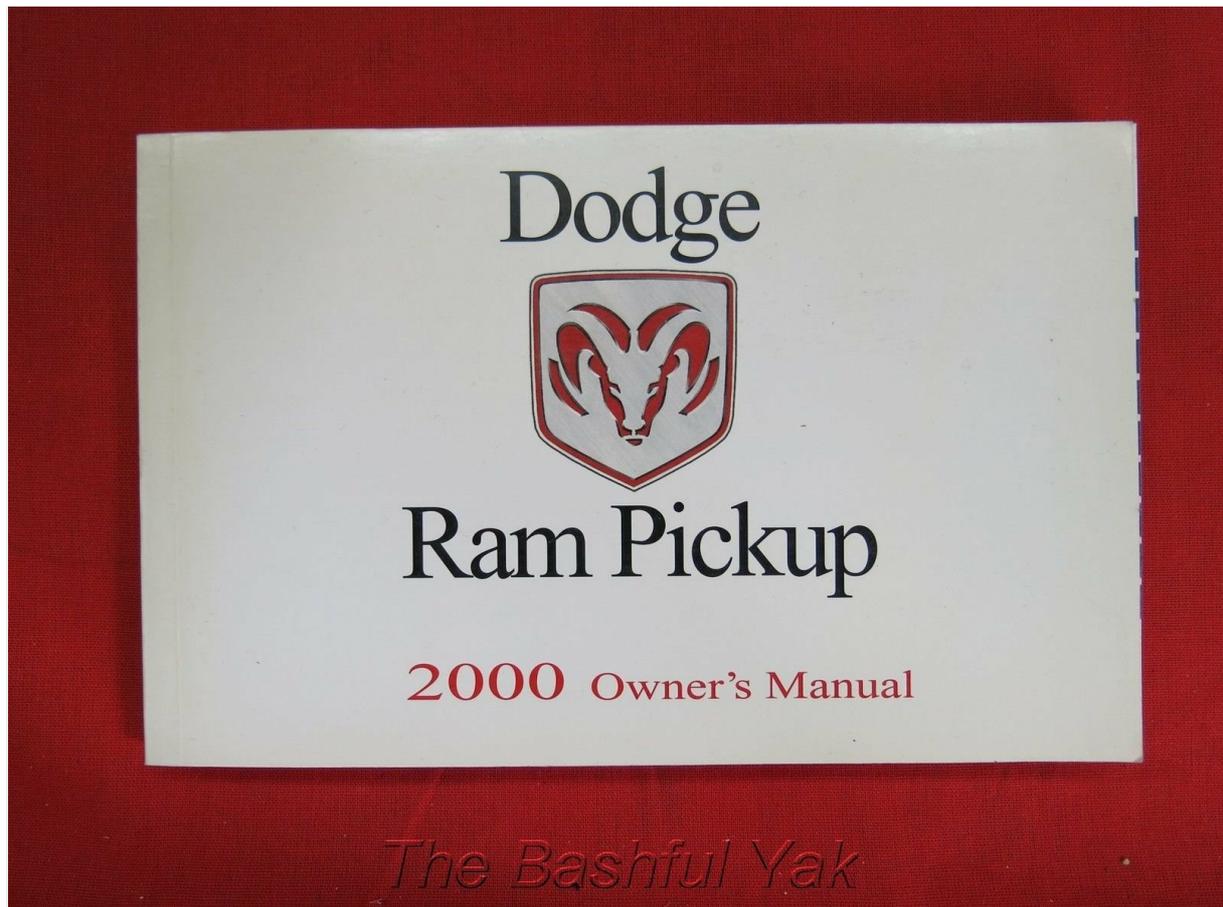


Image: Back cover of the 2000 Dodge Ram Pickup Owner's Manual. Details such as 'DaimlerChrysler Corporation', '81-326-0020', 'Second Edition', and 'Printed in U.S.A.' are visible.

## WARRANTY AND SUPPORT

---

For detailed information regarding your vehicle's warranty, service intervals, and customer support contacts, please refer to the complete 2000 Dodge Ram Pickup Owner's Manual or contact an authorized Dodge dealership. Specific warranty terms and conditions are typically provided in a separate booklet or within the comprehensive manual.