

[Manuals.plus](#) /

> [U.S. Traveler](#) /

> U.S. Traveler Rio Fabric Expandable Carry-on Luggage Instruction Manual

U.S. Traveler US5600K

U.S. Traveler Rio Fabric Expandable Carry-on Luggage Instruction Manual

Model: US5600K

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the proper use, care, and maintenance of your U.S. Traveler Rio 2-piece Carry-On Luggage Set. This set includes a 21-inch expandable wheeled upright suitcase and a 14-inch boarding bag, designed for convenient travel.

Both pieces are engineered to meet standard FAA carry-on regulations, offering a practical solution for air travel. The luggage features durable 1200D polyester construction, a retractable push-button handle system, and smooth-rolling inline skate wheels. The upright suitcase also includes an expandable feature for increased packing capacity.



Image 1.1: The U.S. Traveler Rio 2-piece Carry-On Luggage Set, featuring the 21-inch upright suitcase and the 14-inch boarding bag.

2. SETUP

Upon receiving your U.S. Traveler Rio luggage set, please follow these steps:

1. **Unpacking:** Carefully remove both the 21-inch upright suitcase and the 14-inch boarding bag from their packaging. Retain packaging materials for potential returns or future storage.
2. **Initial Inspection:** Inspect both luggage pieces for any signs of damage that may have occurred during shipping. Check zippers, handles, wheels, and fabric integrity. If any damage is found, refer to the Warranty and Support section.
3. **Handle Operation:** Familiarize yourself with the retractable handle system on the upright suitcase. Press the

button located on the handle grip and extend the handle to its full height. Release the button to lock it in place. To retract, press the button again and push the handle down.



Constructed of **durable 1200D** polyester



EVA padded front panel for extra durability



Multiple front zippered pockets for added storage of frequent items



Piggy-Bag strap for ease of carrying tote bag on top the luggage

Image 2.1: Detailed view of the luggage construction, highlighting the durable 1200D polyester fabric, EVA padded front panel, multiple front zippered pockets, and the piggy-bag strap for the boarding bag.

3. OPERATING INSTRUCTIONS

3.1 Using the Retractable Handle

The upright suitcase features a deluxe retractable push-button, self-locking handle system. To extend the handle, press the button on the top of the handle grip and pull upwards until it locks into position. To retract, press the button and push the handle downwards until it is fully stowed.

3.2 Rolling the Luggage

The 21-inch upright suitcase is equipped with inline skate wheels and corner protectors for smooth and quiet rolling.

Tilt the suitcase slightly and pull it behind you using the retractable handle. Ensure the path is clear of obstructions for optimal maneuverability.

3.3 Expanding Capacity

The 21-inch upright suitcase includes an expandable feature to provide additional packing capacity. Locate the expansion zipper running along the perimeter of the suitcase. Unzip this section to gain approximately 2 inches of extra depth for your belongings.



Image 3.1: Illustration demonstrating the expandable feature of the upright suitcase, showing how unzipping a section increases packing depth by 2 inches.

3.4 Using the Boarding Bag and Piggy-Bag Strap

The 14-inch boarding bag is designed to complement the upright suitcase. It features a piggy-bag strap on its rear panel, allowing it to slide securely over the retractable handle of the upright suitcase. This feature enables hands-free transport of both bags simultaneously.



VARIETY TRENDY COLORS



Image 3.2: A traveler demonstrating the use of the piggy-bag strap, with the boarding bag securely placed atop the upright suitcase for easy transport.

3.5 Packing Guidelines

- **Interior Organization:** The fully lined interior of the upright suitcase includes tie-down straps to secure your belongings and a large interior meshed zipper pocket for smaller items.
- **Front Pockets:** Utilize the multiple front zippered pockets for easy access to frequently needed items such as travel documents, books, or small electronics.
- **Weight Distribution:** For optimal stability, pack heavier items towards the bottom of the upright suitcase.



Top and side carry handles and **bottom grip handle**



Retractable push-button self-locking handle system



Inline skate wheels with corner protectors for smooth quiet rolling



Fully lined interior with tie-down straps and large interior mesh zipper pocket

Image 3.3: Close-up of various functional elements: top and side carry handles, bottom grip handle, inline skate wheels, the retractable handle system, and the fully lined interior with tie-down straps and a mesh zipper pocket.

4. MAINTENANCE

Proper maintenance will extend the life of your luggage set.

- **Cleaning Fabric:** For general cleaning, wipe the polyester fabric with a damp cloth and mild soap. For tougher stains, a soft brush can be used gently. Allow to air dry completely. Do not machine wash or tumble dry.
- **Wheel Care:** Periodically check the inline skate wheels for debris such as hair or lint. Remove any obstructions to ensure smooth rolling. If wheels become stiff, a small amount of silicone-based lubricant can be applied to the axle.
- **Zipper Maintenance:** Keep zippers clean and free of debris. If a zipper becomes stiff, apply a small amount of zipper lubricant or wax to the teeth.
- **Handle System:** Avoid forcing the retractable handle if it feels stuck. Keep the handle mechanism clean and free of dirt.

5. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Retractable Handle is Stuck:** Ensure the release button is fully depressed. Check for any fabric or objects obstructing the handle mechanism. Gently wiggle the handle while pressing the button. Do not apply excessive force.
- **Wheels are Not Rolling Smoothly:** Inspect the wheels for trapped debris (e.g., hair, string). Remove any obstructions. If the wheels are damaged, contact customer support.
- **Zipper is Difficult to Operate:** Check if any fabric is caught in the zipper teeth. Gently pull the fabric away and try to operate the zipper. If the zipper is stiff, apply a small amount of lubricant as described in the Maintenance section.
- **Suitcase Tends to Tip Over:** This can occur if heavier items are packed towards the top or front of the suitcase. Repack the suitcase, placing heavier items at the bottom and closer to the wheels for better stability.

If these troubleshooting steps do not resolve the issue, please refer to the Support section for further assistance.

6. SPECIFICATIONS

Key specifications for the U.S. Traveler Rio 2-piece Carry-On Luggage Set:

Feature	Description
Model Number	US5600K
Material	1200D Polyester
Upright Suitcase Dimensions	21 x 13.5 x 7.5 inches (H x W x D)
Upright Suitcase Weight	7.2 pounds
Boarding Bag Dimensions	14 x 9.5 x 5 inches (W x H x D)
Wheels	Inline Skate Wheels
Handle System	Retractable Push-Button, Self-Locking
Expansion	2-inch expandable feature on upright suitcase

DIMENSIONS



Image 6.1: Visual representation of the dimensions for both the 14-inch boarding bag and the 21-inch upright suitcase.



Image 6.2: Illustration indicating the maximum handle height of the upright suitcase, which extends to 42 inches.

7. WARRANTY

Your U.S. Traveler Rio luggage set is covered by a manufacturer's warranty. For detailed information regarding warranty terms, conditions, and coverage, please refer to the official warranty document.

[Download Warranty \(PDF\)](#)

8. SUPPORT

For additional assistance, questions, or to report issues not covered in this manual, please consult the official Instructions for Use document or contact U.S. Traveler customer service.

[Download Instructions for Use \(PDF\)](#)

You may also visit the [U.S. Traveler Store on Amazon](#) for more product information and contact options.

