

[Manuals.plus](#) /

› [Sandisk](#) /

› SanDisk Sansa Clip 1GB MP3 Player User Manual

SanDisk SDMX11R-001GK-A57

SanDisk Sansa Clip 1GB MP3 Player User Manual

Model: SDMX11R-001GK-A57

1. INTRODUCTION

The SanDisk Sansa Clip 1GB MP3 Player is a compact and lightweight portable audio device designed for listening to music, FM radio, and recording voice memos. Its integrated clip allows for convenient, hands-free use. This manual provides essential information for setting up, operating, and maintaining your Sansa Clip MP3 player.



Image of the SanDisk Sansa Clip 1GB MP3 Player, showing its compact design and clip.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your product package:

- SanDisk Sansa Clip MP3 Player (1GB)
- Clip accessory
- USB 2.0 Transfer Cable
- Earphones
- Quick Start Guide

3. SETUP

3.1 Charging the Device

Before initial use, fully charge your Sansa Clip MP3 player.

1. Connect the small end of the included USB 2.0 cable to the Sansa Clip's USB port.
2. Connect the large end of the USB cable to a powered USB port on your computer or a compatible USB wall adapter (sold separately).
3. The device will indicate that it is charging. A full charge provides up to 15 hours of continuous playback.

3.2 Connecting to a Computer

Use the USB 2.0 cable to connect your Sansa Clip to a computer for transferring audio files and synchronizing content.

- Connect the Sansa Clip to your computer using the USB cable.
- The device will appear as a removable storage device on your computer.
- Drag and drop compatible audio files (MP3, WMA, secure WMA, Audible) into the device's music folder.
- Safely eject the device from your computer before disconnecting the USB cable.

4. OPERATING INSTRUCTIONS

4.1 Basic Controls and Navigation

The Sansa Clip features a small screen and intuitive buttons for navigation.

- **Power/Play/Pause Button:** Press and hold to power on/off. Press briefly to play or pause playback.
- **Volume Buttons:** Use '+' and '-' buttons to adjust the volume.
- **Navigation Pad:** Use the directional buttons (up, down, left, right) to navigate menus. The center button selects options.
- **Back Button:** Returns to the previous menu or screen.

4.2 Playing Music

The Sansa Clip supports MP3, WMA, secure WMA, and Audible file formats.

1. From the main menu, select "Music".
2. Navigate through your music library by Artist, Album, Song, or Playlist.
3. Select a song or playlist to begin playback.
4. Use the navigation buttons to skip tracks or fast forward/rewind within a track.

4.3 Using the FM Radio

The built-in digital FM tuner allows you to listen to radio broadcasts.

1. From the main menu, select "FM Radio".
2. Use the navigation buttons to scan for stations or tune manually.
3. You can save up to 20 preset stations for quick access.
4. Ensure earphones are connected as they act as the antenna for the FM radio.

4.4 Voice Recording

The integrated microphone allows for convenient voice recording.

1. From the main menu, select "Voice".
2. Select "Record" to start a new recording.
3. Press the Play/Pause button to stop recording.
4. Recordings can be transferred to your computer via the USB cable.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid exposing the device to extreme temperatures. Recharge the battery regularly, even if not in frequent use. The battery is not user-replaceable.
- **Storage:** Store the device in a cool, dry place when not in use.

6. TROUBLESHOOTING

Problem	Solution
Device does not power on.	Ensure the battery is charged. Connect to a USB power source and allow it to charge for at least 30 minutes.
Cannot transfer files to the device.	Verify the USB cable is securely connected to both the device and the computer. Ensure the device is recognized by your computer. Try a different USB port.
No sound during playback.	Check that earphones are properly plugged in. Adjust the volume level. Ensure the audio files are not corrupted.
FM radio reception is poor.	Ensure earphones are connected, as they function as the antenna. Move to an area with better signal reception.

7. SPECIFICATIONS

Brand	SanDisk
Model Name	Sansa Clip
Item Model Number	SDMX11R-001GK-A57

Memory Storage Capacity	1 GB
Connectivity Technology	USB 2.0
Supported Audio Formats	MP3, WMA, secure WMA, Audible
Special Features	FM Radio (20 presets), Voice Recorder (built-in microphone)
Battery Life	Up to 15 hours continuous playback
Product Dimensions	2.17 x 0.65 x 1.35 inches
Item Weight	1.6 ounces
Color	Black

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official SanDisk website or contact SanDisk customer service. Keep your proof of purchase for warranty claims.

[Visit SanDisk Support](#)