

Casio DW-9052

Casio G-Shock DW-9052-2V Digital Watch User Manual

Model: DW-9052-2V

INTRODUCTION

This manual provides comprehensive instructions for the proper setup, operation, and maintenance of your Casio G-Shock DW-9052-2V digital watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. The Casio G-Shock DW-9052-2V is designed for durability and functionality, featuring shock resistance and 200-meter water resistance.

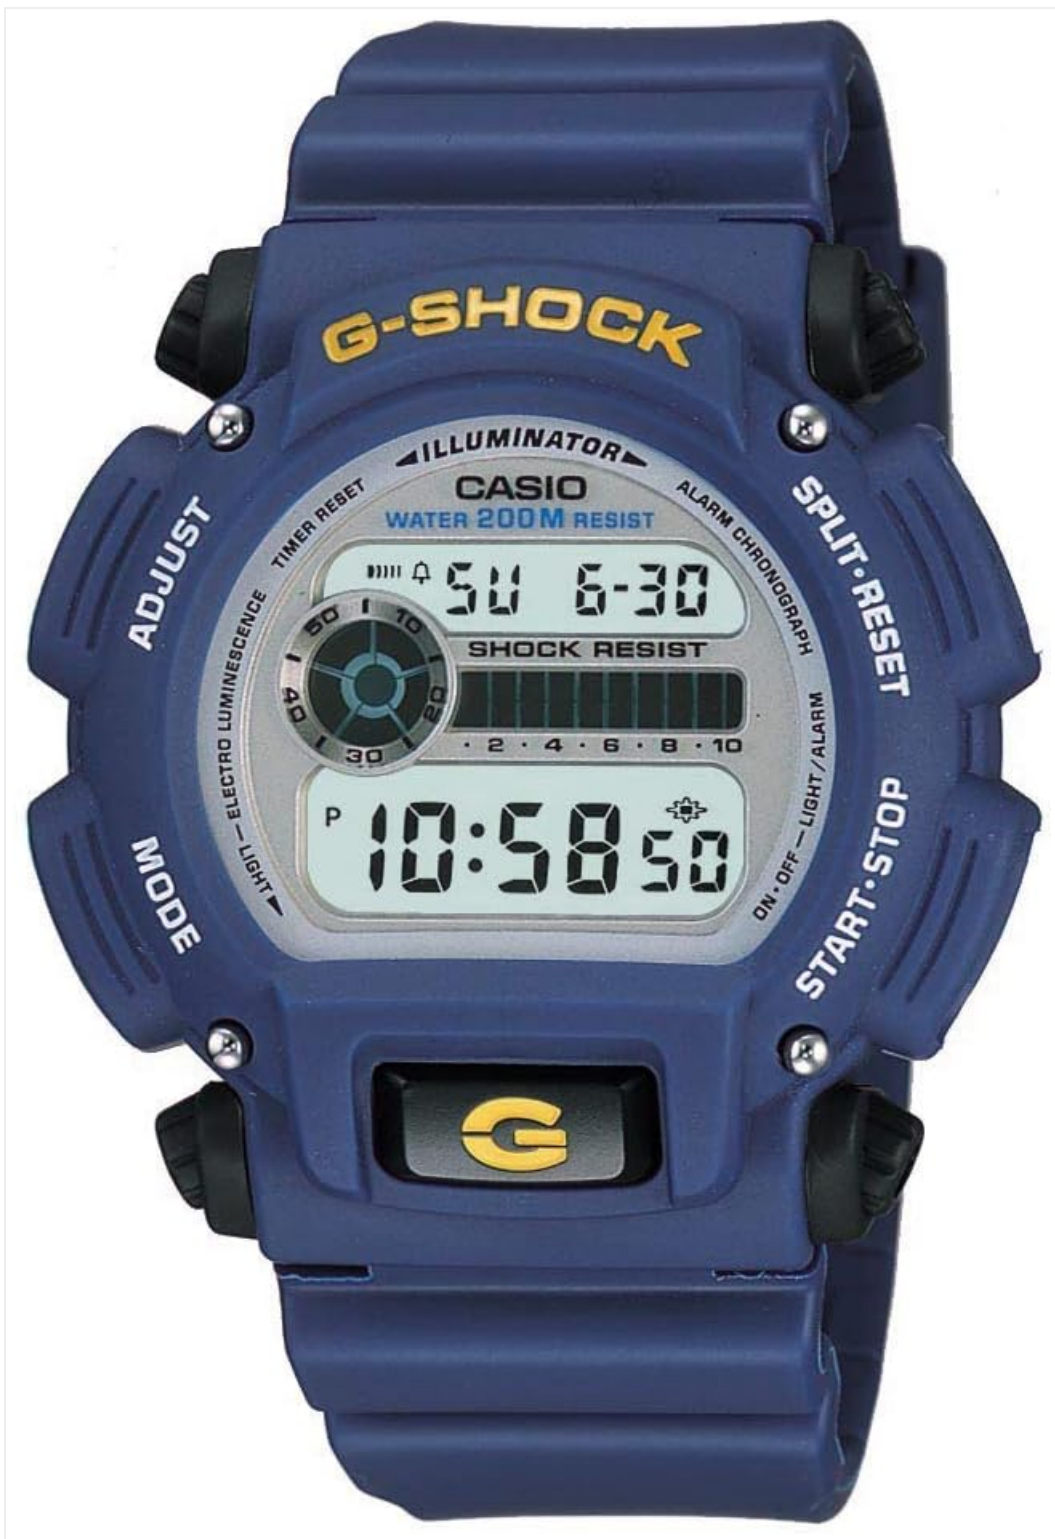


Image: Front view of the Casio G-Shock DW-9052-2V digital watch, showcasing its blue resin case and band, digital display, and prominent G-Shock branding. The watch face indicates time, date, and various function labels around the bezel.

SETUP

Initial Time and Date Setting

1. In the Timekeeping Mode, press and hold the **ADJUST** button until the seconds begin to flash, indicating the setting screen.
2. Press the **MODE** button to cycle through the settings: Seconds → Hour → Minute → Year → Month → Day.
3. Use the **START/STOP** button to increase the flashing value or the **SPLIT/RESET** button to decrease it.

4. To switch between 12-hour and 24-hour format, press the **START/STOP** button while the hour/minute setting is flashing.
5. Once all settings are correct, press the **ADJUST** button to exit the setting screen.

Backlight Configuration

The electro-luminescent backlight can be configured to flash with alarms, the countdown timer, and the hourly time signal.

- In Timekeeping Mode, press the **ADJUST** button to enter setting mode.
- Cycle through settings using the **MODE** button until you reach the 'Flash Alert' setting (indicated by a symbol or text).
- Use the **START/STOP** button to toggle the Flash Alert function ON or OFF.
- Press **ADJUST** to confirm and exit.

OPERATING THE WATCH

The watch features multiple modes accessible via the **MODE** button. Pressing the **MODE** button cycles through Timekeeping, Alarm, Countdown Timer, and Stopwatch modes.

Timekeeping Mode

This is the default mode, displaying the current time (hour, minute, second), day of the week, and date. Press the **LIGHT** button to illuminate the display.

Alarm Mode

To set an alarm:

1. From Timekeeping Mode, press **MODE** until 'ALM' (Alarm) appears.
2. Press and hold **ADJUST** until the alarm time digits flash.
3. Use **MODE** to select hour or minute. Use **START/STOP** to change the value.
4. Press **ADJUST** to set the alarm.
5. To activate/deactivate the alarm or hourly time signal, press **START/STOP** in Alarm Mode.

Countdown Timer Mode

The countdown timer can be set for up to 24 hours.

1. From Timekeeping Mode, press **MODE** until 'TMR' (Timer) appears.
2. Press and hold **ADJUST** until the timer setting flashes.
3. Use **MODE** to select hour, minute, or second. Use **START/STOP** to change the value.
4. Press **ADJUST** to set the timer.
5. Press **START/STOP** to start or stop the countdown. Press **SPLIT/RESET** to reset.

Stopwatch Mode

The stopwatch measures elapsed time in 1/100-second increments.

1. From Timekeeping Mode, press **MODE** until 'STW' (Stopwatch) appears.
2. Press **START/STOP** to start or stop the stopwatch.
3. Press **SPLIT/RESET** to record split times or to reset the stopwatch to zero when stopped.

Electro-Luminescent Backlight

Press the **LIGHT** button (located at the bottom center of the watch face) to illuminate the display for easy viewing in low light conditions. The illumination duration is preset.



Image: The Casio G-Shock DW-9052-2V digital watch worn on a wrist, demonstrating its fit and size. The blue resin band and case are visible, along with the digital display showing the time.

MAINTENANCE

Cleaning

- Wipe the watch with a soft, dry cloth to remove dirt and moisture.
- For stubborn dirt, use a soft cloth dampened with water and a mild neutral detergent. Avoid harsh chemicals or solvents.
- After exposure to saltwater, rinse the watch thoroughly with fresh water and dry it completely.

Water Resistance

The DW-9052-2V is water resistant to 200 meters (660 feet). This rating means it is suitable for professional marine activity and serious surface water sports. It is not suitable for scuba diving. To maintain water resistance:

- Do not operate buttons while the watch is submerged in water.
- Avoid exposing the watch to extreme temperature changes, which can affect the water resistance gaskets.
- Have the gaskets checked periodically by an authorized service center, especially after several years of use.

Battery Replacement

The watch uses one CR2 battery, which typically lasts for approximately 2 years. When the display becomes dim or functions become erratic, it is time to replace the battery. Battery replacement should be performed by a qualified technician to ensure proper sealing and water resistance.



Image: The black and red G-Shock branded product packaging box for the Casio DW-9052-2V watch. This box protects the watch during transport and storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidental adjustment.	Refer to the 'Initial Time and Date Setting' section to reset the time.
Buttons are unresponsive.	Watch may be in a specific mode or internal issue.	Ensure watch is not submerged. If issue persists, contact Casio service.
Water inside the display.	Compromised water resistance.	Immediately take the watch to an authorized service center. Do not attempt to dry it yourself.

For more complex issues or repairs, please contact an authorized Casio service center. Do not attempt to open or repair the watch yourself, as this may void the warranty and compromise its water and shock resistance.

SPECIFICATIONS


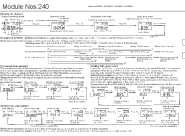
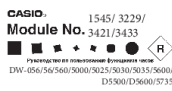
- **Model Number:** DW-9052-2V


- **Case Dimensions:** Approximately 45.5 mm (diameter)
- **Water Resistance:** 200 meters (660 feet)
- **Shock Resistance:** Yes (G-Shock structure)
- **Display Type:** Digital
- **Movement:** Quartz
- **Battery Type:** 1 x CR2 (included)
- **Battery Life:** Approximately 2 years
- **Functions:** Timekeeping (12/24-hour format), Multi-function Alarm, Hourly Time Signal, 1/100-second Stopwatch, Countdown Timer, Electro-Luminescent Backlight with Afterglow.
- **Case/Band Material:** Resin
- **Crystal Material:** Mineral Glass

WARRANTY AND SUPPORT

Warranty information for your Casio G-Shock DW-9052-2V watch is typically provided with the product packaging or can be found on the official Casio website. Please retain your proof of purchase for warranty claims. For further support, product registration, or to locate an authorized service center, please visit the official Casio website or contact their customer service department.

Related Documents - DW-9052

	Casio G-SHOCK Watch User Manual and International Warranty Information Comprehensive guide to Casio G-SHOCK watches, including model numbers, user instructions, international warranty details, service center information, and care instructions.
	Casio Module 240 Watch Operation Guide Comprehensive guide to operating the Casio Module 240 watch, covering timekeeping, stopwatch, countdown alarm, daily alarm, and calendar settings. Learn how to use all functions with detailed instructions.
	CASIO G-SHOCK Watch User Manual and International Warranty Comprehensive guide for CASIO G-SHOCK watches, covering operation, water resistance, care, and international warranty details. Includes model numbers DW-056 to D5735 and modules 1545, 3229, 3421, 3433.

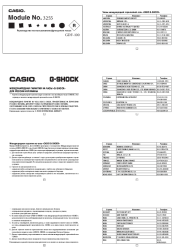	<p>Casio G-SHOCK GDF-100 Watch User Manual</p> <p>Comprehensive user manual for the Casio G-SHOCK GDF-100 watch, covering features, operation, maintenance, and international warranty information.</p>
	<p>Casio G-SHOCK Watch User Manual and International Warranty Information</p> <p>Comprehensive user manual for Casio G-SHOCK watches, covering module numbers 1289, 1659, 3230, 3232, 1595. Details features, operation modes (time, alarm, timer, stopwatch), care instructions, water resistance, and international warranty network.</p>
	<p>Casio G-SHOCK GLS-6900 Watch User Manual and Specifications</p> <p>Comprehensive guide to the Casio G-SHOCK GLS-6900 digital watch, covering timekeeping, alarms, stopwatch, timer, world time, water resistance, and international distributor information.</p>

DW-9052 3232 150 דולר

הוראות ללחיצה

לחיצה על כפתור C על מנת לקבוע מנגנון לוח
בזמן שבו חיצונית נמצאת לוח על כפתור D על מנת להציג את המספר

1. לחיצה על כפתור A, תוצאת השעות תהיה 12:00
2. לחיצה על כפתור C, תוצאת השעות תהיה 12:00
3. לחיצה על כפתור E, תוצאת השעות תהיה 12:00
4. לחיצה על כפתור E, תוצאת השעות תהיה 12:00
5. לחיצה על כפתור E, תוצאת השעות תהיה 12:00

1. לחיצה על כפתור A, תוצאת השעות תהיה 12:00
2. לחיצה על כפתור C, תוצאת השעות תהיה 12:00
3. לחיצה על כפתור E, תוצאת השעות תהיה 12:00
4. לחיצה על כפתור E, תוצאת השעות תהיה 12:00
5. לחיצה על כפתור E, תוצאת השעות תהיה 12:00

הצגת השעה

1. לחיצה על כפתור A, תוצאת השעות תהיה 12:00
2. לחיצה על כפתור C, תוצאת השעות תהיה 12:00
3. לחיצה על כפתור E, תוצאת השעות תהיה 12:00
4. לחיצה על כפתור E, תוצאת השעות תהיה 12:00
5. לחיצה על כפתור E, תוצאת השעות תהיה 12:00

הצגת השעה

1. לחיצה על כפתור A, תוצאת השעות תהיה 12:00
2. לחיצה על כפתור C, תוצאת השעות תהיה 12:00
3. לחיצה על כפתור E, תוצאת השעות תהיה 12:00
4. לחיצה על כפתור E, תוצאת השעות תהיה 12:00
5. לחיצה על כפתור E, תוצאת השעות תהיה 12:00

[pdf]

TANDIO casio t and i co il מנת לעבור ממצב למצב לחץ כפתור DW 9052 3232 ספר למנגנון

2020 05 |||

DW-9052 3232 . C . D . , A . 1 . C . 2 E , . 3 . 00 . - B E . 4 E , . 14 - 11 . A , . 5 , , . D . , E , . . , 10- . . , . A , . 1 ...

lang:i-klngon score:22 filesize: 349.84 K page_count: 3 document date: 2014-09-09

2018年4月27日

お客様各位

4月27日号チラシに掲載の商品について

本日はご来店頂きまして誠にありがとうございます。

4/27(金)より開催のチラシに掲載しております。

5月4日(金祝)日替り商品「CASIO G-SHOCK DW-9052-2 ¥3,990+税」につきまして、掲載写真に誤りがございました。

誤)

正)

誤)

正)

正しくはこちらの写真となります。

お客様には、大変ご迷惑をおかけする結果となり、深くお詫言申し上げます。御事に容赦いただきますようお願い申し上げます。

株式会社
ドンキホーテ

2018 Don Quijote Co.,Ltd

[pdf]

2007 19 PIC 007 Apr 27 2018 · 4 5 CASIO G

SHOCK DW 9052 2 ¥3 990 1 tEC76 donki updata news |||

2018 4 27 4 27 4/27 5 4 CASIO G-SHOCK DW-9052-2 3,990 2018 Don Quijote Co.,Ltd ...

lang:i-klngon score:22 filesize: 154.43 K page_count: 1 document date: 2018-04-27

Click to verify

Casio G-Shock Watch Guide: History, Models, and Time Setting

Explore the history and evolution of Casio G-Shock watches, discover key models like the Gravitymaster and Rangeman, and learn how to set the time on your digital or analog G-Shock timepiece.

lang:en score:12 filesize: 515.48 K page_count: 19 document date: 2025-06-20

