

[Manuals.plus](#) /

- › [SEB](#) /
- › SEB 790076 Genuine Pressure Cooker Valve Instruction Manual

SEB 790076

SEB 790076 Genuine Pressure Cooker Valve Instruction Manual

Brand: SEB | Model: 790076 (Y250076)

INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your SEB 790076 Genuine Pressure Cooker Valve. This valve is designed to regulate pressure in compatible SEB Authentic Pressure Cookers and Cocotte Minute models, ensuring safe and efficient cooking.

PRODUCT OVERVIEW

The SEB 790076 Pressure Cooker Valve is a critical component for maintaining the correct pressure within your pressure cooker. It is a black, metal valve designed for durability and precise pressure regulation.



Figure 1: The SEB 790076 Genuine Pressure Cooker Valve. This image shows the black top and silver metal base of the valve.

Key features include:

- **Pressure Regulation:** Ensures optimal pressure levels for various cooking needs.
- **Genuine Part:** Designed specifically for Authentic Pressure Cookers and Cocotte Minute.
- **Durable Construction:** Made from metal with a black finish for longevity.

SETUP AND INSTALLATION

Before installing the new valve, ensure your pressure cooker is completely cool and depressurized. Refer to your pressure cooker's main instruction manual for specific lid assembly details.

1. **Remove Old Valve:** Carefully remove the existing pressure regulating valve from the pressure cooker lid. This may involve unscrewing or gently pulling it off, depending on your specific pressure cooker model.
2. **Inspect Lid:** Check the valve opening on the pressure cooker lid for any debris or damage. Clean if necessary.
3. **Install New Valve:** Place the SEB 790076 valve into the designated opening on the pressure cooker lid. Ensure it is seated firmly and correctly. The valve should fit snugly to prevent steam leakage during operation.



Figure 2: Diagram illustrating the general placement of a pressure cooker valve on a lid. The image shows a hand placing the valve onto the lid of a pressure cooker.

OPERATING INSTRUCTIONS

The SEB 790076 valve is designed for manual operation. Once installed, it will begin to regulate pressure as the cooker heats up. Always ensure the valve is clean and free of obstructions before each use.

- **Placement:** Ensure the valve is correctly placed on the pressure cooker lid before heating.
- **Pressure Release:** The valve will release steam to maintain the desired pressure. A gentle, steady rocking or hissing indicates proper operation.

- **Monitoring:** While this valve helps regulate pressure, it is always recommended to monitor your pressure cooker during operation, especially if your model includes a pressure gauge.

Understanding Pressure Regulation (Illustrative Videos)

The following videos demonstrate the general concept of pressure regulation in pressure cookers. While they may feature different models or adjustable weights, the underlying principles of pressure release and maintenance are applicable.

Your browser does not support the video tag.

Video 1: This video demonstrates how a 3-piece adjustable pressure canner weight works, showing how different rings can be added or removed to achieve 5, 10, or 15 pounds of pressure. This illustrates the concept of pressure regulation.

Your browser does not support the video tag.

Video 2: This video provides a general overview of a pressure cooker valve, showing its components and how it functions on a pressure cooker lid.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your pressure cooker valve.

- **Cleaning:** After each use, allow the valve to cool completely. Wash it with warm, soapy water and rinse thoroughly. Ensure no food particles or residue are lodged in the valve mechanism.
- **Inspection:** Periodically inspect the valve for any signs of wear, cracks, or damage. Ensure the black top is securely attached to the metal base. If any damage is observed, replace the valve immediately.
- **Storage:** Store the valve in a clean, dry place when not in use.

TROUBLESHOOTING

If you encounter issues with your pressure cooker valve, consider the following:

- **Steam Leaking Excessively:**
 - Ensure the valve is correctly seated on the pressure cooker lid.
 - Check for any food particles or debris obstructing the valve's movement.
 - Inspect the valve for damage or wear. A damaged valve may need replacement.
- **No Pressure Build-up:**
 - Verify the valve is properly installed and not loose.
 - Check the pressure cooker lid gasket for proper sealing and any damage.
 - Ensure the heat source is adequate for pressure build-up.

For persistent issues, consult your pressure cooker's main instruction manual or contact SEB customer support.

SPECIFICATIONS

Brand	SEB
Model Number	790076 (Y250076)
Material	Metal
Color	Black
Product Dimensions	4.96"D x 6.93"W x 1.18"H
Item Weight	41 Grams (1.45 ounces)

Operation Mode	Manual
----------------	--------

WARRANTY AND SUPPORT

For warranty information or technical support regarding your SEB 790076 Genuine Pressure Cooker Valve, please refer to the documentation provided with your original SEB pressure cooker or visit the official SEB website for customer service contact details.

© 2026 SEB. All rights reserved. Information subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question