

- Manuals.plus /
- › SEB /
 - › SEB 790071 Authentic Black Tightening Knob User Manual

SEB 790071

User Manual

SEB 790071 AUTHENTIC BLACK TIGHTENING KNOB

Model: 790071 | Brand: SEB

Introduction

This manual provides essential information for the installation, operation, and maintenance of your SEB 790071 Authentic Black Tightening Knob. This component is specifically designed for SEB Cocotte Minute and Authentique pressure cookers, ensuring a secure and hermetic seal for safe and efficient cooking. Please read these instructions carefully before use to ensure proper function and longevity of your appliance.

Product Overview

The SEB 790071 tightening knob is a crucial replacement part for your SEB pressure cooker lid. It features a "Securivis" tightening limiter, which regulates the lid's tightening to maintain its effectiveness over time, ensuring gasket longevity and ease of sealing.



Figure 1: Top view of the SEB 790071 Authentic Black Tightening Knob. This image shows the knob with clear markings for locking and unlocking, and the SEB logo prominently displayed.



Figure 2: Side view of the SEB 790071 Authentic Black Tightening Knob. This perspective highlights the ergonomic design and the base that connects to the pressure cooker lid.

Setup and Installation

The tightening knob is designed for easy replacement on compatible SEB pressure cooker lids. Follow these steps for proper installation:

1. **Preparation:** Ensure your pressure cooker is completely cool and empty. Remove the lid from the cooker body.
2. **Remove Old Knob (if applicable):** If replacing an existing knob, carefully unscrew or detach the old knob from the lid. There may be a screw on the underside of the lid that secures the knob.
3. **Position New Knob:** Align the new SEB 790071 tightening knob with the designated mounting point on the pressure cooker lid. Ensure the knob sits flush and correctly oriented.
4. **Secure Knob:** Insert the securing screw (if provided with the new knob or if reusing the old one) through the underside of the lid and into the knob's base. Tighten the screw firmly but do not overtighten, as this could damage the knob or lid. The "Securivis" limiter will prevent excessive tightening.
5. **Test Seal:** After installation, place the lid on your pressure cooker and attempt to close it using the new tightening knob. Ensure it rotates smoothly and creates a tight, hermetic seal.

Note: If you encounter any resistance or difficulty during installation, refer to your specific pressure cooker's original instruction manual or contact SEB customer support.

Operating Instructions

The tightening knob is integral to the safe operation of your SEB pressure cooker. Its primary function is to secure the lid and ensure a proper seal before cooking under pressure.

- **Closing the Lid:** Place the pressure cooker lid onto the pot, aligning any indicators on the lid and pot rim. Rotate the tightening knob clockwise until it is firmly secured. The "Securivis" system will ensure optimal tightening without over-stressing the components.
- **Opening the Lid:** After cooking, ensure the pressure has fully released from the cooker before attempting to open the lid. Rotate the tightening knob counter-clockwise to unlock the lid. Never force the lid open if pressure is still present.

Safety Precaution: Always ensure the lid is properly sealed before heating the pressure cooker. Refer to your pressure cooker's main manual for detailed safety guidelines regarding pressure cooking.

Maintenance

To ensure the longevity and optimal performance of your SEB 790071 tightening knob, follow these maintenance guidelines:

- **Cleaning:** The knob can be cleaned with warm, soapy water. Rinse thoroughly and dry completely before reattaching to the lid or storing. Avoid abrasive cleaners or scouring pads that could damage the surface.
- **Inspection:** Periodically inspect the knob for any signs of wear, cracks, or damage. Check that it rotates smoothly and that the "Securivis" limiter functions correctly.
- **Gasket Longevity:** The tightening knob's design helps preserve the life of your pressure cooker's gasket. However, regularly inspect the gasket itself for cracks or hardening and replace it as recommended by your pressure cooker's manual.

Troubleshooting

If you encounter issues with your tightening knob, consider the following common problems and solutions:

Problem	Possible Cause	Solution
Knob is difficult to turn or feels stiff.	Accumulation of food residue or mineral deposits.	Clean the knob and the lid's mounting area thoroughly. Ensure no debris is obstructing movement.
Lid does not seal properly after tightening.	Incorrect installation of the knob; worn or damaged gasket; lid misalignment.	Re-install the knob, ensuring it is correctly seated and secured. Inspect and replace the lid gasket if necessary. Ensure the lid is properly aligned with the pot.
Knob feels loose after tightening.	Securing screw is loose or damaged; internal mechanism issue.	Check and tighten the securing screw from the underside of the lid. If the issue persists, the knob may need replacement.

If these troubleshooting steps do not resolve the issue, please contact SEB customer support for further assistance.

Specifications

- **Product Type:** Tightening Knob
- **Model Number:** 790071
- **Brand:** SEB
- **Color:** Black
- **Material:** Stainless Steel
- **Dimensions (L x W x H):** Approximately 11.81 x 11.61 x 4.6 cm
- **Weight:** Approximately 20 grams
- **Compatibility:** Designed for SEB Cocotte Minute and Authentique pressure cookers.
- **Special Feature:** "Securivis" tightening limiter for regulated sealing.

Warranty and Support

All SEB items sold benefit from the legal guarantee of conformity and the guarantee against hidden defects. For further assistance, technical support, or warranty claims, please contact SEB customer service through their official website or authorized service centers. Keep your proof of purchase for warranty validation.

Please note that this manual is for the tightening knob (part 790071) and not the complete pressure cooker. Refer to your pressure cooker's main manual for comprehensive instructions and safety information.

© 2025 SEB. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B000VQVVMY>

More documents and user manuals: <https://manuals.plus/>