

[Manuals.plus](#) /

› [Braun](#) /

› Braun BC 1400 Swing Hairdryer User Manual

Braun BC 1400

Braun BC 1400 Swing Hairdryer User Manual

Model: BC 1400

INTRODUCTION

Thank you for choosing the Braun BC 1400 Swing Hairdryer. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before use and keep them for future reference.

IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, burns, fire, or injury to persons:

- Do not use this appliance near water, such as bathtubs, showers, basins, or other vessels containing water.
- Always unplug the appliance immediately after use.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Do not place or store the appliance where it can fall or be pulled into a tub or sink.
- Keep the cord away from heated surfaces.
- Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

PACKAGE CONTENTS

- Braun BC 1400 Swing Hairdryer
- Extra slim professional nozzle (Concentrator)
- Powerflower attachment (Diffuser)
- User Manual



Image: The Braun BC 1400 Swing Hairdryer in white and grey, with green buttons, shown alongside its black Powerflower attachment.

SETUP

1. **Unpack:** Carefully remove the hairdryer and all accessories from the packaging.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Attach Nozzle/Diffuser:** To attach the extra slim professional nozzle (concentrator) or the Powerflower attachment (diffuser), align the attachment with the front of the hairdryer and push it firmly into place until it clicks. Ensure it is securely fastened before use.
4. **Power Connection:** Ensure your hands are dry, then plug the hairdryer into a suitable 230V electrical outlet.

OPERATING INSTRUCTIONS

The Braun BC 1400 Swing Hairdryer features two combined heat and fan settings, plus a cold shot function for versatile styling.

1. **Power On/Off:** Plug the hairdryer into a power outlet. Use the main switch (typically located on the handle) to turn the appliance on or off.
2. **Adjusting Heat and Fan Settings:** The hairdryer offers 2 combined heat and fan settings. Slide the switch on the handle to select your desired intensity.
 - Setting 1: Lower heat and fan speed for gentle drying or styling.
 - Setting 2: Higher heat and fan speed for fast drying.
3. **Cold Shot Function:** Press and hold the dedicated cold shot button (usually a separate button, often green) to instantly switch to cool air. Release the button to return to the previous heat setting. This helps to set your hairstyle and add shine.
4. **Using Attachments:**
 - **Extra Slim Professional Nozzle (Concentrator):** Use this attachment to direct airflow precisely for targeted

drying and styling, ideal for straightening or smoothing hair.

- **Powerflower Attachment (Diffuser):** This attachment is designed to distribute air gently and evenly, enhancing natural curls and waves while reducing frizz. Hold the diffuser close to your scalp and move it in circular motions.

5. **After Use:** Turn off the hairdryer using the main switch and unplug it from the power outlet. Allow the appliance to cool down before storing.

MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your hairdryer.

1. **Cleaning the Air Filter:**

- Ensure the hairdryer is unplugged and completely cool.
- Locate the removable air filter cover at the back of the hairdryer.
- Gently twist or pull off the filter cover.
- Remove any accumulated dust, lint, or hair from the filter using a soft brush or by rinsing it under running water (if detachable and specified as washable). Ensure it is completely dry before reattaching.
- Reattach the filter cover securely.

Note: A clogged filter can lead to overheating and reduced performance. Clean regularly.

2. **Cleaning the Exterior:** Wipe the exterior of the hairdryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
3. **Storage:** Store the hairdryer in a dry place, away from moisture and direct sunlight. Do not wrap the power cord tightly around the appliance, as this can damage the cord. Use the hanging loop for convenient storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Hairdryer does not turn on.	Not plugged in; power outlet malfunction; internal fault.	Ensure the plug is fully inserted. Test the outlet with another appliance. If still not working, contact customer support.
Airflow is weak or inconsistent.	Clogged air filter; motor obstruction.	Clean the air filter as described in the Maintenance section. Ensure no foreign objects are blocking the air intake or outlet.
Hairdryer overheats and shuts off.	Clogged air filter; prolonged use; internal safety mechanism activated.	Unplug the hairdryer and allow it to cool down for at least 10-15 minutes. Clean the air filter. Avoid blocking air vents during use.
Attachments do not stay on.	Incorrect attachment; worn attachment mechanism.	Ensure you are using the correct attachments for this model. Push firmly until it clicks. If the issue persists, the attachment or hairdryer may be worn.

SPECIFICATIONS

Model: BC 1400

Brand: Braun

Power Consumption: 1400 Watt

Voltage: 230V

Heat/Fan Settings: 2 combined settings

Special Features: Cold shot function, Compact, Lightweight

Included Attachments: Extra slim professional nozzle (Concentrator), Powerflower attachment (Diffuser)

Material: Plastic

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Braun website. Keep your proof of purchase for any warranty claims.

Online Support: www.braun.com

© 2024 Braun. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B000VZCJZS>

More documents and user manuals: <https://manuals.plus/>