

PanDigital PAN70-0

Pandigital 7-Inch LCD Digital Picture Frame User Manual

Model: PAN70-0

[Introduction](#)[Safety Information](#)[Package Contents](#)[Parts Description](#)[Setup](#)[Operating Instructions](#)[Maintenance](#)[Troubleshooting](#)[Specifications](#)[Warranty & Support](#)

1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Pandigital 7-Inch LCD Digital Picture Frame (Model PAN70-0). This device allows you to display digital photos, play videos, and listen to music on its 7.0-inch crystal clear LCD screen. It features 128MB of internal memory, a remote control, and a black wood frame design. Key functionalities include a programmable alarm clock/calendar and an energy-saving programmable on/off feature.

2. SAFETY INFORMATION

- Read all instructions before operating the device.
- Keep the device away from water, moisture, and extreme temperatures.
- Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.
- Use only the power adapter supplied with the unit.
- Ensure proper ventilation; do not block ventilation openings.
- Clean the device only with a soft, dry cloth.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Pandigital 7-Inch LCD Digital Picture Frame
- AC Power Adapter
- Remote Control (requires 1 CR2 battery, not always included)
- User Manual (this document)

4. PARTS DESCRIPTION

4.1 Front View

The front of the digital picture frame features the 7-inch LCD display, encased in a black wood frame.

4.2 Rear View and Controls

The rear of the frame houses the control buttons, memory card slots, power input, and the extendable stand.



Image 1: Rear view of the digital picture frame with controls and power adapter connected.

Key Controls (from left to right, as seen on the back panel):

- **NEXT:** Navigates to the next item or option.
- **PREV:** Navigates to the previous item or option.
- **UP:** Moves selection up in menus.
- **DOWN:** Moves selection down in menus.
- **COPY/DELETE/ROTATE:** Performs copy, delete, or rotate functions depending on the current mode.
- **MENU:** Accesses the main menu or confirms selection.
- **MODE:** Switches between different display modes (e.g., photo, video, music, clock).
- **PLAY/PAUSE:** Starts or pauses playback of media.
- **POWER:** Turns the device on or off.

The extendable stand, labeled "PULL TO EXTEND", allows the frame to stand upright on a flat surface.

5. SETUP

1. **Unpack the Frame:** Carefully remove the digital picture frame and all accessories from the packaging.
2. **Position the Stand:** Locate the extendable stand on the back of the frame. Gently pull it out until it locks into position, allowing the frame to stand securely on a flat surface.
3. **Connect Power:** Insert the small end of the AC power adapter into the DC IN port on the back of the frame. Plug the other end of the adapter into a standard electrical outlet.
4. **Insert Remote Battery:** If the remote control battery (CR2) is not pre-installed, open the battery compartment on the remote and insert the battery, observing correct polarity.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off

Press the **POWER** button on the back of the frame or on the remote control to turn the device on or off.

6.2 Inserting Memory Cards

The frame supports various memory card types (e.g., SD, MMC, MS, xD). Locate the memory card slot(s) on the side or back of the frame. Insert your memory card firmly until it clicks into place. The frame should automatically detect the card and begin displaying content, or prompt you to select a mode.

6.3 Navigating Menus and Content

Use the **NEXT**, **PREV**, **UP**, and **DOWN** buttons on the frame or remote to navigate through photos, videos, music, and menu options. Press the **MENU** button to access the main settings or confirm a selection. The **MODE** button cycles through different display modes.

6.4 Photo Playback

In photo mode, the frame will automatically start a slideshow of images found on the inserted memory card or internal memory. Use **NEXT/PREV** to manually advance photos. Use the **COPY/DELETE/ROTATE** button to manage images as needed.

6.5 Video and Music Playback

Switch to video or music mode using the **MODE** button. Select your desired file using the navigation buttons and press **PLAY/PAUSE** to start playback. Press **PLAY/PAUSE** again to pause.

6.6 Clock, Calendar, and Programmable On/Off

Access the settings menu via the **MENU** button to configure the clock and calendar functions. The programmable on/off feature allows you to set specific times for the frame to power on and off automatically, conserving energy.

7. MAINTENANCE

- **Cleaning the Screen:** Use a soft, lint-free cloth specifically designed for electronics screens. Do not use abrasive cleaners or sprays directly on the screen.
- **Cleaning the Frame:** Wipe the black wood frame with a soft, dry cloth. Avoid using harsh chemicals.
- **Storage:** When not in use for extended periods, disconnect the power adapter and store the frame in a cool, dry place.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Frame does not power on.	Power adapter not connected or faulty.	Ensure the power adapter is securely connected to both the frame and a working electrical outlet. Test the outlet with another device.
No images displayed.	No memory card inserted or card is empty/corrupt. Incorrect file format.	Insert a memory card with compatible image files. Ensure files are in a supported format (e.g., JPEG). Check if the card is properly inserted.
Remote control not working.	Battery is dead or incorrectly inserted. Obstruction between remote and frame.	Replace the CR2 battery in the remote. Ensure correct polarity. Remove any obstructions between the remote and the frame's IR receiver.
Images appear distorted or low resolution.	Image resolution is too low for the frame's display.	Use higher resolution images for better display quality. The frame's native resolution is 480x234.

9. SPECIFICATIONS

- **Model Number:** PAN70-0
- **Screen Size:** 7 Inches
- **Display Type:** LCD
- **Resolution:** 480 x 234 (WQVGA)
- **Aspect Ratio:** 16:9
- **Internal Memory:** 128 MB
- **Control Method:** Remote, Buttons
- **Connectivity Technology:** Wired
- **Compatible Devices:** Personal Computer, Smartphone (for file transfer)
- **Power Source:** Corded Electric
- **Frame Material:** Wood
- **Product Dimensions:** 30.48 x 29.21 x 10.16 cm

- **Product Weight:** 1.54 kg
- **Batteries Required (Remote):** 1 CR2 battery

10. WARRANTY & SUPPORT

Warranty Description: This product comes with a 90 Days Parts & Labor warranty from the date of purchase.

Manufacturer: Lamorinda Distributing

Manufacturer Contact Information: DUBLIN, CA, 94568 US

For technical support or warranty claims, please contact the manufacturer directly using the provided contact information.