

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VIPER](#) /

> [Viper 474V 4-Button Remote User Manual](#)

VIPER 474V

Viper 474V 4-Button Remote User Manual

Model: 474V | Brand: VIPER

PRODUCT OVERVIEW

The Viper 474V is a 4-button remote control designed for use with compatible Viper vehicle security and remote start systems. This remote allows for convenient control of your vehicle's security features, including locking, unlocking, auxiliary functions, and remote start/panic.



Image: Viper 474V 4-Button Remote. This image displays the front of the remote control, featuring four distinct buttons: a lock icon, an unlock icon, an 'AUX' button, and an orange button with a speaker/horn icon. The Viper logo is visible below the buttons, and a metal key ring is attached at the bottom.

SETUP AND PROGRAMMING

To program your Viper 474V remote to your vehicle's security system, follow these steps. Ensure you have located your system's valet switch, typically found under the driver's lower dash or on the driver's side kick panel. The

exact procedure may vary slightly depending on whether your Viper system includes a remote start module.

1. **Prepare the Vehicle:** Open the driver's side door.
2. **Ignition On:** Insert the key into the ignition and turn it to the "Run" position. Do not start the engine. All dashboard warning lights should illuminate.
3. **Access Programming Mode:**
 - **With Remote Start Module:** Press and release the valet button once. This selects Channel 1.
 - **Without Remote Start Module:** Press and release the valet button seven (7) times. This selects Channel 7.
4. **Confirm Channel Selection:** Press the valet button once more and hold it down. The alarm LED on the dash will flash the same number of times as the selected channel (1 or 7), and the siren (if connected) will chirp to confirm. Continue holding the valet button.
5. **Program the Remote:** While still holding the valet button, press the "Lock" button on your new Viper 474V remote. Hold the "Lock" button until the siren sounds, indicating successful programming.
6. **Exit Programming Mode:** Release the "Lock" button on the remote, then release the valet button. Turn the ignition key to the "Off" position and remove it from the vehicle. Close the driver's door.
7. **Test the Remote:** Test the new remote by attempting to lock and unlock the vehicle.

Note: If you wish to erase all previously programmed remotes and program only the new one, consult your system's specific installation manual for the master reset procedure, which typically involves a different valet button sequence.

OPERATING INSTRUCTIONS

The Viper 474V remote features four buttons for controlling your vehicle's security system:

- **Lock Button ():** Press to arm the security system and lock the vehicle doors.
- **Unlock Button ():** Press to disarm the security system and unlock the vehicle doors.
- **AUX Button:** This button controls an auxiliary function, which can be programmed for various purposes such as trunk release, power windows, or other accessories. Refer to your system's installation manual for the specific function assigned to this button.
- **Orange Button (Speaker/Horn Icon):** This button typically activates the remote start function (if installed and programmed) or the panic alarm.
 - **Remote Start:** Press twice to activate remote engine start.
 - **Panic:** Press and hold for a few seconds to activate the panic alarm. Press again to deactivate.

Note: Button sensitivity is high. Be mindful when carrying the remote in pockets to avoid unintentional activation of functions like remote start or panic.

MAINTENANCE

Battery Replacement

The Viper 474V remote is powered by a small battery. If the remote's range decreases significantly or it stops responding, the battery may need replacement. To replace the battery:

1. Carefully open the remote casing. This usually involves prying it open along the seam with a small, flat tool.
2. Note the type and orientation of the existing battery.
3. Remove the old battery and insert a new one of the same type, ensuring correct polarity.
4. Close the remote casing securely.

Always dispose of old batteries responsibly according to local regulations.

TROUBLESHOOTING

- **Remote Not Responding:**
 - Check the battery. Replace if necessary.
 - Ensure the remote is within range of the vehicle's receiver.
 - Re-attempt the programming steps outlined in the "Setup and Programming" section.
 - Verify that the valet switch is functioning correctly.
- **Unintentional Activations:**
 - The buttons on the 474V remote are sensitive. Avoid placing the remote in tight pockets or areas where buttons might be accidentally pressed.
- **Limited Range:**
 - Replace the remote battery.
 - Ensure there are no large metallic objects or electronic devices interfering with the signal between the remote and the vehicle.

SPECIFICATIONS

- **Model Number:** 474V
- **Brand:** VIPER
- **Product Dimensions:** 8 x 6 x 1.75 inches
- **Item Weight:** 2.4 ounces
- **Connectivity Technology:** Infrared
- **Special Feature:** Ergonomic design
- **Compatible Devices:** Vehicle Alarm Systems
- **Max Number of Supported Devices:** 1

WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance with your Viper 474V remote or associated vehicle security system, please refer to the documentation provided with your complete Viper system or contact Directed Electronics Inc., the manufacturer, directly. You can typically find support contact details on the manufacturer's official website.

It is recommended to register your product with the manufacturer, if applicable, to ensure you receive updates and support.