

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Sony](#) /
- › [Sony Cyber-shot DSC-T2 Digital Camera Instruction Manual](#)

Sony DSC-T2

Sony Cyber-shot DSC-T2 Digital Camera Instruction Manual

Model: DSC-T2

INTRODUCTION

This manual provides comprehensive instructions for the safe and effective use of your Sony Cyber-shot DSC-T2 digital camera. The DSC-T2 is an 8.1-megapixel camera featuring a 3x optical zoom Carl Zeiss lens, a 2.7-inch touch-panel LCD, and 4GB of internal memory. Key features include Face Detection, Smile Shutter, and optical image stabilization, designed to assist in capturing clear images.

Please read this manual thoroughly before operating the camera and retain it for future reference.



Figure 1: Front view of the Sony Cyber-shot DSC-T2 Digital Camera with the lens cover open, showing the lens, flash, and 8.1-megapixel branding.

WHAT'S IN THE BOX

Verify that all items are present in the packaging:

- Sony Cybershot DSC-T2 Digital Camera
- InfoLithium (NP-BD1) Battery
- Battery Charger
- USB Cable

SETUP

1. Charging the Battery

1. Insert the InfoLithium (NP-BD1) battery into the supplied battery charger.
2. Connect the charger to a power outlet. The charging indicator will illuminate.
3. Once charging is complete (indicator light changes or turns off), remove the battery.

2. Inserting the Battery

1. Open the battery/memory card cover on the camera.
2. Insert the charged battery into the battery compartment, ensuring correct orientation.
3. Close the battery/memory card cover securely.

3. Memory Storage

The DSC-T2 features 4GB of internal memory. For additional storage, a Memory Stick Duo or Memory Stick Pro Duo card can be inserted into the designated slot.

4. Initial Power On

Slide the lens cover open to power on the camera. The LCD screen will activate. Follow any on-screen prompts for initial setup, such as setting the date and time.



Figure 2: Top view of the Sony Cyber-shot DSC-T2 camera with the lens cover slid open, revealing the lens and power button.

OPERATING INSTRUCTIONS

Basic Operation

Power On/Off

- To power on, slide the lens cover downwards.
- To power off, slide the lens cover upwards to close it.

Taking Photos

1. Ensure the camera is powered on and in shooting mode.
2. Frame your shot using the 2.7-inch touch-panel LCD.
3. Press the shutter button halfway to focus. The camera will automatically detect faces and can activate Smile Shutter mode to capture a smile.
4. Press the shutter button fully to take the picture.

Zoom Function

Use the zoom controls (typically marked 'W' for Wide and 'T' for Telephoto) to adjust the focal length. The camera features a 3x optical zoom and up to 6x digital zoom.

Reviewing Photos (Playback Mode)

1. Press the Playback button (often indicated by a triangle icon).
2. Navigate through images by swiping the touch screen or using directional controls.

3. Tap the screen to access options like zooming in on an image or deleting.
4. The camera's album folder allows organization by chronological order or calendar view. Favorite photos can be moved to a "favorites" folder for quick access.



Figure 3: Rear view of the Sony Cybershot DSC-T2, highlighting the 2.7-inch touch-panel LCD screen displaying a vibrant image.

Advanced Features

Shooting Modes

The DSC-T2 offers various shooting modes to optimize settings for different scenes, including Automatic, Manual, Portrait, Landscape, and Sports. Select the appropriate mode via the on-screen menu.

Video Recording

To record videos, switch to video mode. The camera supports video capture at 640 x 480 resolution at 30 frames per second (MP4 format).

Connecting to a Computer

Use the supplied USB cable to connect the camera to a computer. The pre-loaded Sony PMB Portable software can automatically run, allowing for easy transfer and sharing of photos and videos.

HD Output

For high-definition viewing, the camera can be connected to an HDTV using an optional HD component cable or HD cradle (sold separately). This allows for viewing photos in 1080 HD resolution with a built-in slideshow function.

MAINTENANCE

Cleaning the Camera

- **Camera Body:** Wipe the camera body with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using strong cleaning agents.
- **Lens:** Use a lens brush or a blower to remove dust. For smudges, use a lens cleaning cloth

specifically designed for optical surfaces. Do not touch the lens surface with your fingers.

- **LCD Screen:** Gently wipe the screen with a soft, lint-free cloth. Avoid pressing too hard on the touch screen.

Battery Care

- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging the battery frequently to prolong its lifespan.
- If the camera will not be used for an extended period, remove the battery.

Storage

Store the camera in a dry, well-ventilated area, away from direct sunlight, extreme temperatures, and high humidity. Use a protective case to prevent scratches and impacts.

TROUBLESHOOTING

This section provides general guidance for common issues. For detailed troubleshooting steps or issues not listed here, please refer to the official Sony support website or contact customer service.

- **Camera does not power on:** Ensure the battery is fully charged and correctly inserted. Close and reopen the lens cover.
- **Cannot take pictures:** Check if the memory (internal or Memory Stick) is full. Ensure the lens cover is fully open.
- **Images are blurry:** Verify that the lens is clean. Ensure the camera is held steady or use optical image stabilization. Check lighting conditions; use flash if necessary.
- **Touch screen unresponsive:** Gently clean the screen. Power off and restart the camera.
- **Computer does not recognize camera:** Ensure the USB cable is securely connected to both the camera and the computer. Try a different USB port.

SPECIFICATIONS

Feature	Specification
Model Name	DSC-T2
Image Sensor	8.1-megapixel Super HAD CCD (1/2.5-inch)
Effective Still Resolution	8 MP
Optical Zoom	3x Carl Zeiss Vario-Tessar Lens
Digital Zoom	6x
Focal Length (Minimum)	38 Millimeters
Focal Length (Maximum)	114 Millimeters
Image Stabilization	Optical
LCD Screen	2.7-inch Widescreen Clear Photo LCD Plus (Touch Panel)
Internal Memory	4 GB

Feature	Specification
External Memory Type	Memory Stick Duo / Pro Duo
Expanded ISO Range	80 - 3200
Shutter Speed Range	1/1000 to 1 second
Video Resolution	640 x 480 (30 fps), MP4 format
Connectivity	USB 2.0, HDMI (via optional cable/cradle)
Battery Type	InfoLithium (NP-BD1)
Item Height	2.24 inches
Item Weight	0.34 Pounds
Color	Black

WARRANTY AND SUPPORT

Sony products are covered by a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Sony support website. The website also provides access to drivers, software updates, and additional troubleshooting resources.

For customer support, please contact Sony customer service through their official channels, which can be found on the Sony website.