

[Manuals.plus](#) /

› [Mondaine](#) /

› Mondaine Official Swiss Railways Magnet Clock, 50mm Wall & Table Clock Instruction Manual

Mondaine A660.30318.81SBB

Mondaine Official Swiss Railways Magnet Clock (Model A660.30318.81SBB) Instruction Manual

Your guide to setup, operation, and maintenance.

INTRODUCTION

Thank you for choosing the Mondaine Official Swiss Railways Magnet Clock. This clock combines iconic Swiss design with versatile functionality, allowing it to be used as a magnetic wall clock or a table clock with the included stand. This manual provides essential information for the proper setup, operation, and care of your new timepiece.

PACKAGE CONTENTS

- Mondaine Official Swiss Railways Magnet Clock (50mm)
- Table Stand
- Instruction Manual (this document)



Image: The Mondaïne Magnet Clock, its table stand, and warranty card neatly packaged in its box.

SETUP

1. Battery Installation

The clock is powered by a single battery. If the clock is not running, or if the timekeeping becomes inaccurate, the battery may need to be installed or replaced.

1. Carefully turn the clock over to access the back panel.
2. Locate the battery compartment cover. This is typically a small, circular cover that can be opened by twisting it counter-clockwise using a coin or a suitable tool.
3. Insert a new battery (type specified in the Specifications section) with the positive (+) side facing up.
4. Replace the battery compartment cover by twisting it clockwise until secure.



Image: The rear view of the clock, highlighting the battery compartment and time-setting crown.

2. Setting the Time

To set the correct time:

1. Locate the small crown (knob) on the back or side of the clock.
2. Gently pull the crown outwards. The second hand will stop moving.
3. Rotate the crown to adjust the hour and minute hands to the desired time.
4. Once the time is set, push the crown back into its original position. The second hand will resume movement.



Image: A detailed view of the clock's face, showing the distinct black hands and the iconic red second hand.

3. Placement Options

Your Mondaine clock offers versatile placement:

- **Magnetic Surface:** The clock features a strong magnet on its back, allowing it to be securely attached to metallic surfaces such as refrigerators, filing cabinets, or magnetic boards.
- **Tabletop:** Use the included stand to display the clock on any flat surface, such as a desk, shelf, or bedside table.



Image: The clock magnetically affixed to a metal surface, demonstrating its magnetic functionality.



Image: The clock positioned on a wooden table with its stand, illustrating its use as a table clock.



Image: Two clocks displayed, one utilizing the stand for tabletop use and another without, highlighting its adaptability.

OPERATING INSTRUCTIONS

Once the battery is installed and the time is set, your Mondaine clock will operate continuously, displaying the current time with its distinctive hour, minute, and red second hands. The Swiss Quartz movement ensures accurate timekeeping.

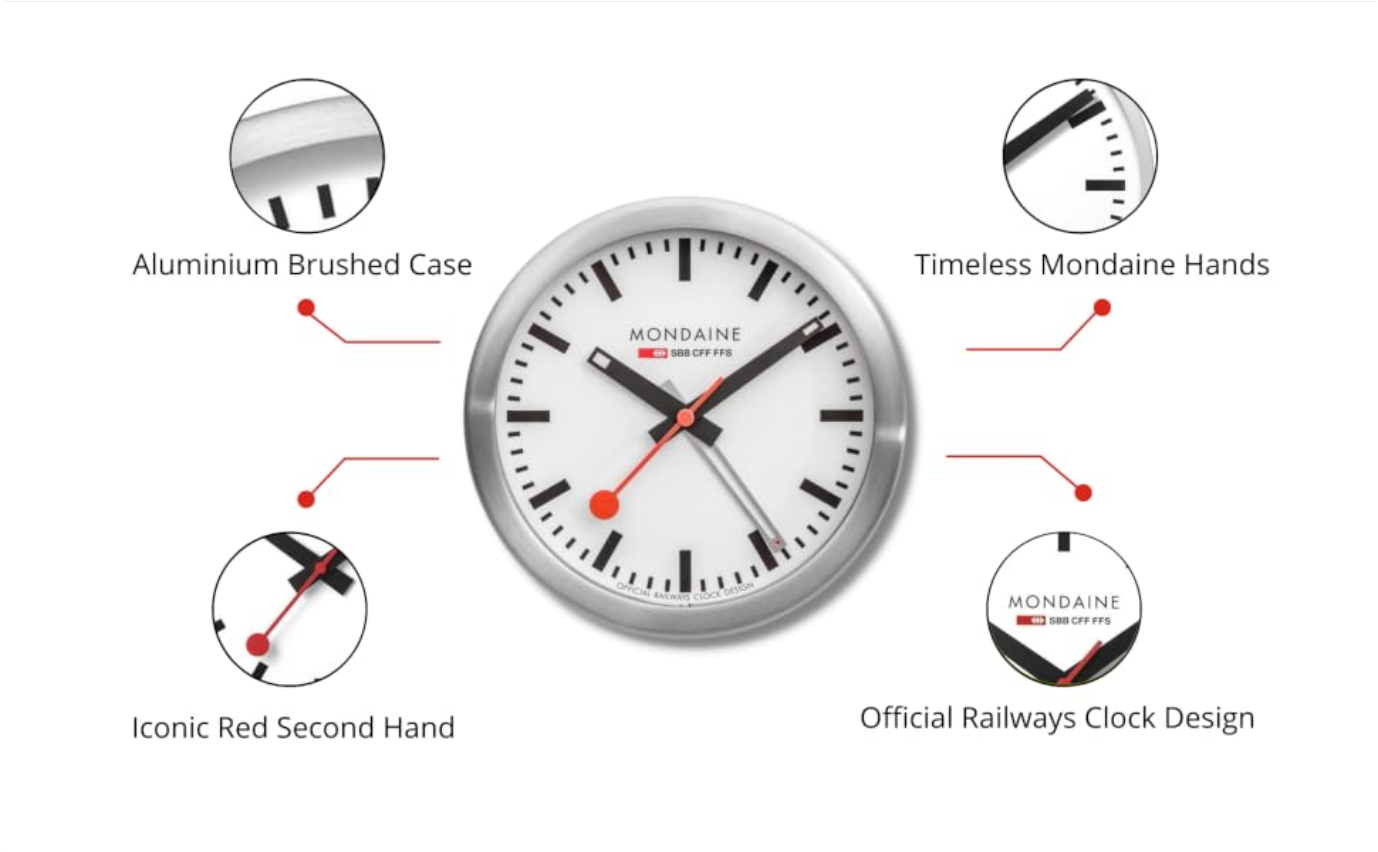


Image: A diagram highlighting the key design elements of the Mondaine clock, including its brushed aluminum case and signature red second hand.

MAINTENANCE

Cleaning

To clean your clock, gently wipe the case and crystal with a soft, dry, lint-free cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the finish or the sapphire glass.

Battery Replacement

When the clock stops or runs inaccurately, it is time to replace the battery. Refer to the 'Battery Installation' section for detailed steps. It is recommended to have the battery replaced by a qualified watch technician to prevent damage to the clock, especially to the back panel or crystal, as some users have reported difficulty with self-replacement.

Water Resistance

The clock is water-resistant up to 30 meters. This means it is protected against splashes and brief immersion in water, such as rain or hand washing. It is **not** suitable for swimming, showering, or diving. Avoid exposing the clock to hot water or steam, as this can compromise the water resistance seals.

TROUBLESHOOTING

- **Clock not running:** Check if the battery is correctly installed and fully charged. Replace the battery if necessary.
- **Time is inaccurate:** This usually indicates a low battery. Replace the battery. If the issue persists after battery replacement, contact customer support.
- **Hands are stuck:** Ensure the time-setting crown is fully pushed in. If the hands remain stuck, do not force them; contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	A660.30318.81SBB
Brand	Mondaine
Display Type	Analog
Movement Type	Swiss Quartz Movement
Power Source	Battery-powered
Case Material	Stainless Steel
Crystal Material	Sapphire Glass
Case Diameter	50 mm
Case Thickness	1.2 cm
Item Weight	72 Grams
Dial Color	White
Water Resistance	30 Meters (Splash resistant)

Feature	Detail
Country of Origin	Switzerland
UPC	046928941544
GTIN	07611382534873

WARRANTY INFORMATION

The warranty for your Mondaine clock may vary by provider or region. Please refer to the warranty card included in your package or contact your retailer for specific details regarding warranty coverage and terms.

SUPPORT

For further assistance, technical support, or inquiries regarding your Mondaine Official Swiss Railways Magnet Clock, please contact the retailer where you purchased the product or visit the official Mondaine website for customer service contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question