

BRIO 33391

BRIO 33391 Collapsing Bridge Instruction Manual

INTRODUCTION

The BRIO 33391 Collapsing Bridge is an interactive accessory designed to enhance your BRIO World railway experience. This set encourages imaginative play and helps develop fine motor skills and spatial awareness in children aged 3 years and older. It is fully compatible with all BRIO railway parts, allowing for seamless integration into existing layouts.

This manual provides essential information on the product's components, setup, operation, and care to ensure a safe and enjoyable play experience.

PACKAGE CONTENTS

The BRIO 33391 Collapsing Bridge set includes the following 3 pieces:

- 1 x Collapsing Bridge
- 2 x Ascending Track Pieces

3
PIECES



x1



x2

Image: The three components of the BRIO Collapsing Bridge set.

SETUP

The BRIO 33391 Collapsing Bridge requires no assembly. Simply connect the two ascending track pieces to each end of the collapsing bridge. Ensure the track pieces are securely connected to form a continuous railway path. The bridge can then be integrated into your existing BRIO World railway layout.

Play, Create, & Explore!



x1



x2

Includes a collapsing bridge & two tracks—
perfect for adding interactive excitement to
your BRIO railway adventures.

3 pieces

3+ years
old

Image: The Collapsing Bridge assembled with ascending tracks.



OPERATING INSTRUCTIONS

The Collapsing Bridge features an interactive mechanism for dynamic play:

- **To Collapse the Bridge:** Locate the red button on the side of the bridge structure. Press this button to activate the collapsing mechanism. The bridge deck will split and fall, creating a gap in the railway. This action can be used to simulate train accidents or create exciting challenges for your railway vehicles.
- **To Reset the Bridge:** To restore the bridge to its functional state, simply push the two halves of the bridge deck back together by hand until they lock into place. This allows trains to cross safely again.

Press to Collapse!

Press the red button to make the bridge collapse, halting trains until it's rebuilt.

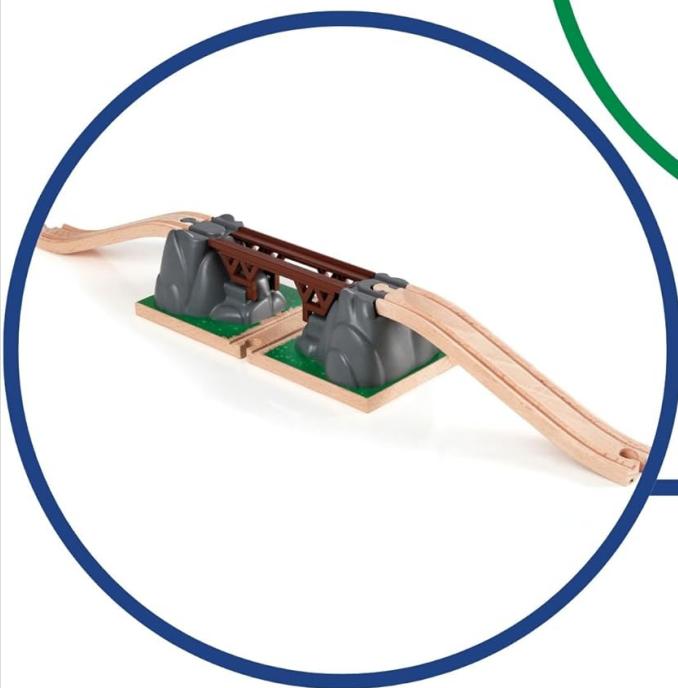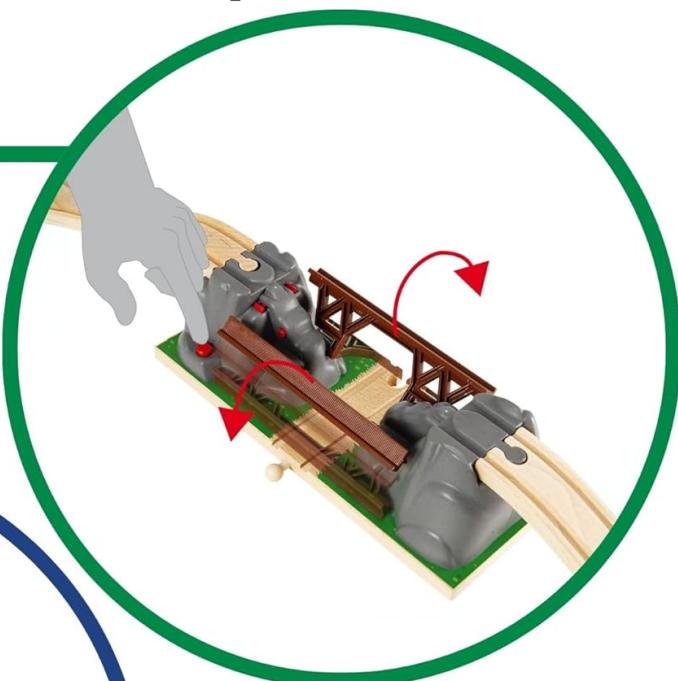

Easily reset the bridge by hand to encourage continuous play and enhance problem-solving skills.

Image: Instructions for collapsing and resetting the bridge.

MAINTENANCE

To ensure the longevity and cleanliness of your BRIO Collapsing Bridge:

- **Cleaning:** Wipe the product with a damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these may damage the wood or plastic components.
- **Storage:** Store the bridge in a dry place away from direct sunlight and extreme temperatures to prevent warping or fading of materials.

TROUBLESHOOTING

If you encounter any issues with your Collapsing Bridge:

- **Bridge not collapsing/resetting smoothly:** Check for any obstructions in the mechanism. Ensure the parts are clean and free from debris. If the issue persists, gently try to operate the mechanism a few times to loosen it.
- **Tracks not connecting:** Ensure the track pieces are aligned correctly and pushed firmly into place. BRIO tracks are designed for a snug fit.

SPECIFICATIONS

- **Model Number:** 33391
- **Product Dimensions (LxWxH):** 66 x 12 x 7 cm (26 x 4.7 x 2.8 inches)
- **Product Weight:** 525 g (1.16 lbs)
- **Recommended Age:** 36 months to 10 years (3-10 years)
- **Number of Parts:** 3
- **Material:** FSC-certified European Beech Wood, High-quality Plastic
- **Assembly Required:** No
- **Batteries Required:** No

SAFETY INFORMATION

This product is designed for children aged 3 years and older. Please ensure children play under appropriate supervision. Regularly inspect the product for any damage or loose parts that could pose a choking hazard or injury risk. Discontinue use if any damage is found.

WARRANTY AND SUPPORT

For information regarding warranty, returns, or product support, please refer to the retailer's policy where the product was purchased or visit the official BRIO website. Keep your proof of purchase for any warranty claims.