

[Manuals.plus](#) /

› [Sony Ericsson](#) /

› Sony Ericsson W910i Mobile Phone User Manual

Sony Ericsson W910i

Sony Ericsson W910i Mobile Phone User Manual

Model: W910i | Brand: Sony Ericsson

INTRODUCTION

Welcome to the user manual for your Sony Ericsson W910i mobile phone. This guide provides detailed instructions to help you get started, operate, and maintain your device. The W910i is a Walkman series phone featuring a 2.4-inch display, a 2-megapixel camera, 3G connectivity, and advanced music capabilities. Please read this manual carefully to ensure proper use and to maximize your phone's potential.

1. SETUP

1.1 Package Contents

Before you begin, ensure your package contains the following items:

- Sony Ericsson W910i Mobile Phone
- Battery
- USB Cable
- Charger (may vary by region)
- Headphones
- 1GB Memory Stick Micro (M2) card

1.2 Installing the SIM Card and Battery

To begin using your phone, you must install the SIM card and battery.

1. Remove the back cover of the phone.
2. Insert your SIM card into the designated slot with the gold contacts facing down and the cut corner aligned correctly.
3. Insert the battery, ensuring the contacts align with those in the phone.
4. Replace the back cover until it clicks into place.



Image: Sony Ericsson W910i with the slider open, revealing the numeric keypad. This view also indicates the general area for SIM card and battery access, typically under the back cover.

1.3 Inserting a Memory Stick Micro (M2) Card

The W910i supports Memory Stick Micro (M2) cards for expanded storage, especially for music and photos. A 1GB card is typically included.

1. Locate the M2 card slot on the side of the phone.
2. Gently push the M2 card into the slot until it clicks into place.
3. To remove, push the card in again until it springs out.





Image: Side profile of the Sony Ericsson W910i, highlighting the volume control buttons and the Memory Stick Micro (M2) card slot.

1.4 Charging the Battery

Before first use, fully charge the battery. Connect the USB cable to the phone and then to the charger, plugging the charger into a power outlet. The charging indicator will show the battery status.

1.5 Powering On/Off

To power on or off, press and hold the power key (usually located on the top or side of the phone) until the screen lights up or shuts down.

2. OPERATING THE PHONE

2.1 Basic Navigation

The W910i is a slider phone. Slide the phone open to reveal the keypad for dialing and text input. When closed, you can navigate using the directional pad and soft keys.

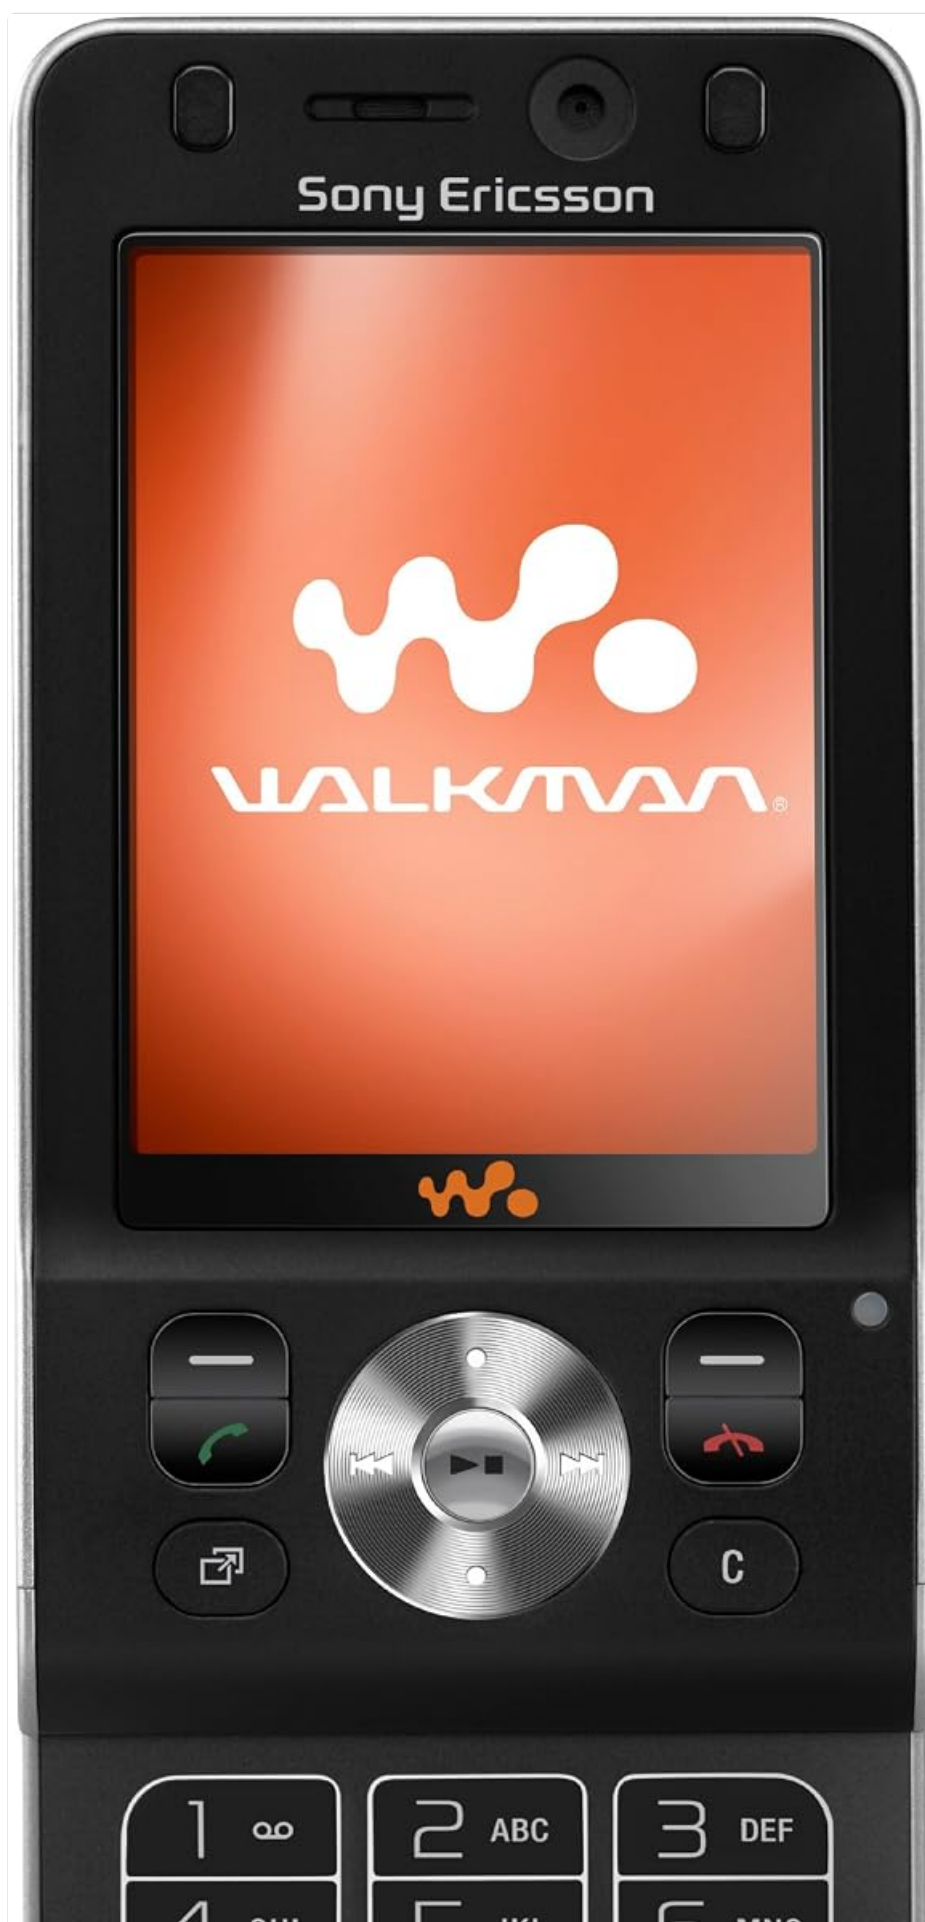




Image: Front view of the Sony Ericsson W910i in its closed slider position, displaying the Walkman logo on its screen.

- **Navigation Key:** Use the central navigation key to scroll through menus and select options.
- **Soft Keys:** The keys directly below the screen perform functions indicated by the text on the display above them.
- **Call/End Keys:** Green key to make/answer calls, red key to end calls or return to standby.

2.2 Making and Receiving Calls

- **Making a Call:** Slide open the phone, enter the number using the keypad, and press the green call key.
- **Answering a Call:** Press the green call key when the phone rings.
- **Ending a Call:** Press the red end key.

2.3 Messaging

The W910i supports SMS (text messages), MMS (multimedia messages), and email.

- **SMS:** Go to *Menu > Messages > New Message > Text Message*
- **MMS:** Go to *Menu > Messages > New Message > Multimedia Message* to include pictures, sounds, or videos.
- **Email:** Set up your email account via *Menu > Messages > Email*. The phone supports POP3 and IMAP4 protocols.

2.4 Walkman Music Features

The W910i is a Walkman phone, offering a rich music experience.



Image: The Sony Ericsson W910i phone showcasing its Walkman music player interface on the screen, accompanied by a pair of matching headphones.

- **Walkman Player 3.0:** Access your music via the dedicated Walkman button or *Menu > Walkman*. Supports MP3 and AAC files.
- **Shake Control:** With Shake control activated, press and hold the Walkman key and flick your wrist to change

tracks (forward/backward) or shuffle your playlist.

- **SenseMe:** This feature analyzes your music and allows you to create playlists based on tempo or mood.
- **TrackID:** Record a snippet of a song using the microphone, and TrackID will identify the song title, artist, and album.
- **FM Radio with RDS:** Tune into FM radio stations. RDS (Radio Data System) displays station information and song titles where available.
- **Disc2Phone Software:** Use the included PC software to easily transfer music files from your computer to your phone.
- **MegaBass:** Enhance the bass for a richer audio experience.
- **Flight Mode:** Listen to music with network connectivity turned off.

2.5 Camera Functions

The W910i features a 2-megapixel camera for capturing photos and videos.





Image: Rear view of the Sony Ericsson W910i, clearly showing the 2-megapixel camera lens and branding.

- **Taking Photos:** Go to *Menu > Camera*. Use the dedicated camera button or the navigation key to capture images.
- **Video Recording:** Switch to video mode within the camera application to record short video clips.
- **Photo Sharing:** Easily send captured photos to blogs or online photo albums directly from the phone.
- **Picture Effects:** Apply various effects to your photos.

2.6 Connectivity

- **Bluetooth 2.0 with EDR:** Connect wirelessly to compatible devices such as headsets, car kits, and stereo headphones (A2DP profile).
- **USB Connectivity:** Connect your phone to a PC using the supplied USB cable for file transfer and synchronization. The phone supports mass storage mode.
- **Network Connectivity:**
 - **Quad-band GSM/GPRS/EDGE:** Operates on 850/900/1800/1900 MHz frequencies.
 - **3G (UMTS/HSDPA):** Supports 2100 MHz for high-speed data in compatible regions (Europe, Africa, Asia, Australia). In other regions, data service will be via GPRS.

2.7 Internet and Data

- **Access NetFront Web Browser:** Browse full HTML websites.
- **RSS Feeds:** Subscribe to RSS feeds for up-to-the-minute news and content.
- **Dial-up Networking:** Connect your laptop via Bluetooth or USB to use the phone as a modem for internet access.

2.8 Personal Information Management (PIM)

- **Calendar:** Manage appointments and events.
- **Tasks:** Keep track of your to-do list.
- **Notes:** Jot down quick reminders.
- **Alarm:** Set multiple alarms.
- **Calculator, Stopwatch, Timer:** Utility tools.
- **SyncML:** Synchronize contacts, calendar, notes, and tasks with Microsoft Outlook on your PC using Sony Ericsson Sync Station software.

2.9 Games and Applications

The W910i supports Java applications and 3D games. Access them via *Menu > Games* or *Menu > Applications*.

3. MAINTENANCE

3.1 Battery Care

- Avoid exposing the battery to extreme temperatures.
- Do not puncture or disassemble the battery.
- Use only original Sony Ericsson chargers and batteries.

3.2 Cleaning Your Phone

- Use a soft, lint-free cloth to clean the screen and body of the phone.
- Avoid using harsh chemicals or abrasive materials.

3.3 Software Updates

Periodically check the Sony Ericsson support website for any available software updates for your W910i model. Updates can improve performance and add new features.

4. TROUBLESHOOTING

If you encounter issues with your W910i, try the following solutions before seeking professional assistance.

Problem	Solution
Phone does not power on	Ensure the battery is correctly installed and fully charged. Try charging for at least 30 minutes.
No network signal	Check if the SIM card is properly inserted. Ensure you are in an area with network coverage. Restart the phone.
Cannot make or receive calls	Verify network signal. Check if call barring is active. Ensure your SIM card is active with your service provider.
Sound issues (no audio, low volume)	Check volume settings. Ensure headphones are properly connected if in use. Clean the speaker/microphone openings.
Phone freezes or is unresponsive	Remove and reinsert the battery to perform a hard reset.

Problem	Solution
Memory card not detected	Ensure the M2 card is correctly inserted. Try reinserting it. Format the card (this will erase all data).

5. SPECIFICATIONS

Key technical specifications for the Sony Ericsson W910i:

- **Dimensions:** 3.9 x 2.0 x 0.5 inches (99 x 50 x 12.5 mm)
- **Weight:** 3.0 ounces (86 grams)
- **Display:** 2.4-inch QVGA (240 x 320 pixels), 262K colors
- **Networks:**
 - GSM/GPRS/EDGE Quad-band (850/900/1800/1900 MHz)
 - UMTS/HSDPA (2100 MHz)
- **Camera:** 2.0 Megapixel with 2.5x digital zoom, video recording
- **Internal Memory:** 40 MB
- **Expandable Memory:** Memory Stick Micro (M2) up to 2 GB (1GB card included)
- **Connectivity:** Bluetooth 2.0 with A2DP, USB 2.0
- **Battery:** 930 mAh Lithium-Ion
- **Talk Time:** Up to 9 hours
- **Standby Time:** Up to 350 hours
- **Operating System:** Sony Ericsson OS
- **Audio:** Walkman Player 3.0 (MP3, AAC), FM Radio with RDS, MegaBass, Shake Control, SenseMe, TrackID
- **Browser:** Access NetFront Web Browser
- **Messaging:** SMS, MMS, Email (POP3, IMAP4)
- **Other Features:** Java support, PIM functions (calendar, tasks, notes, alarm), T9 text entry

6. WARRANTY AND SUPPORT

Please note that this is an international version of the Sony Ericsson W910i and is sold with **no warranty**. For technical support or further assistance, please refer to the official Sony Ericsson support resources available online or contact your local service provider for network-related inquiries.

For general information and software updates, visit the official Sony Ericsson website (availability may vary).

© 2024 Sony Ericsson. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B000WMEI0Y>

More documents and user manuals: <https://manuals.plus/>