

[Manuals.plus](#) /

> [Samsonite](#) /

> Samsonite Sahara Brights 20 Spinner Upright Luggage Instruction Manual

Samsonite A67074055

Samsonite Sahara Brights 20 Spinner Upright Luggage Instruction Manual

INTRODUCTION

Thank you for choosing the Samsonite Sahara Brights 20 Spinner Upright luggage. This manual provides essential information for the proper setup, operation, and maintenance of your new luggage to ensure a pleasant travel experience. Please read these instructions carefully before using your product.



Image: Front view of the Samsonite Sahara Brights 20 Spinner Upright luggage in a vibrant lime green color. The luggage features a combination of hardside and softside materials, a front zippered pocket, and four spinner wheels visible at the bottom corners.

SETUP

1. Unpacking

- Remove all packaging materials, including plastic wraps and protective inserts, from the luggage.
- Inspect the luggage for any signs of damage that may have occurred during shipping. Contact customer support if any damage is found.

2. Setting the Combination Lock

Your luggage is equipped with a fixed combination lock for security. Follow these steps to set your personal combination:

1. The lock is preset to 0-0-0.
2. Locate the small reset button (usually recessed and requires a pen tip to press).
3. Press and hold the reset button.
4. While holding the reset button, set your desired 3-digit combination by turning the dials.
5. Release the reset button. Your new combination is now set.
6. Test the new combination to ensure it opens the lock. Remember your combination, as Samsonite does not keep records of personal codes.

3. Extending the Telescopic Handle

To extend the telescopic handle, press the button located on the top of the handle and pull upwards until it locks into place. To retract, press the button again and push the handle downwards.

OPERATING INSTRUCTIONS

1. Using Spinner Wheels

Your Sahara Brights 20 features multi-directional spinner wheels. This allows for 360-degree upright rolling, reducing strain on your arm and shoulder. Push or pull the luggage from any direction with minimal effort.

2. Accessing Interior Compartments

The luggage features an interior zippered compartment with two pockets. Unzip the main compartment to access your belongings. Utilize the internal pockets for organizing smaller items.

3. Utilizing the Expansion Feature

For additional packing capacity, your luggage is expandable. Locate the expansion zipper around the perimeter of the main compartment. Unzip it to increase the depth of the luggage. Zip it back up to return to its original size.

MAINTENANCE

1. Cleaning

- For general cleaning, wipe the exterior with a damp cloth and mild soap. Avoid harsh chemicals or abrasive cleaners.
- For the interior, vacuum or wipe with a damp cloth. Ensure the interior is completely dry before closing the luggage for storage.

2. Wheel Care

Periodically check the spinner wheels for debris such as hair or lint. Remove any obstructions to ensure smooth rolling. If wheels become stiff, a small amount of silicone-based lubricant can be applied to the axle.

3. Zipper Maintenance

Keep zippers clean and free of debris. If a zipper becomes stiff, apply a small amount of zipper lubricant or wax to the teeth.

TROUBLESHOOTING

- **Stuck Wheels:** Check for debris lodged in the wheel mechanism. Clean thoroughly. If the wheel is damaged, contact Samsonite customer service.
- **Jammed Zipper:** Ensure no fabric is caught in the zipper teeth. Gently pull the fabric away and try to move the slider. Apply lubricant if necessary.
- **Forgotten Combination Lock:** Unfortunately, if you forget your combination, there is no master key or reset code. You may need to try all 1000 combinations (000-999) or contact a locksmith.
- **Telescopic Handle Issues:** If the handle does not extend or retract smoothly, check for bent components or obstructions. Do not force the handle.

SPECIFICATIONS

Feature	Detail
Model Number	A67074055
Item Dimensions (L x W x H)	24 x 15 x 10 inches
Item Weight	9 Pounds
Wheel Type	Spinner (4 wheels)
Lock Type	Combination Lock (Fixed)
Shell Type	Soft
Handle Type	Telescopic Handle
Expandable	Yes
Product Care Instructions	Zipper closure (general cleaning)

WARRANTY AND SUPPORT

Samsonite products are rigorously tested to ensure they meet stringent standards. This luggage comes with a limited warranty against defects in materials and workmanship. For specific warranty details, claims, or technical support, please refer to the official Samsonite website or contact their customer service directly. Keep your proof of purchase for warranty purposes.

For further assistance, please visit the official Samsonite website or contact their customer support.