

[Manuals.plus](#) /

› [Chef'sChoice](#) /

› Chef'sChoice S640003 Multi-Purpose Serrated Blade Instruction Manual for Models 640 and 645 Food Slicers

Chef'sChoice S640003

Chef'sChoice S640003 Multi-Purpose Serrated Blade Instruction Manual

For Chef'sChoice Food Slicers Models 640 and 645

INTRODUCTION

This manual provides essential instructions for the safe and effective use, installation, and maintenance of your Chef'sChoice S640003 Multi-Purpose Serrated Blade. This blade is specifically designed for use with Chef'sChoice Food Slicers Models 640 and 645. Please read all instructions carefully before installation and operation.

SAFETY PRECAUTIONS

- Always unplug the food slicer from the power outlet before installing, removing, or cleaning the blade.
- The blade is extremely sharp. Handle with extreme care to prevent injury.
- Never touch the cutting edge of the blade directly. Use appropriate protective gloves if necessary.
- Ensure the blade is securely fastened before operating the food slicer.
- Keep hands clear of the blade area during operation.

SETUP: BLADE INSTALLATION

Follow these steps to safely install the S640003 serrated blade onto your Chef'sChoice Food Slicer Model 640 or 645:

1. Ensure your food slicer is unplugged from the power source.
2. If replacing an existing blade, carefully remove it by following the removal instructions (refer to your slicer's main manual).
The central mechanism on the blade often indicates the direction for "open" or "unlock" (see image below).
3. Align the new S640003 serrated blade with the blade shaft on your food slicer.
4. Gently push the blade onto the shaft, ensuring it seats correctly.
5. Secure the blade using the retaining knob or mechanism provided with your food slicer. Turn the knob in the "close" or "lock" direction until the blade is firmly attached and does not wobble. Do not overtighten.
6. Verify that the blade is properly installed and secure before plugging in the slicer.



This image displays the Chef'sChoice S640003 multi-purpose serrated blade. The blade is circular, made of stainless steel, and features a serrated edge for efficient slicing. In the center, there is a mechanism with an arrow pointing towards 'open' (and 'öffnen' in German), indicating the direction for unlocking or removing the blade. Three small screws are visible around this central mechanism, securing it to the blade.

OPERATING THE BLADE (WITHIN THE FOOD SLICER)

Once the S640003 serrated blade is securely installed, operate your food slicer according to its primary instruction manual. The serrated edge is designed for slicing a variety of foods, including bread, roasts, and other items where a saw-like action is beneficial.

- Always use the food pusher to guide food towards the blade. Never use your hands.
- Adjust the slicing thickness setting on your food slicer as desired.
- Allow the blade to do the work; do not force food against it.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your blade and ensure hygienic operation.

1. **Unplug:** Always unplug the food slicer before cleaning.

2. **Remove Blade:** Carefully remove the blade from the slicer by turning the central mechanism in the "open" or "unlock" direction. Handle the blade by its center hub, avoiding the sharp edges.
3. **Wash:** Wash the blade immediately after each use with warm, soapy water. Use a brush to clean between the serrations.
4. **Rinse:** Rinse thoroughly with clean water.
5. **Dry:** Dry the blade completely with a soft cloth to prevent water spots and rust.
6. **Storage:** Store the blade in a safe place, preferably in its original packaging or a blade cover, away from children and other kitchen items to prevent damage or injury.

Do not wash the blade in a dishwasher, as harsh detergents and high temperatures can dull the edge and damage the finish.

TROUBLESHOOTING

If you experience issues with your S640003 serrated blade, consider the following:

- **Poor Slicing Performance:**
 - Ensure the blade is clean and free of food debris.
 - Verify the blade is securely installed and not wobbling.
 - Check the food slicer's thickness setting.
 - If the blade has been used extensively, it may require replacement.
- **Blade Wobbles After Installation:**
 - Ensure the blade is correctly seated on the shaft.
 - Tighten the retaining knob or mechanism firmly, but do not overtighten.

SPECIFICATIONS

Model Number:	S640003
Compatibility:	Chef'sChoice Food Slicers Models 640 and 645
Blade Type:	Multi-Purpose Serrated
Material:	Stainless Steel
Diameter:	Approximately 7-inch (17.78 cm)
Weight:	Approximately 272 g (0.6 lbs)
Country of Origin:	United States

WARRANTY INFORMATION

This Chef'sChoice S640003 Multi-Purpose Serrated Blade comes with a one-year warranty from the date of purchase. This warranty covers defects in material and workmanship under normal use. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty documentation included with your original food slicer or contact Chef'sChoice customer support.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your Chef'sChoice S640003 Multi-Purpose Serrated Blade or compatible food slicer models, please visit the official Chef'sChoice website or contact their customer service department. Contact

information can typically be found in the main instruction manual for your food slicer or on the manufacturer's website.

© Chef'sChoice. All rights reserved.

This manual is for informational purposes only. Chef'sChoice reserves the right to make changes without prior notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question