

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Conair](#) /
- › [ConairMAN The Chopper, Hair Clippers for Men, 24-piece Hair Clipper with Mustache and Beard Trimmer User Manual](#)

## Conair HCT423R

# ConairMAN The Chopper User Manual

Model: HCT423R

## INTRODUCTION

---

This manual provides comprehensive instructions for the safe and effective use of your ConairMAN The Chopper Hair Clippers. Please read all instructions carefully before use and retain this manual for future reference.



Image: The complete 24-piece ConairMAN The Chopper grooming system, showcasing all included accessories.

## WHAT'S INCLUDED

---

Your ConairMAN The Chopper 24-piece grooming system includes the following components:

- ConairMAN The Chopper Clipper/Trimmer Unit
- Hair Clipping Blade (pre-installed)
- Facial Trimming Blade (detachable)
- 9 Guide Combs for Haircuts (various lengths)
- Styling Comb
- Barber Scissors
- Blade Guard
- Barber Cape
- Cleaning Brush
- Lubricating Oil
- Storage Pouch
- 5-Position Comb Attachment (for facial trimming)

- 3 Jawline Combs (for facial trimming)
- Mustache Comb



Image: A visual representation of all 24 components included in the grooming system.

## IMPORTANT SAFETY INFORMATION

---

- Always use with caution near the face and neck.
- Keep out of reach of children to avoid ingestion of small parts.
- Clean and store properly after each use.
- Always supervise children when using this product.
- Do not immerse the unit in water.
- Ensure the power cord is not damaged before use.

## SETUP AND INITIAL USE

1. **Unpack:** Carefully remove all components from the packaging.
2. **Inspect:** Check the clipper and all accessories for any signs of damage. Do not use if damaged.
3. **Blade Attachment:** The hair clipping blade is typically pre-installed. To attach or detach blades, ensure the unit is off and unplugged. Gently press the release button (if present) or push the blade firmly until it clicks into place.



Image: Detachable stainless steel blades for easy cleaning and switching between hair clipping and facial trimming.

4. **Lubricate Blades:** Before first use, apply a few drops of the included lubricating oil to the blades. Turn the clipper on for a few seconds to distribute the oil. Wipe off any excess.
5. **Power Connection:** Plug the clipper into a standard electrical outlet. This is a corded unit and requires continuous power during operation.

# NO SLIP GRIP

## CORDED CLIPPER & TRIMMER



Image: The corded design ensures consistent power, and the textured grip prevents slipping during use.

## OPERATING INSTRUCTIONS

---

### Hair Clipping

1. **Select Blade:** Ensure the hair clipping blade is attached.
2. **Choose Guide Comb:** Select the desired guide comb for your preferred hair length. Attach it securely to the clipper blade.
3. **Power On:** Slide the ON/OFF switch to the "ON" position.
4. **Taper Control:** Utilize the 5-position taper control lever for fine-tuning cutting lengths without changing guide combs. This provides up to 50 settings when combined with guide combs.

# 5 POSITION TAPER CONTROL = 50 SETTINGS



Image: The 5-position taper control allows for precise length adjustments, offering versatility in styling.

5. **Turbo Boost:** For thicker hair or increased cutting power, press the "TURBO" button.



Image: The turbo button provides a temporary boost in motor speed for tackling dense hair.

6. **Clipping:** Begin clipping hair against the direction of hair growth, using smooth, overlapping strokes.
7. **Power Off:** When finished, slide the ON/OFF switch to the "OFF" position and unplug the unit.

### Facial Hair Trimming

1. **Change Blade:** Detach the hair clipping blade and attach the facial trimming blade.
2. **Select Attachment:** Use the 5-position comb attachment or one of the 3 jawline combs for desired beard or mustache length and style.
3. **Trimming:** Carefully trim facial hair, shaping as desired. Use the mustache comb for precision.
4. **Power Off:** When finished, slide the ON/OFF switch to the "OFF" position and unplug the unit.

### MAINTENANCE AND CARE

---

- **Cleaning Blades:** After each use, remove the blade and use the cleaning brush to remove any trapped hair.
- **Oiling Blades:** Apply a few drops of the included lubricating oil to the blades once a month, or more frequently with

heavy use. This ensures smooth operation and extends blade life.

- **Cleaning Unit:** Wipe the body of the clipper with a clean, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Storage:** Store the clipper and all accessories in the provided storage pouch in a cool, dry place, away from moisture and direct sunlight. Ensure the blade guard is on the blade when stored.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Not plugged in; power outlet issue; damaged cord.	Ensure unit is securely plugged into a working outlet. Check cord for damage. If damaged, do not use.
Clipper pulls hair or cuts poorly.	Blades are dull; blades are not oiled; hair buildup in blades; incorrect technique.	Clean and oil blades. Ensure blades are properly attached. Use the turbo function for thicker hair. Ensure hair is clean and dry before clipping.
Unit gets hot during use.	Prolonged use; lack of lubrication.	Allow unit to cool down. Ensure blades are regularly oiled. Avoid continuous operation for extended periods.

## SPECIFICATIONS

**Model:** HCT423R

**Brand:** Conair

**Power Source:** Electric (Corded)

**Blades:** Stainless Steel, Detachable

**Taper Control:** 5-Position

**Dimensions:** Approximately 3.25 x 7.5 x 11.5 inches

**Weight:** Approximately 1.6 Pounds

**Included Components:** 24-piece grooming system (as listed in "What's Included" section)

## WARRANTY AND SUPPORT

The ConairMAN The Chopper Hair Clipper comes with a Limited 5-year warranty.

For warranty claims, technical support, or replacement parts, please contact Conair Customer Service. Refer to the product packaging or the official Conair website for the most current contact information.

**Legal Disclaimer:** Returns accepted within 30 days. Return authorization required. Returned items without an RMA will be rejected. Contact Customer Service for an RMA. RMA must be written on outside of shipping carton (not on product packaging). If shipping labels are placed on, or RA numbers written on the manufacturer's boxes, the product will not be in resalable condition, and, in turn, will not be eligible for return. All original packaging and materials, including all parts, accessories and instruction manuals from the manufacturer must be returned with the product. Failure to comply may result in denial of RA credit.

