

Police PL-11397JSB/02

Police PL-11397JSB/02 Twingear Chronograph Dual-Time Watch User Manual

Model: PL-11397JSB/02 | Brand: Police

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Police Men's PL-11397JSB/02 Twingear Rectangular Black IP Chronograph Dual-time Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

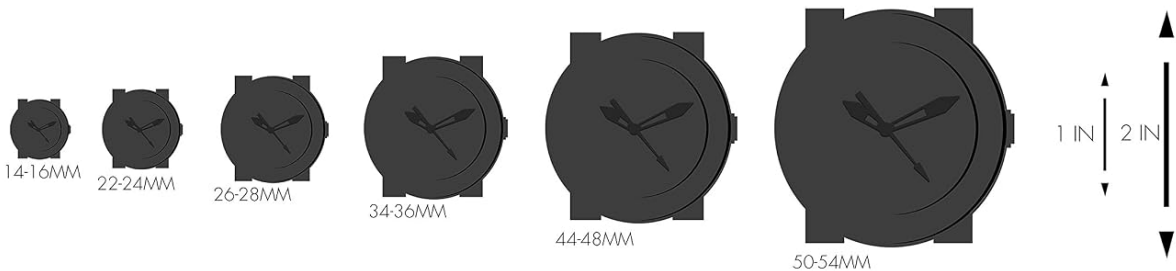


Image: Police PL-11397JSB/02 Twingear Rectangular Black IP Chronograph Dual-time Watch, showcasing its rectangular black IP case, chronograph subdials, and leather strap.

SETUP AND INITIAL ADJUSTMENT

1. Setting the Main Time

1. Pull the crown out to position 2 (the outermost position).
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time.
3. Push the crown back into position 0 (normal position) to start the watch.

2. Setting the Dual Time

Your Twingear watch features a dual-time display. Refer to the specific sub-dial or mechanism for dual-time adjustment. Typically, this involves a separate crown or pusher:

- Locate the secondary crown or pusher designated for the dual-time function.
- Follow the instructions specific to that mechanism to set the second time zone. This may involve pulling out a smaller crown or pressing a recessed button with a pointed object.

3. Strap Adjustment

The watch features a leather strap with a buckle closure. Adjust the strap by inserting the pin into the appropriate hole for a comfortable and secure fit on your wrist.

OPERATING THE CHRONOGRAPH FUNCTION

The chronograph function allows for precise timing of events. Your watch is equipped with pushers to control this feature.

1. **Start:** Press the upper pusher (usually at 2 o'clock) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the upper pusher again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** Press the lower pusher (usually at 4 o'clock) to reset the chronograph hands to their zero position. This can only be done when the chronograph is stopped.

Note: Avoid operating the chronograph pushers while the watch is submerged in water to prevent water ingress.

MAINTENANCE AND CARE

Cleaning

Wipe the watch case and strap regularly with a soft, dry cloth to remove dust and dirt. For the leather strap, avoid excessive moisture and harsh chemicals.

Water Resistance

This watch is water resistant up to 165 feet (50 meters). This rating means it is suitable for short periods of recreational swimming. However, it is **not** suitable for diving, snorkeling, or high-impact water sports.

- Ensure the crown is fully pushed in before any contact with water.
- Do not operate the crown or pushers while the watch is wet or submerged.
- Avoid exposing the watch to hot water, steam, or extreme temperature changes, as this can compromise the water resistance seals.

Battery Replacement

The watch is powered by a product-specific battery (included). When the watch stops or the second hand begins to jump irregularly (indicating low battery), it is time for a battery replacement. We recommend having the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

- **Watch not running:** Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Incorrect time:** Re-set the time as per the "Setting the Main Time" instructions.
- **Chronograph hands not resetting to zero:**If the chronograph hands do not return to the 12 o'clock position after resetting, they may need calibration. Consult a professional watch repair service.

SPECIFICATIONS

Brand	Police
Model Name/Number	PL-11397JSB/02
Movement Type	Quartz
Display Type	Analog
Case Shape	Rectangular
Case Material	Stainless Steel
Case Diameter	47 Millimetres
Case Thickness	13 Millimetres
Band Material	Leather
Band Colour	Black
Band Width	41 Millimetres
Water Resistance Depth	165 Feet (50 Meters)
Crystal Material	Mineral
Item Weight	299 g
Batteries	1 Product Specific battery (included)
Product Dimensions	10.01 x 10.01 x 5 cm

WARRANTY AND SUPPORT

For warranty information and customer support, please contact the seller of record directly. Keep your purchase receipt as proof of purchase.

For service or repairs, it is recommended to use authorized service centers to ensure genuine parts and proper handling of your Police timepiece.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question