

[Manuals.plus](#) /

› [Better Chef](#) /

› Better Chef 9 Liter Toaster Oven Broiler - IM-255W User Manual

Better Chef IM-255W

Better Chef 9 Liter Toaster Oven Broiler User Manual

Model: IM-255W

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in this oven when not in use.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, and the like.
- Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.

PRODUCT OVERVIEW

The Better Chef 9 Liter Toaster Oven Broiler is a versatile kitchen appliance designed for baking, broiling, toasting, and

roasting. It features a 9-liter capacity, a 60-minute timer with a bell signal, and a tempered glass door for easy monitoring of cooking progress.

Components

- Bake Pan
- Wire Rack
- Tray Handle
- Tempered Glass Door
- Temperature Control Knob
- Function Selector Knob
- Timer Knob with Bell Signal



Image: The Better Chef 9 Liter Toaster Oven Broiler features a compact design suitable for countertops. It includes a tempered glass door for viewing food during cooking.

SETUP

1. **Unpacking:** Carefully remove the toaster oven and all accessories from the packaging. Remove any protective films or packing materials.
2. **Placement:** Place the toaster oven on a stable, level, and heat-resistant surface. Ensure there is at least 4 inches (10 cm) of clear space on all sides and above the oven for proper ventilation. Do not place the oven near flammable materials such as curtains or walls.
3. **First Use Preparation:** Before first use, wipe the interior of the oven, the bake pan, and the wire rack with a damp cloth. Ensure all parts are dry before use.
4. **Initial Burn-Off:** It is recommended to operate the oven empty for approximately 10-15 minutes on the highest temperature setting (e.g., Broil) to burn off any manufacturing oils. Some smoke and odor may be present during this initial process; ensure the area is well-ventilated.

OPERATING INSTRUCTIONS

Familiarize yourself with the control knobs before operation.

- **Temperature Control Knob:** Used to select the desired cooking temperature.
- **Function Selector Knob:** Used to choose the cooking mode: Bake, Broil, or Toast.
- **Timer Knob:** Used to set the cooking duration up to 60 minutes. The oven will automatically turn off and a bell will sound when the set time expires. To activate the timer, turn it past the 10-minute mark and then back to your desired time.

General Operation

1. Place the wire rack and/or bake pan into the desired position inside the oven.
2. Place food onto the bake pan or wire rack.
3. Close the tempered glass door.
4. Set the **Temperature Control Knob** to the desired temperature.
5. Set the **Function Selector Knob** to the desired cooking mode (Bake, Broil, Toast).
6. Set the **Timer Knob** to the desired cooking time. The oven will begin heating.
7. When the cooking time expires, the oven will turn off automatically and a bell will sound.
8. Carefully remove cooked food using oven mitts and the provided tray handle.

Preheating

For optimal cooking results, it is recommended to preheat the oven for 5-10 minutes before placing food inside. Set the temperature and function, then allow the oven to heat up before inserting food.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your toaster oven.

- Always unplug the toaster oven from the power outlet and allow it to cool completely before cleaning.
- **Exterior:** Wipe the exterior surfaces with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
- **Interior:** Clean the interior walls with a damp cloth and a mild detergent. For stubborn stains, a non-abrasive cleaning solution can be used. Ensure all detergent residue is wiped away.
- **Accessories:** The bake pan, wire rack, and tray handle can be washed in warm, soapy water. Rinse thoroughly and dry completely before returning them to the oven.
- **Crumb Tray:** Regularly remove and clean the crumb tray to prevent grease buildup and potential fire hazards. Slide

out the tray, discard crumbs, and wash with warm, soapy water.

- **Do Not Immerse:** Never immerse the main body of the toaster oven, its cord, or plug in water or any other liquid.

TROUBLESHOOTING

If you encounter issues with your Better Chef Toaster Oven Broiler, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Oven does not turn on.	Power cord not plugged in. No power from outlet.	Ensure the power cord is securely plugged into a functional electrical outlet. Test the outlet with another appliance.
Food not cooking evenly.	Oven not preheated. Incorrect rack position. Temperature setting too low/high.	Preheat the oven for 5-10 minutes. Adjust rack position for optimal cooking. Verify temperature setting.
Smoke or odor during first use.	Manufacturing oils burning off.	This is normal for initial use. Ensure good ventilation. If smoke persists after initial burn-off, unplug and contact support.
Timer does not activate.	Timer not wound sufficiently.	Turn the timer knob past the 10-minute mark first, then rotate it back to your desired cooking time.

If the problem persists after attempting these solutions, please contact customer support.

SPECIFICATIONS

- **Model:** IM-255W
- **Capacity:** 9 Liters
- **Power:** 1200 Watts
- **Dimensions (D x W x H):** 20.3 cm x 30.5 cm x 20.3 cm (approximately 8 in x 12 in x 8 in)
- **Weight:** 7 lbs (3.17 kg)
- **Control Type:** Knob
- **Special Features:** Dual temperature control, auto shut-off, 60-minute timer, tempered glass door
- **Included Accessories:** Bake pan, wire rack, tray handle

CUSTOMER SUPPORT

For assistance, warranty information, or any inquiries regarding your Better Chef 9 Liter Toaster Oven Broiler, please contact Better Chef customer support. Refer to your purchase documentation for specific contact details or visit the official Better Chef website for the most up-to-date support information.

You can also reach out to the seller directly for immediate assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question