

Rowenta DA-55

Rowenta DA-55 Garment Steam Brush Instruction Manual

Model: DA-55

INTRODUCTION

Thank you for choosing the Rowenta DA-55 Garment Steam Brush. This appliance is designed to quickly and efficiently remove wrinkles from various fabrics using steam. Please read this instruction manual carefully before using the appliance for the first time and keep it for future reference. Proper use and maintenance will ensure optimal performance and extend the life of your steam brush.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the voltage of your electrical outlet matches the voltage specified on the appliance (120V).
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the appliance out of reach of children and pets.
- Never direct steam towards people or animals. Steam is hot and can cause burns.
- Unplug the appliance from the outlet when not in use, before filling with water, and before cleaning.
- Do not operate the appliance with a damaged cord or plug, or if it has been dropped or damaged. Contact authorized service personnel for repair.
- Use the appliance only for its intended purpose as described in this manual.
- Always place the appliance on a stable, heat-resistant surface when not in use.
- Do not leave the appliance unattended while it is plugged in or operating.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Rowenta DA-55 Garment Steam Brush:

- **A. Steam Head:** Emits steam for wrinkle removal.
- **B. Water Tank:** Holds water for steam generation.
- **C. Power Switch/Indicator Light:** Turns the unit on/off and indicates heating status.
- **D. Handle:** For comfortable grip during use.

- **E. Power Cord:** Connects to electrical outlet.
- **F. Fabric Brush Attachment:** Helps open fabric weave for better steam penetration and lint removal.
- **G. Trouser Crease Attachment:** Designed to create crisp creases on trousers and other garments.



Image: The Rowenta DA-55 Garment Steam Brush, showing the main unit and its included fabric brush and trouser crease attachments.

SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage if desired.
2. **Fill Water Tank:** Ensure the appliance is unplugged. Open the water tank cap and fill the tank with distilled or demineralized water up to the maximum fill line. Do not overfill. Close the cap securely.
3. **Attach Accessories:** If desired, attach the fabric brush or trouser crease attachment to the steam head. Ensure it clicks firmly into place.
4. **Position Garment:** Hang the garment you wish to steam on a hanger. Ensure there is enough space around the garment for steam to dissipate.

OPERATING INSTRUCTIONS

1. **Power On:** Plug the power cord into a 120V AC electrical outlet. Turn the power switch to the "ON" position. The indicator light will illuminate, signaling that the appliance is heating up.
2. **Preheating:** Allow the steam brush to preheat for approximately 30-60 seconds until the indicator light changes or steam begins to emit steadily.
3. **Steaming:** Hold the steam brush upright, keeping the steam head a few inches away from the fabric. Gently pull the fabric taut with your free hand. Move the steam brush slowly downwards over the wrinkles. For stubborn wrinkles, you may press the steam head lightly against the fabric.
4. **Using Attachments:**
 - **Fabric Brush:** Use for heavier fabrics like coats or upholstery. The bristles help lift fibers for deeper steam penetration and can remove lint.
 - **Trouser Crease Attachment:** Position the attachment over the desired crease line and press gently while steaming to create a sharp crease.
5. **Finishing:** Once steaming is complete, turn the power switch to the "OFF" position and unplug the appliance. Allow the garment to cool and dry completely before wearing or storing.

MAINTENANCE

Regular maintenance ensures the longevity and efficiency of your steam brush.

- **Empty Water Tank:** After each use, ensure the appliance is unplugged and cooled. Empty any remaining water from the tank to prevent mineral buildup.
- **Cleaning Exterior:** Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Descaling (if necessary):** If you notice reduced steam output or mineral residue, descaling may be required. Consult the Rowenta website or customer support for specific descaling instructions for your model.
- **Storage:** Store the appliance in a cool, dry place, away from direct sunlight. Ensure the power cord is neatly wrapped and not kinked.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No steam or very little steam.	Water tank is empty or low. Appliance not heated sufficiently. Mineral buildup.	Refill water tank. Allow more time for preheating. Perform descaling procedure.
Water leaking from steam head.	Overfilled water tank. Appliance not fully heated.	Do not overfill the water tank. Allow the appliance to fully preheat before use.
Appliance not turning on.	Not plugged in. Power outlet malfunction.	Ensure the power cord is securely plugged into a working 120V outlet. Test the outlet with another appliance.

If the problem persists after attempting these solutions, please contact Rowenta customer support.

SPECIFICATIONS

- **Model:** DA-55
- **Power:** 600 Watts
- **Voltage:** 120 Volts AC
- **Frequency:** 60 Hz
- **Color:** Ivory
- **Product Benefit:** Remove Wrinkle

WARRANTY AND SUPPORT

Rowenta products are manufactured to high quality standards. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your purchase or visit the official Rowenta website. For technical assistance, spare parts, or service, please contact Rowenta customer support.

Rowenta Official Website: www.rowenta.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Where is the water tank cap on the water tank on a Rowenta DA-55 garment steamer?

The Rowenta DA-55 Garment Steam Brush instruction manual states that to fill the water tank, you need to "Open the water tank cap and fill the tank with distilled or demineralized water up to..."

[Read full answer](#)

How do I smoothly open the water tank on a Rowenta DA-55 Garment Steamer?

To open the water tank on your Rowenta DA-55 Garment Steam Brush, follow these steps: Ensure the appliance is unplugged from the electrical outlet. Locate the water tank cap. Open the water tank cap. Fill the tank with...

[Read full answer](#)