

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Karlsson](#) /

› [Karlsson KA4398 Vintage Square Wall Clock Black Instruction Manual](#)

Karlsson KA4398

Karlsson KA4398 Vintage Square Wall Clock Instruction Manual

Model: KA4398

INTRODUCTION

This instruction manual provides essential information for the proper setup, operation, and maintenance of your Karlsson KA4398 Vintage Square Wall Clock. Please read this manual thoroughly before installation and retain it for future reference.

SAFETY INFORMATION

- **Battery Safety:** Use only the specified battery type (1 AA battery). Ensure correct polarity (+/-) when inserting batteries. Do not mix old and new batteries, or different types of batteries. Remove exhausted batteries promptly to prevent leakage and damage. Dispose of batteries according to local regulations.
- **Mounting:** Ensure the wall clock is securely mounted to a sturdy surface using appropriate hardware for its weight (approximately 1.45 kg / 3.2 lbs). Improper mounting can lead to the clock falling and causing injury or damage.
- **Glass Material:** The clock face is made of glass. Handle with care to avoid breakage. In case of breakage, avoid contact with sharp edges.
- **Children:** Keep batteries and small parts out of reach of children to prevent choking hazards.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Karlsson KA4398 Vintage Square Wall Clock (Black)
- 1 x Care and Use Manual (this document)

Note: 1 AA battery is required for operation and is not included in the package.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the clock mechanism.
2. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings in the compartment.
3. Close the battery compartment cover securely.

2. Setting the Time

1. Locate the time-setting knob on the back of the clock mechanism.
2. Gently turn the knob in either direction to move the hour and minute hands to the correct time.
3. Avoid moving the hands directly, as this can damage the clock mechanism.

3. Mounting the Clock

The Karlsson KA4398 is designed for wall mounting.

1. Choose a suitable location on a wall that can support the clock's weight.
2. Install a sturdy screw or hook into the wall, ensuring it is appropriate for the wall material and the clock's weight.
3. Carefully hang the clock onto the installed screw or hook using the hanging slot on the back of the clock mechanism. Ensure it is stable and level.



Image: Front view of the Karlsson KA4398 Vintage Square Wall Clock. This black square clock features silver-colored hour and minute hands, and silver-colored numbers (1-12) with the Karlsson brand name at the center bottom.

OPERATING THE CLOCK

Once the battery is installed and the time is set, the clock will begin to operate automatically. The Karlsson KA4398 features a silent clock mechanism, ensuring quiet operation without a ticking sound.

MAINTENANCE

Cleaning

- To clean the glass surface, use a soft, dry, lint-free cloth. For stubborn marks, a slightly damp cloth with a mild glass cleaner can be used, followed by drying with a clean, dry cloth.
- Important:** Avoid touching the clock hands directly during cleaning, as they are delicate and can be bent or damaged.
- Do not use abrasive cleaners or solvents, as these can damage the clock's finish.

Battery Replacement

When the clock begins to lose time or stops functioning, it is likely that the battery needs to be replaced. Follow the "Battery Installation" steps in the Setup section to replace the AA battery.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not running	Dead or incorrectly inserted battery.	Check battery polarity. Replace with a fresh AA battery.
Clock runs too slow or fast	Weak battery.	Replace with a fresh AA battery.
Hands are stuck or not moving smoothly	Hands are bent or obstructed.	Gently check if hands are touching each other or the clock face. If bent, carefully straighten them without applying excessive force to the mechanism.

SPECIFICATIONS

Brand: Karlsson

Model: KA4398

Color: Black

Display Type: Analog

Style: Vintage

Special Feature: Silent Clock

Product Dimensions: 13.78"W x 13.78"H (35 cm x 35 cm)

Power Source: Battery Powered

Battery Type: 1 AA battery (not included)

Room Type: Office (suitable for various indoor spaces)

Shape: Square

Indoor/Outdoor Usage: Indoor

Material: Glass, Acrylic

Frame Material: Glass

Mounting Type: Wall Mount

Item Weight: 1.45 Kilograms (3.2 pounds)

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Karlsson KA4398 Vintage Square Wall Clock, please refer to the retailer where the product was purchased or visit the official Karlsson website for contact details.

Please retain your proof of purchase for any warranty claims.