



[Manuals.plus](#) /

> [Moen](#) /

> Moen Chateau Chrome Single Handle 4-Hole Kitchen Faucet with Protege Side Spray, Model 67430 User Manual

Moen 67430

Moen Chateau Chrome Single Handle 4-Hole Kitchen Faucet with Protege Side Spray (Model 67430)

User Instruction Manual

- [Introduction](#)
- [Safety Information](#)
- [Package Contents](#)
- [Installation](#)
- [Operation](#)
- [Maintenance](#)
- [Troubleshooting](#)
- [Specifications](#)
- [Warranty & Support](#)

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Moen Chateau Chrome Single Handle 4-Hole Kitchen Faucet with Protege Side Spray, Model 67430. Please read this manual thoroughly before beginning installation or use to ensure proper function and longevity of your product. Keep this manual for future reference.



Figure 1: Moen Chateau Chrome Single Handle Kitchen Faucet with Protege Side Spray.

2. SAFETY INFORMATION

Always turn off the main water supply before installing or servicing the faucet. Wear safety glasses and use appropriate tools. If you are unsure about any part of the installation process, consult a qualified plumber.

- **Water Pressure:** Ensure water pressure is within recommended limits (20-125 PSI).
- **Hot Water Safety:** Exercise caution when handling hot water.
- **Chemicals:** Avoid using harsh chemicals or abrasive cleaners on the faucet finish.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Single Handle Kitchen Faucet (Main Unit)
- Protege Side Spray
- Mounting Hardware
- Supply Lines
- Installation Instructions

4. INSTALLATION GUIDE

This faucet is designed for a 4-hole sink configuration. Refer to the diagram below to confirm compatibility with your sink.



Figure 2: Sink hole configuration for Moen Chateau 67430 faucet. This faucet requires a four-hole setup.

4.1. Preparation

1. Turn off the water supply to the sink at the shut-off valves.
2. Clear the area under the sink for access.
3. Remove the old faucet and clean the sink surface.

4.2. Faucet Installation

1. Place the gasket on the underside of the faucet base.
2. Insert the faucet body through the center hole of the sink.
3. From underneath the sink, secure the faucet with the provided mounting nut and washer. Tighten firmly.
4. Connect the hot and cold water supply lines to the corresponding valves.

4.3. Side Spray Installation

1. Insert the side spray base through one of the auxiliary holes.
2. Secure the side spray from underneath the sink with the provided nut.
3. Connect the spray hose to the designated port on the faucet body.

4.4. Final Steps

1. Turn on the main water supply slowly and check for leaks.
2. Run both the faucet and side spray to flush out any debris and check for proper operation.

5. OPERATION

5.1. Faucet Handle

The single handle controls both water flow and temperature. Lift the handle to increase water flow. Move the handle left for hot water and right for cold water.



Figure 3: Operating the single handle for water flow and temperature control.

5.2. Protege Side Spray

To use the side spray, ensure the faucet handle is in the ON position. Press the button on the side spray to activate the water flow through the spray head. Release the button to return water flow to the main faucet spout.

6. CARE AND MAINTENANCE

To maintain the finish of your Moen faucet, clean it regularly with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or polishes that could damage the chrome finish. For stubborn water spots, a mild soap solution can be used, followed by rinsing and drying.

6.1. Aerator Cleaning

If water flow decreases, the aerator may be clogged. Unscrew the aerator from the end of the spout, clean any debris, and rinse thoroughly before reattaching.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Low Water Flow	Clogged aerator or partially closed shut-off valve.	Clean aerator. Ensure shut-off valves are fully open.
Leaking from Spout	Worn cartridge.	Replace the faucet cartridge (refer to Moen support).

Problem	Possible Cause	Solution
Leaking from Handle Base	Loose mounting nut or worn O-rings.	Tighten mounting nut. Inspect and replace O-rings if necessary.
Side Spray Not Working	Clogged spray head or kinked hose.	Clean spray head. Check hose for obstructions.

8. SPECIFICATIONS

- **Model:** 67430
- **Brand:** Moen
- **Finish:** Chrome
- **Mounting Type:** Deck Mount
- **Hole Count:** 4
- **Number of Handles:** 1 (Single Handle)
- **Handle Type:** Lever
- **Spout Design:** Low Arc
- **Spout Height:** 8.5 Inches
- **Spout Reach:** 9.13 Inches
- **Flow Rate:** 1.5 Gallons Per Minute
- **Included Components:** Kitchen Faucet, Protege Side Spray
- **Material:** Metal (Chrome finish)
- **Item Weight:** 3.51 Pounds
- **Manufacturer Part Number:** 67430
- **UPC:** 026508052884, 026508191965

9. WARRANTY AND SUPPORT

This Moen product is backed by Moen's Limited Lifetime Warranty. For detailed warranty information, replacement parts, or technical assistance, please visit the official Moen website or contact Moen customer service directly. Proof of purchase may be required for warranty claims.

Manufacturer: Moen Incorporated

For further assistance, please refer to the official Moen website: www.moen.com