

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Senseo](#) /

› [Senseo HD7810 gourmet single serve coffee maker in blue.](#)

Senseo HD7810

Senseo HD7810 Single Serve Coffee Maker User Manual

Model: HD7810 | Brand: Senseo

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Senseo HD7810 Single Serve Coffee Maker. Please read this manual thoroughly before first use and retain it for future reference.

The Senseo HD7810 is designed to prepare single-serve gourmet coffee with ease, offering a rich flavor and a distinctive crema layer.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or coffee maker in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Scalding may occur if the lid is removed during the brewing cycles.

SETUP

Before first use, ensure all packaging materials are removed. Clean the water reservoir and coffee pod holder with warm, soapy water, then rinse thoroughly.

1. Place the Senseo coffee maker on a stable, flat surface near an electrical outlet.
2. Fill the water reservoir with fresh, cold water up to the MAX indication. Do not exceed the maximum fill line.
3. Insert the appropriate coffee pod holder (single or double) into the machine.
4. Plug the appliance into a grounded electrical outlet.



Senseo™



DOUWE
EGBERTS

PHILIPS

"Senseo™, a sensational cup of fresh coffee, everytime, anytime!"

Senseo allows you to enjoy a perfect cup of coffee with a frothy coffee layer whenever you feel like it.

Each cup is freshly brewed, so you're always sure of a pure and smooth taste. Senseo combines a unique brewing method from Philips with convenient coffee pods from Douwe Egberts containing different blends of roast and ground coffee. Together they ensure you only get the very best in flavor and aroma from your coffee.




1
Fill the reservoir for several cups of Senseo coffee.



4
Close the lid properly. Press button ☺ for one cup, or button ☺☺ for two cups or one mug of Senseo coffee.



2
Choose your favorite Senseo coffee pod from Douwe Egberts.

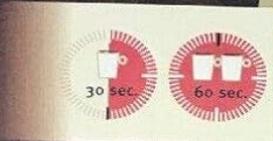

5
Makes one sensational cup of Senseo coffee in app. 30 seconds, and two cups or one mug in app. 60 seconds.



3
For one cup of coffee, place one Senseo coffee pod in the 1-pod holder. For 2 cups or 1 mug, place 2 pods in the 2-pod holder.



6
Enjoy your sensational cup of Senseo coffee...

HD 7810/75

Read Directions for Use for detailed instructions.

Image: Front view of the Senseo HD7810 coffee maker packaging. This image illustrates the product as it appears in its original retail box, highlighting key features and the brand name.

OPERATING INSTRUCTIONS

Follow these steps to brew a perfect cup of Senseo coffee:

1. Ensure the water reservoir is filled with fresh, cold water.

2. Open the lid of the coffee maker.
3. Place one or two Senseo coffee pods into the appropriate pod holder. For one cup, use the 1-pod holder. For two cups or a mug, use the 2-pod holder and place two pods. Ensure the pods are centered.
4. Close the lid firmly until it clicks into place.
5. Place a cup or mug on the drip tray.
6. Press the **1-cup button** for a single serving or the **2-cup button** for a double serving/mug. The button will illuminate, indicating brewing has started.
7. The coffee maker will automatically stop when brewing is complete.
8. Carefully remove your cup. The machine is ready for the next brew after a short cooling period.



Senseo™



DOUWE
EGBERTS

PHILIPS

"Senseo™, a sensational cup of fresh coffee, everytime, anytime!"

Senseo allows you to enjoy a perfect cup of coffee with a frothy coffee layer whenever you feel like it.

Each cup is freshly brewed, so you're always sure of a pure and smooth taste. Senseo combines a unique brewing method from Philips with convenient coffee pods from Douwe Egberts containing different blends of roast and ground coffee. Together they ensure you only get the very best in flavor and aroma from your coffee.



Combines a patented brewing system with the finest quality coffee.



Automatically combines the right balance of coffee and water.



"The rich, frothy coffee layer tells you that it is more than just a cup of coffee, it is Senseo coffee - a fresh, gourmet quality cup of coffee"

Different roasts: a favorite Senseo roast for everyone. Medium roast, Mild roast, Dark roast, Decaffeinated. Use Douwe Egberts coffee pods for the only real Senseo coffee.



HD 7810/75

Image: Detailed instructions on the back of the Senseo HD7810 coffee maker box. This image visually guides the user through the six-step brewing process, from filling the reservoir to enjoying the coffee.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your Senseo coffee maker.

Daily Cleaning:

- Unplug the appliance and allow it to cool down.

- Remove the used coffee pod(s) and discard them.
- Rinse the coffee pod holder and the drip tray with warm water.
- Wipe the exterior of the coffee maker with a damp cloth.

Weekly Cleaning:

- Remove the water reservoir and wash it with warm, soapy water. Rinse thoroughly.
- Clean the coffee spout and the lid interior with a damp cloth.

Descaling:

Descaling is crucial for maintaining coffee quality and machine performance. The frequency depends on water hardness. It is recommended to descale every 3 months or after 400 cups.

1. Use a descaling solution specifically designed for coffee makers. Follow the instructions on the descaling agent packaging.
2. Fill the water reservoir with the descaling solution.
3. Place an empty cup or bowl under the spout.
4. Run several brewing cycles with the descaling solution until the reservoir is empty.
5. Rinse the reservoir and fill it with fresh water. Run several cycles with fresh water to flush out any remaining descaling solution.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee does not brew.	No water in reservoir; Lid not properly closed; Appliance not plugged in.	Fill reservoir; Close lid firmly; Check power connection.
Coffee is weak or watery.	Incorrect pod holder used; Pod not centered; Machine needs descaling.	Use correct pod holder (e.g., 2-pod for stronger brew); Reposition pod; Perform descaling procedure.
Water leaks from machine.	Lid not properly closed; Pod not positioned exactly right.	Ensure lid is closed firmly; Adjust coffee pod position.
Coffee is not hot enough.	Machine needs descaling.	Perform descaling procedure.

SPECIFICATIONS

Brand: Senseo

Model Name: HD7810

Color: Blue

Special Feature: Auto Shut-Off

Coffee Maker Type: Single-Serve Brewer (Note: Product specifications listed "French Press", but it functions as a single-serve pod system.)

Filter Type: Reusable (for pod holder)

Operation Mode: Manual

Recommended Use: Preparing single-serve gourmet coffee

Product Dimensions: 14.6 x 9.7 x 15 inches

Item Weight: 1 pounds

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Senseo website. Keep your proof of purchase for any warranty claims.

For further assistance, you may contact Senseo customer service through their official channels. Please have your model number (HD7810) and purchase date ready when contacting support.