

Casio PQ-30B-7EF

Casio PQ-30B Digital Alarm Clock User Manual

MODEL: PQ-30B-7EF

Introduction

This manual provides detailed instructions for the proper use and maintenance of your Casio PQ-30B Digital Alarm Clock. Please read this manual thoroughly before using the product to ensure correct operation and to prevent damage.

Safety Precautions

- Do not expose the clock to extreme temperatures, direct sunlight, or high humidity.
- Avoid strong impacts or dropping the clock.
- Do not attempt to disassemble or repair the clock yourself. Refer to qualified service personnel.
- Keep batteries out of reach of children. If swallowed, seek medical attention immediately.
- Dispose of used batteries according to local regulations.

Components and Controls



This image displays the front view of the Casio PQ-30B digital alarm clock. It features a digital display showing '10:58 PM', a prominent 'SNOOZE/LIGHT' button, and several control buttons and switches at the bottom for setting time and alarm functions.

Familiarize yourself with the following controls:

- **SNOOZE/LIGHT Button:** Activates the snooze function when the alarm sounds or illuminates the display for a few seconds.
- **MIN Button:** Adjusts minutes during time or alarm setting.
- **HR Button:** Adjusts hours during time or alarm setting.
- **Time/Alarm Mode Selector (Slide Switch):**
 - **TM SET:** For setting the current time.
 - **AL SET:** For setting the alarm time.
 - **NORM:** Normal time display mode.
- **Alarm ON/OFF/SNZ Selector (Slide Switch):**
 - **AL ON:** Activates the alarm.
 - **AL OFF:** Deactivates the alarm.
 - **SNZ:** Activates the snooze function (alarm will sound again after approximately 8 minutes).
- **12HR/24HR Button:** Toggles between 12-hour and 24-hour time formats.

Setup

Battery Installation

The clock requires two LR44 batteries (included). To install or replace batteries:

1. Open the battery compartment cover located on the back of the clock.
2. Insert the two LR44 batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
3. Close the battery compartment cover securely.

Initial Time Setting

After installing batteries, the display will show a default time. Set the current time as follows:

1. Slide the Time/Alarm Mode Selector switch to **TM SET**.
2. Press the **HR** button to set the hour. Hold it down for faster adjustment.
3. Press the **MIN** button to set the minutes. Hold it down for faster adjustment.
4. Press the **12HR/24HR** button to select your preferred time format (12-hour with AM/PM indicator or 24-hour).
5. Once the correct time is set, slide the Time/Alarm Mode Selector switch back to **NORM**.

Operating Instructions

Setting the Alarm Time

1. Slide the Time/Alarm Mode Selector switch to **AL SET**. The alarm time will be displayed.
2. Press the **HR** button to set the desired alarm hour.
3. Press the **MIN** button to set the desired alarm minutes.
4. Slide the Time/Alarm Mode Selector switch back to **NORM**.

Activating/Deactivating the Alarm

- To activate the alarm, slide the Alarm ON/OFF/SNZ Selector switch to **AL ON**. An alarm indicator (often a bell icon or similar) will appear on the display.
- To deactivate the alarm, slide the Alarm ON/OFF/SNZ Selector switch to **AL OFF**. The alarm indicator will disappear.

Using the Snooze/Light Function

- When the alarm sounds, press the **SNOOZE/LIGHT** button to temporarily stop the alarm. The alarm will sound again after approximately 8 minutes.
- To illuminate the display at any time, press the **SNOOZE/LIGHT** button. The light will stay on for a few seconds.
- To stop the alarm completely after it sounds (without snooze), slide the Alarm ON/OFF/SNZ Selector switch to **AL OFF**.

Switching 12-Hour / 24-Hour Format

In **NORM** mode, press the **12HR/24HR** button to toggle between the 12-hour format (with AM/PM indicator) and the 24-hour format.

Maintenance

- **Cleaning:** Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners or chemical solvents.

- **Battery Replacement:** Replace batteries when the display becomes dim or the alarm weakens. Always replace both batteries at the same time.
- **Storage:** If not using the clock for an extended period, remove the batteries to prevent leakage.

Troubleshooting

- **Display is blank or dim:** Check battery installation. Replace batteries if necessary.
- **Alarm does not sound:** Ensure the Alarm ON/OFF/SNZ Selector switch is set to **AL ON**. Verify the alarm time is correctly set.
- **Incorrect time display:** Re-set the current time following the 'Initial Time Setting' instructions.

Specifications

Model Number	PQ-30B-7EF
Display Type	Digital
Power Source	2 x LR44 Batteries (included)
Special Features	Alarm, Snooze, Light
Movement Type	Quartz
Material	Plastic, Acrylonitrile Butadiene Styrene (ABS)
Dimensions (W x H)	13 cm x 3 cm (approx.)
Color	White

Warranty and Support

This Casio product is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact Casio customer support. Keep your purchase receipt as proof of purchase.