

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [CASIO](#) /
- › [CASIO DB-360-1A Digital Quartz Watch User Manual](#)

CASIO DB-360-1A

CASIO DB-360-1A Digital Quartz Watch

USER MANUAL

1. Introduction

This manual provides detailed instructions for the operation and maintenance of your CASIO DB-360-1A Digital Quartz Watch. This timepiece is equipped with a range of features designed for daily convenience and functionality, including a databank memory, multiple alarms, a countdown timer, and world time capabilities.





Figure 1: Front view of the CASIO DB-360-1A Digital Quartz Watch, showcasing its digital display and stainless steel bracelet.

Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your watch.

2. Setup and Initial Settings

2.1 Battery Information

Your watch is powered by one Lithium metal battery. The battery is designed for long-term use, with an approximate 10-year battery life under normal conditions.

2.2 Setting the Time and Date

1. In Timekeeping Mode, press and hold the **ADJUST** button (top left) until the seconds digits start to flash, indicating the setting screen.
2. Press the **MODE** button (bottom left) to cycle through the settings: Seconds → DST (Daylight Saving Time) → Hour → Minutes → Year → Month → Day.
3. Use the **FORWARD** button (bottom right) to increase the selected value or the **REVERSE** button (top right) to decrease it.
4. Once all settings are adjusted, press the **ADJUST** button to exit the setting screen and return to Timekeeping Mode.

3. Operating Modes and Functions

The CASIO DB-360-1A features multiple operating modes. Press the **MODE** button (bottom left) to cycle through them:

- Timekeeping Mode
- Databank Mode
- Alarm Mode
- Countdown Timer Mode
- Stopwatch Mode
- World Time Mode

3.1 Databank Function (Memory)

The watch includes a databank function that allows you to store up to 30 sets of data, typically names and telephone numbers. Each entry can have up to 8 characters for the name and 15 digits for the number.

1. Enter Databank Mode by pressing the **MODE** button.
2. To add a new entry, press and hold the **ADJUST** button until the cursor flashes.
3. Use the **FORWARD** and **REVERSE** buttons to select characters. Press **MODE** to move to the next character or field.
4. After entering the name and number, press **ADJUST** to save the entry.
5. To view entries, use **FORWARD** and **REVERSE** buttons in Databank Mode.

3.2 Alarm Function

The watch features multiple alarms and an hourly time signal.

1. Enter Alarm Mode.
2. Press the **FORWARD** button to cycle through the alarms (AL1, AL2, AL3, AL4, AL5, SNZ (Snooze), SIG (Hourly Time Signal)).
3. To set an alarm, select the desired alarm and hold **ADJUST** until the hour digits flash.
4. Use **FORWARD** and **REVERSE** to set the hour and minutes. Press **MODE** to switch between hour and minute settings.
5. Press **ADJUST** to save.
6. To turn an alarm or hourly signal on/off, select it and press **FORWARD**.

3.3 Countdown Timer

The countdown timer can be set for up to 24 hours.

1. Enter Countdown Timer Mode.
2. Hold **ADJUST** to enter setting mode.
3. Use **FORWARD** and **REVERSE** to set the start time. Press **MODE** to switch between hours, minutes, and seconds.
4. Press **ADJUST** to save.
5. Press **FORWARD** to start or stop the timer.
6. Press **REVERSE** to reset the timer to its starting value.

3.4 Stopwatch Function

The stopwatch measures elapsed time, split times, and two finishes.

1. Enter Stopwatch Mode.
2. Press **FORWARD** to start/stop the stopwatch.
3. Press **REVERSE** to reset to zero.
4. While the stopwatch is running, press **REVERSE** to record a split time. Press **REVERSE** again to release the split and return to elapsed time.

3.5 World Time Function

The World Time Mode displays the current time in 30 cities (29 time zones) around the world.

1. Enter World Time Mode.
2. Use **FORWARD** and **REVERSE** to scroll through the city codes.
3. To toggle Daylight Saving Time (DST) for a city, press **ADJUST** while the city code is displayed.

3.6 Illuminator (Light)

Press the **LIGHT** button (top right) to illuminate the display for easy reading in low light conditions. The light duration is approximately 1.5 seconds.

4. Maintenance and Care

4.1 Water Resistance

This watch is rated for 30 meters (3 ATM) water resistance. This means it is suitable for daily use and can withstand splashes or brief immersion in water. It is not suitable for swimming, showering, or diving.

4.2 Cleaning

Wipe the watch with a soft, dry cloth to remove dirt and moisture. For the stainless steel band, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners.

4.3 Battery Replacement

When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance.

5. Troubleshooting

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidental button press.	Re-set the time and date as per Section 2.2.
Alarm does not sound.	Alarm is turned off or set incorrectly.	Ensure the alarm is activated and set to the correct time in Alarm Mode.
Buttons are unresponsive.	Watch may be in a locked mode or battery is very low.	Try pressing all buttons to see if any mode changes. If not, consider battery replacement.

6. Specifications

Model Number: DB-360-1A

Manufacturer: CASIO

Dimensions (L x W x H): 6.2 x 12.4 x 9.4 cm (packaging dimensions); Watch dimensions: 43.1 x 37.7 x 10.4 mm

Weight: 39 grams

Battery: 1 x Lithium Metal (approx. 10-year battery life)

Water Resistance: 30 meters (3 ATM)

Features: Light, Alarm, Countdown Timer, World Time, Databank (Memory Function)

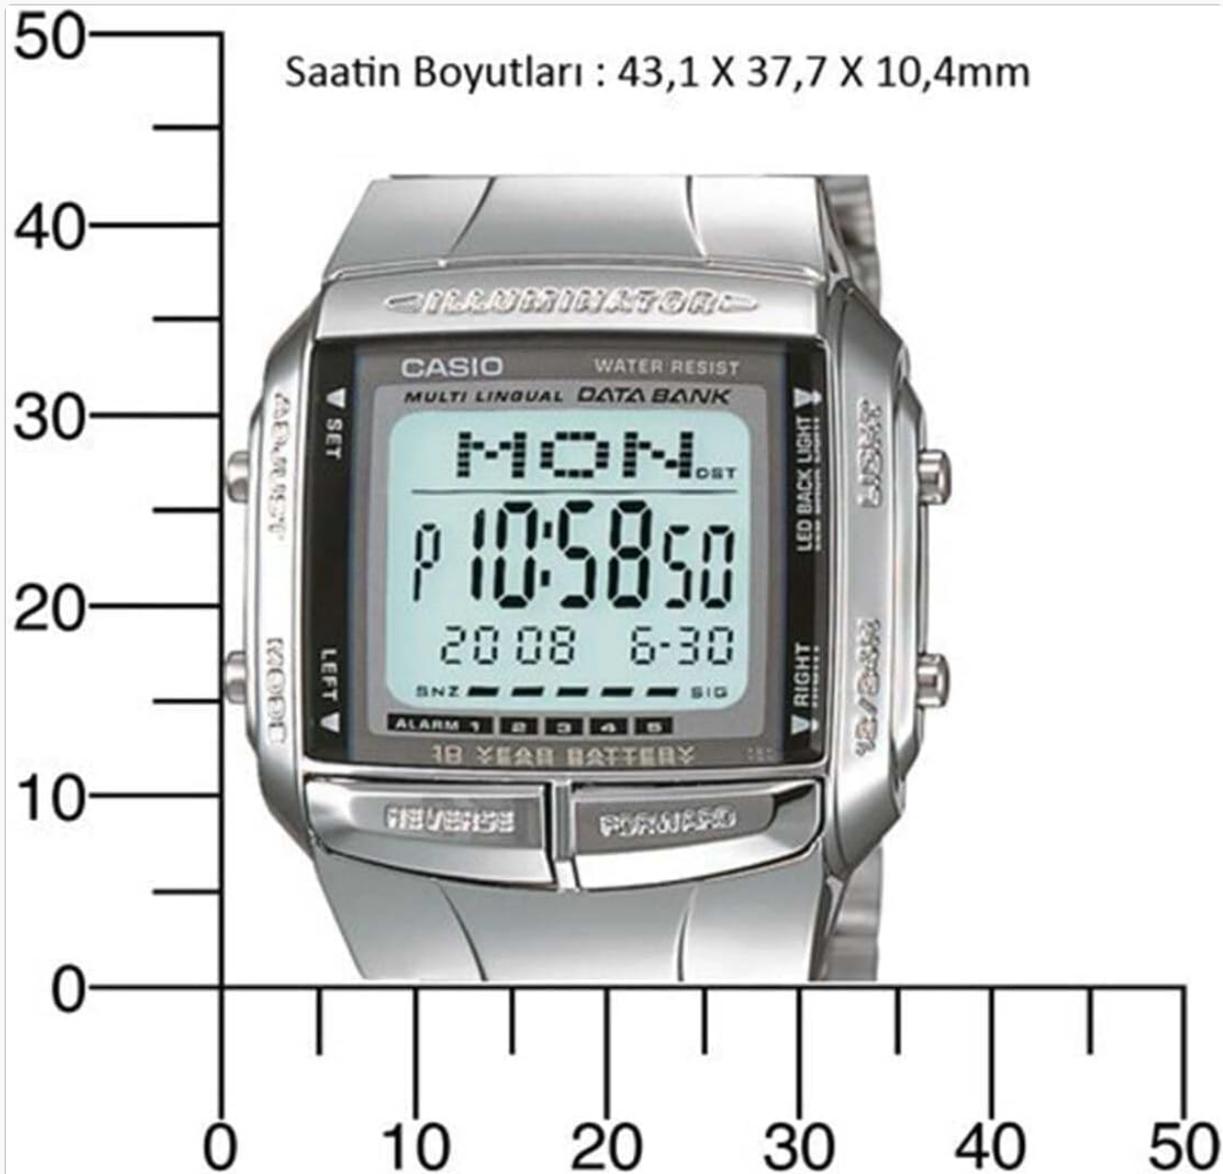


Figure 2: CASIO DB-360-1A Digital Quartz Watch with approximate dimensions indicated (43.1 x 37.7 x 10.4 mm).

7. Warranty and Support

Specific warranty details for your CASIO DB-360-1A watch may vary by region and retailer. Please refer to the warranty card included with your purchase or contact your point of sale for precise information.

For technical support or service inquiries, please contact CASIO customer service or visit the official CASIO website for your region. Information regarding spare parts availability is not detailed in the product specifications.

