

[Manuals.plus](#) /

› [LELO](#) /

› LELO Elise 2 Dual-Powered Massager User Manual

LELO Elise 2

LELO Elise 2 Dual-Powered Massager

OFFICIAL INSTRUCTION MANUAL



LELO

Model: Elise 2 (Item Model Number: 7663)

Introduction

This manual provides comprehensive instructions for the safe and effective use of your LELO Elise 2 Dual-Powered Massager. Please read this manual thoroughly before first use and retain it for future reference.



Image: LELO Elise 2 Dual-Powered Massager

Package Contents

Verify that all items listed below are present in your LELO Elise 2 package:

- LELO Elise 2 Dual-Powered Massager

- USB Charging Cable
- Satin Storage Pouch
- Instruction Manual
- Warranty Registration Card
- Personal Moisturizer Sachet (5 ml / 0.17 fl. oz.)

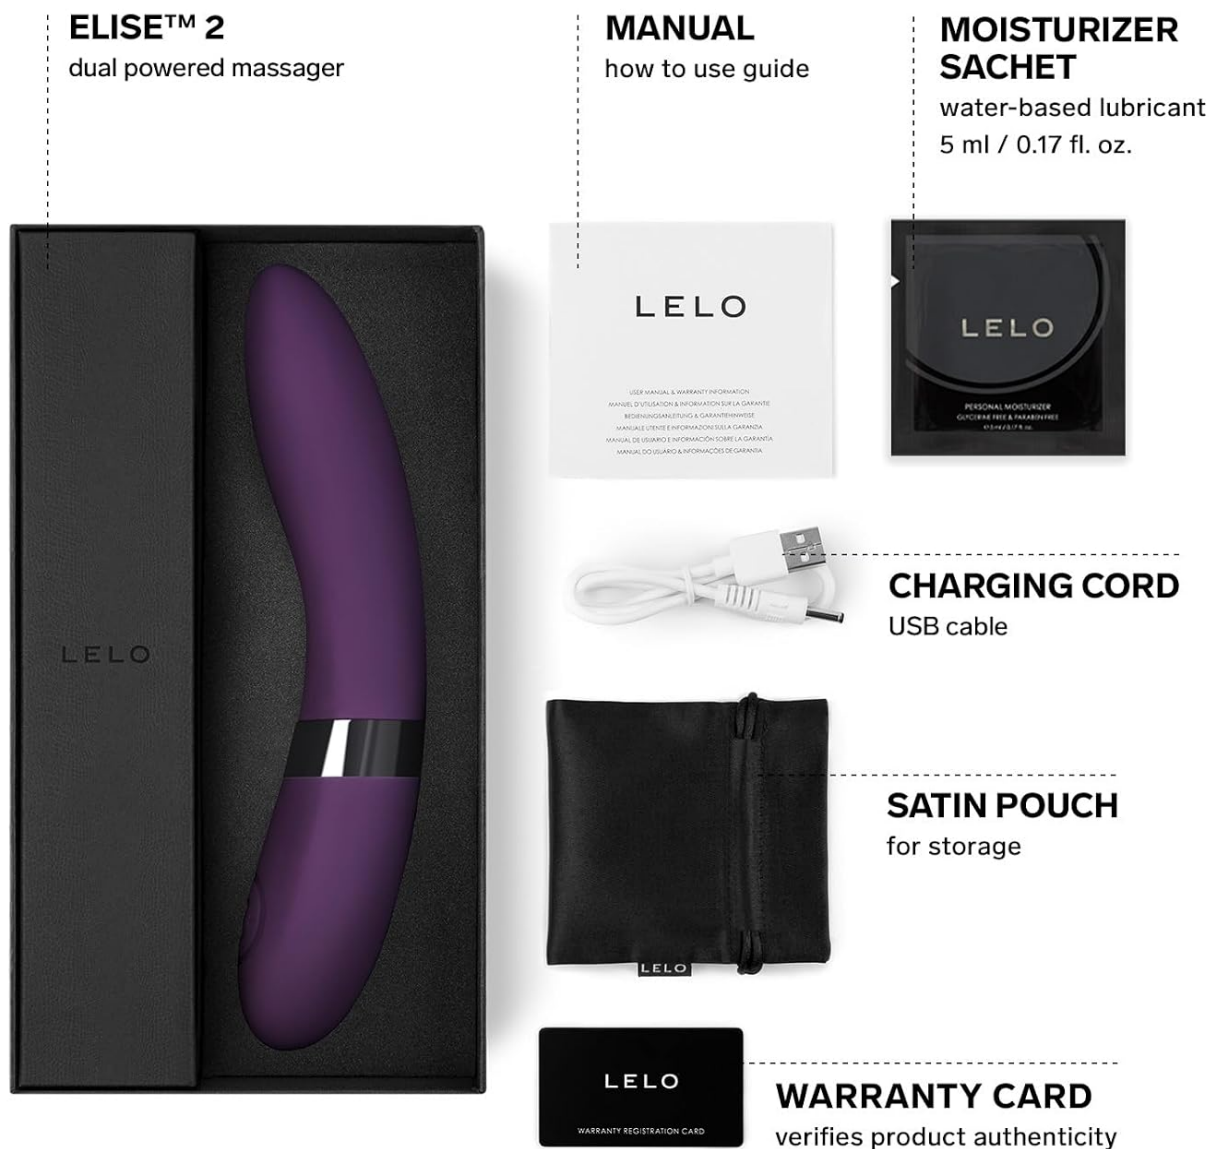


Image: LELO Elise 2 Package Contents

Key Features

The LELO Elise 2 is designed with advanced features for an enhanced experience:

- **Dual Motors:** Equipped with two motors, one in the base and one in the tip, for powerful and varied sensations.
- **8 Vibration Patterns:** Offers a range of 8 pre-set vibration patterns with adjustable intensity.
- **Ergonomic Design:** Features a longer, thicker design with gentle curves to conform to the body.

- **Waterproof:** Fully waterproof up to 1 meter, suitable for use in baths or showers, and easy to clean.
- **Rechargeable:** Provides up to 2 hours of use on a single charge.
- **Extra-Soft Silicone:** Made from body-safe, extra-soft silicone for a comfortable feel.

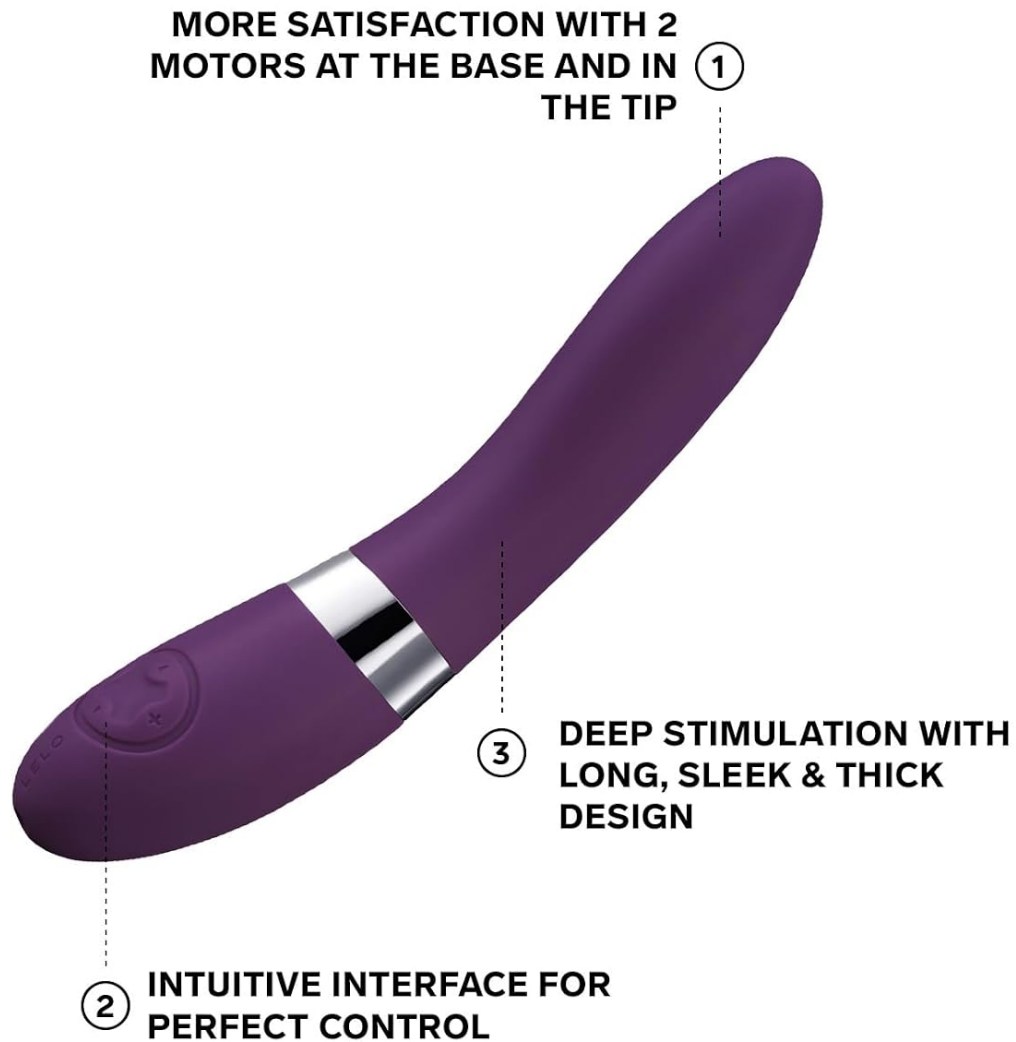


Image: LELO Elise 2 Design and Motor Placement

Features



8 SETTINGS

from a teasing murmur to a satisfying pulse



ERGONOMICALLY DESIGNED

fits your body like a glove



WATERPROOF DESIGN

perfect for the bath and shower



EXTRA-SOFT SILICONE

that feels warm to the touch



Image: LELO Elise 2 Key Features

Setup

1. **Initial Charge:** Before first use, fully charge your LELO Elise 2 for 2 hours. Connect the USB charging cable to the device's charging port and plug the other end into a USB power source. The indicator light will show charging status.
2. **Clean Before Use:** Wash the device thoroughly with lukewarm water and mild soap, or use LELO Premium Cleaning Spray. Rinse well and dry completely.

Operating Instructions

The LELO Elise 2 features an intuitive control interface:

1. **To Turn On:** Press and hold the '+' button for 3 seconds.
2. **To Switch Between 8 Settings:** Press the '+' or '-' button briefly to cycle through the vibration patterns.

3. **To Decrease or Increase Intensity:** While a pattern is active, press and hold the '+' button to increase intensity or the '-' button to decrease intensity.
4. **To Turn Off:** Press and hold the '-' button for 3 seconds.
5. **Travel Lock:** To activate the travel lock, press and hold both '+' and '-' buttons simultaneously until the light flashes. Repeat to unlock.

How to use

BEFORE FIRST USE

charge your device for 2 hours

TO TURN IT ON

press and hold the + button

TO SWITCH BETWEEN 8 SETTINGS

press the up or down button

TO DECREASE OR INCREASE THE INTENSITY

use the - or the + button

TO TURN IT OFF

press and hold the - button



Image: LELO Elise 2 Usage Guide

Maintenance

- **Cleaning:** Always clean your LELO Elise 2 thoroughly after each use. Wash with lukewarm water and a mild, antibacterial soap, or use LELO Premium Cleaning Spray. Rinse thoroughly and pat dry with a lint-free cloth. Avoid using cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone.
- **Storage:** Store the device in its satin pouch in a dust-free environment, away from extreme temperatures and direct sunlight. Ensure it is completely dry before storing.

- **Lubricants:** Only use water-based lubricants with your LELO Elise 2. Oil-based or silicone-based lubricants can degrade the silicone material.

Troubleshooting

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted. Travel lock is activated.	Charge the device for 2 hours. Deactivate travel lock by pressing and holding '+' and '-' buttons simultaneously.
Vibrations are weak or inconsistent.	Low battery.	Recharge the device.
Device not charging.	Charging cable or port issue.	Ensure the USB cable is securely connected to both the device and the power source. Try a different USB port or charger.
Control buttons are unresponsive.	Travel lock is activated. Device malfunction.	Deactivate travel lock. If the issue persists, contact LELO customer support.

Specifications

Model Name: ELISE 2

Item Model Number: 7663

Material: Body-safe Silicone

Color: Plum (as per current variant)

Dimensions: 220 x 42 x 36mm / 8.7 x 1.7 x 1.4 inches

Diameter: 39mm / 1.5 inches

Weight: Approximately 9.28 ounces

Battery: 1 Lithium Polymer battery (rechargeable)

Charge Time: 2 hours

User Time: Up to 2 hours

Interface: 3-button control

Waterproof: Up to 1 meter

Warranty and Support

Your LELO Elise 2 comes with a **1-year limited warranty** covering manufacturing defects and a **10-year quality guarantee**. For warranty claims or technical support, please contact LELO customer service directly. Retain your proof of purchase and warranty registration card.

For further assistance, visit the official LELO website or contact their customer support team. Contact information can typically be found on the warranty card or the LELO official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question