

Unicorn UNI79511

Unicorn Electronic Soft Tip Dartboard with LCD Display

Model: UNI79511

INTRODUCTION

Thank you for choosing the Unicorn Electronic Soft Tip Dartboard. This manual provides essential information for the safe and efficient use of your new dartboard. Please read it thoroughly before installation and operation, and retain it for future reference. This dartboard is designed for recreational play, offering a variety of games for up to 8 players.

SAFETY INFORMATION

- **Adult Supervision:** This product is not a toy. Adult supervision is recommended, especially when children are playing.
- **Dart Safety:** Use only soft-tip darts provided or approved by Unicorn. Never throw darts at people or animals. Ensure the throwing area is clear of obstacles and bystanders.
- **Power Supply:** Use only the specified power adapter (if included) or batteries. Do not mix old and new batteries, or different types of batteries. Remove batteries if the unit is not used for extended periods.
- **Mounting:** Ensure the dartboard is securely mounted to a stable surface to prevent it from falling.
- **Water Exposure:** Keep the dartboard away from water and moisture. Do not operate with wet hands.
- **Maintenance:** Do not attempt to open or repair the dartboard yourself. Refer all servicing to qualified personnel.

PACKAGE CONTENTS

Please check the box to ensure all items are present:

- Unicorn Electronic Soft Tip Dartboard (Model UNI79511)

- 6 Soft-Tip Darts
- Spare Soft Tips
- Mounting Hardware (screws, wall plugs)
- User Manual (this document)
- AC Power Adapter (if applicable, or battery compartment for 3x AA batteries, not included)

SETUP

1. Mounting the Dartboard

Choose a suitable location for your dartboard, ensuring ample space for throwing and retrieving darts. The standard height for the center of the bullseye is 1.73 meters (5 feet 8 inches) from the floor. The throwing line (oche) should be 2.37 meters (7 feet 9.25 inches) from the face of the dartboard.

1. Mark the desired mounting height on the wall.
2. Use the provided mounting template (if included) or measure the distance between the mounting holes on the back of the dartboard.
3. Drill pilot holes at the marked positions. Insert wall plugs if mounting into drywall.
4. Securely fasten the dartboard to the wall using the provided screws. Ensure it is level and stable.

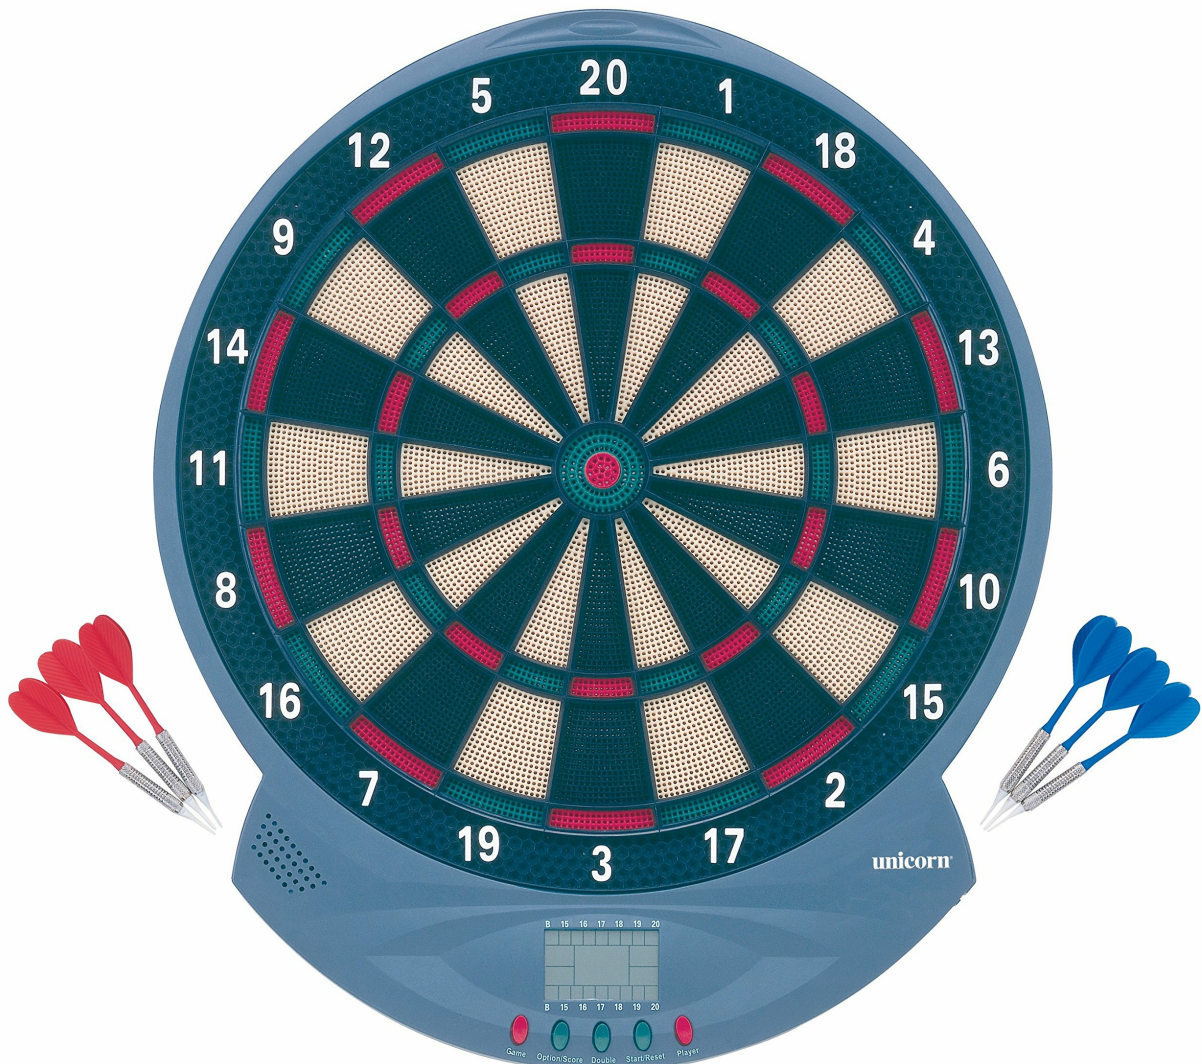


Image: The Unicorn Electronic Soft Tip Dartboard securely mounted on a wall, ready for play.

2. Powering the Dartboard

- **AC Adapter:** If using the AC power adapter, plug the small end into the DC input jack on the dartboard and the other end into a standard wall outlet.
- **Batteries:** If using batteries, open the battery compartment on the back of the dartboard. Insert 3x AA batteries (not included), ensuring correct polarity (+/-). Close the compartment securely.

3. Dart Assembly

The included soft-tip darts may require minor assembly:

1. Screw the barrel onto the shaft.
2. Insert the flight into the slots at the end of the shaft.
3. Ensure the soft tip is securely attached to the barrel. Replace worn or broken tips as needed.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the **POWER** button to turn the dartboard on. The LCD display will illuminate. Press and hold the **POWER** button for a few seconds to turn it off.

2. Selecting a Game

Your dartboard features 25 games with 176 variations. Use the **GAME** button to cycle through the available games. The game number and name will be displayed on the LCD. Refer to the game list in this manual for details on each game.

3. Player Selection

After selecting a game, press the **PLAYER** button to choose the number of players (1 to 8). The selected number of players will be indicated on the LCD.

4. Starting the Game

Once the game and number of players are selected, press the **START** button to begin. The dartboard will prompt the first player to throw.

5. Gameplay and Scoring

- Throw darts at the board. The electronic scoring system will automatically register hits and display scores on the LCD.
- If a dart does not register, gently remove it and re-insert it into the segment. If it still doesn't register, manually enter the score using the **SCORE ADJUST** buttons (if available) or re-throw.
- The dartboard will indicate whose turn it is.
- Press the **BOUNCE OUT** button if a dart hits the board but falls out without registering. This will typically deduct the throw from the player's turn without scoring.
- The game ends when a player meets the winning conditions for the selected game.

6. Game Variations

Many games have variations (e.g., single in/out, double in/out for 301). After selecting a game, you may be able to press the **VARIATION** button (if available) to cycle through these options before starting the game.

7. Sound Control

Use the **VOLUME** button (if available) to adjust the sound level or mute the dartboard's audio feedback.

MAINTENANCE

- **Cleaning:** Wipe the dartboard and LCD display with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Dart Tips:** Regularly inspect soft tips for wear or damage. Replace broken or bent tips with spare tips to ensure proper scoring and prevent damage to the dartboard segments.
- **Storage:** When not in use, store the dartboard in a dry, cool place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Dartboard does not power on.	No power, dead batteries, or faulty adapter.	Check AC adapter connection or replace batteries. Ensure batteries are inserted with correct polarity.
Darts do not register score.	Worn/broken soft tip, dart not fully inserted, or segment issue.	Replace soft tip. Ensure dart is thrown firmly into the segment. Try another dart.
LCD display is blank or flickering.	Low power, loose connection, or internal fault.	Check power supply/batteries. Try turning off and on again. If problem persists, contact support.
Dartboard resets during play.	Power interruption or strong impact.	Ensure stable power connection. Avoid excessive force when throwing darts.

SPECIFICATIONS

Brand	Unicorn
Model Number	UNI79511
Product Type	Electronic Soft Tip Dartboard
Maximum Players	8
Number of Games	25
Game Variations	176
Display Type	LCD
Darts Included	6 Soft-Tip Darts
Power Source	AC Adapter (if included) or 3x AA Batteries (not included)
Color	Black/White/Red/Green
UPC	054722795119

WARRANTY AND SUPPORT

Unicorn products are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your product or visit the official Unicorn Darts website. If you encounter any issues or require technical assistance, please contact Unicorn customer support through their official channels. Keep your proof of purchase for warranty claims.