

KODAK M1033

Kodak Easyshare M1033 Digital Camera User Manual

Model: M1033

1. INTRODUCTION

Thank you for choosing the Kodak Easyshare M1033 Digital Camera. This manual provides essential information for setting up, operating, and maintaining your camera to ensure optimal performance and longevity. Please read this manual thoroughly before using your camera.

Key Features:

- **10.0 Megapixel Resolution:** Capture high-quality images suitable for prints up to 30 x 40 inches.
- **3x Optical Zoom:** Get closer to your subjects without compromising image quality (35 mm equivalent: 35–105 mm).
- **Intelligent Capture Control:** Automatically adjusts camera settings for exposure, focus, and ISO to produce clear, sharp pictures.
- **HD Picture Viewing:** Connect to an HDTV or other HD devices to view your photos in high definition.
- **Auto Picture Rotation:** Images are automatically oriented correctly for viewing, whether shot vertically or horizontally.

2. SAFETY INFORMATION

To prevent injury to yourself or others, or damage to your camera, please observe the following safety precautions:

- **Battery Safety:** Use only the specified Lithium-Ion battery. Do not expose batteries to excessive heat, direct sunlight, or dispose of them in fire. Keep batteries out of reach of children.
- **Water and Moisture:** This camera is not waterproof. Do not expose it to water, rain, or high humidity.
- **Handling:** Avoid dropping the camera or subjecting it to strong impacts.
- **Cleaning:** Use a soft, dry cloth for cleaning. Do not use harsh chemicals or solvents.
- **Operating Temperature:** Operate the camera within recommended temperature ranges to prevent malfunction.

3. PACKAGE CONTENTS

Verify that your package contains the following items:

- Kodak Easyshare M1033 Digital Camera Body
- Lens (integrated)
- Lithium-Ion Battery (included)
- USB Cable
- Wrist Strap
- Quick Start Guide

4. CAMERA OVERVIEW

Familiarize yourself with the main components and controls of your Kodak Easyshare M1033 camera.

Front View



Figure 4.1: Front view of the Kodak Easyshare M1033 camera, showing the lens, flash, and microphone.

Rear View



Figure 4.2: Rear view of the Kodak Easyshare M1033 camera, displaying the LCD screen and control buttons.

- **LCD Screen:** For framing shots, reviewing photos, and navigating menus.
- **Zoom Lever (W/T):** Controls optical zoom (W for Wide, T for Telephoto).
- **Playback Button:** Enters playback mode to view photos and videos.
- **Menu Button:** Accesses camera settings and options.
- **Controller Pad:** Navigates menus and selects options.
- **Delete Button:** Deletes selected photos or videos.
- **Share Button:** For quick sharing options (if configured).

5. SETUP

5.1 Battery Installation

1. Open the battery compartment cover on the bottom of the camera.
2. Insert the Lithium-Ion battery with the contacts facing the correct direction, as indicated inside the compartment.
3. Close the battery compartment cover until it clicks securely into place.

5.2 Memory Card Installation

The camera supports SD/SDHC/MMC memory cards up to 32 GB.

1. Locate the memory card slot, usually next to the battery compartment.
2. Insert the memory card with the label facing the front of the camera until it clicks into place.
3. To remove, press the card gently inward until it springs out.

5.3 Initial Power On

Press the **Power** button located on the top of the camera. The lens will extend, and the LCD screen will turn on. Follow any on-screen prompts for initial setup, such as setting the date and time.

6. OPERATING THE CAMERA

6.1 Taking Photos

1. Turn on the camera.
2. Frame your shot using the LCD screen. Use the **Zoom Lever** to adjust the optical zoom.
3. Press the **Shutter Button** halfway down to focus. The focus frame will turn green when focus is achieved.
4. Press the **Shutter Button** completely down to take the picture.

6.2 Recording Videos

1. Press the **Mode** button (if available) or navigate through the menu to select Video mode.
2. Press the **Shutter Button** to start recording. A red indicator will appear on the screen.
3. Press the **Shutter Button** again to stop recording.

6.3 Playback Mode

Press the **Playback Button** to view your captured photos and videos. Use the **Controller Pad** to navigate through your media. Press the **Delete Button** to remove unwanted files.

6.4 Camera Modes and Settings

Your camera features various modes and settings accessible via the **Menu Button**:

- **Smart Capture:** Automatically optimizes settings for various scenes.
- **Scene Modes:** Pre-set modes for specific shooting conditions (e.g., Portrait, Landscape, Night).
- **Flash Modes:** Auto, Fill-flash, Red-eye reduction, Off.
- **White Balance:** Auto, Daylight, Tungsten, Fluorescent.
- **Exposure Compensation:** Adjust brightness of images.

7. MAINTENANCE

7.1 Cleaning the Camera

- **Camera Body:** Wipe with a soft, lint-free cloth. For stubborn dirt, slightly dampen the cloth with water.
- **Lens:** Use a lens brush or a soft, clean microfiber cloth specifically designed for optical lenses. Avoid touching the lens surface with your fingers.
- **LCD Screen:** Gently wipe with a soft, dry cloth.

7.2 Storage

When not in use, store the camera in a cool, dry place, away from direct sunlight and extreme temperatures. Remove the battery if the camera will not be used for an extended period.

8. TROUBLESHOOTING

If you encounter issues with your camera, refer to the following common problems and solutions:

Problem	Possible Solution
Camera does not turn on.	Ensure the battery is fully charged and correctly inserted. Try a different battery if available.
Lens does not retract.	Check for obstructions around the lens. Turn the camera off and on again. If the issue persists, contact customer support.
Pictures are blurry.	Ensure proper focus by pressing the shutter button halfway. Hold the camera steady or use a tripod. Check for smudges on the lens.
Memory card error.	Reinsert the memory card. Try formatting the card (this will erase all data). Use a different, compatible memory card.
Battery drains quickly.	Reduce LCD brightness. Turn off the camera when not in use. Limit flash usage. Ensure the battery is not old or damaged.

9. SPECIFICATIONS

Model Name:

Kodak Easyshare M1033

Resolution:

10.0 Megapixels (Effective Still Resolution: 10.1 MP)

Optical Zoom:

3x (35-105 mm equivalent)

Digital Zoom:

5x

Image Stabilization:

Digital, Optical

Sensor Type:

CCD (1/2.3-inch)

Display:

3-inch LCD (230,000 dots)

Storage Media:

SD/SDHC/MMC card (up to 32 GB), 32 MB Internal Memory

File Formats:

JPEG, RAW (Stills); MP4 (Video)

Video Resolution:

Up to 1280 x 720, 30 fps

Connectivity:

USB 2.0, HDMI, Wi-Fi

Battery Type:

Lithium Ion

Item Weight:

5.92 ounces

Model Number:

1278829

UPC:

041771278823

10. WARRANTY AND SUPPORT

10.1 Limited Warranty

The Kodak Easyshare M1033 Digital Camera comes with a **1-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized repairs, or external factors.

Please retain your proof of purchase for warranty claims.

10.2 Customer Support

For technical assistance, warranty service, or further inquiries, please visit the official KODAK support website or contact their customer service department. Refer to the contact information provided with your product packaging or on the official KODAK website.