

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm Finepix J10 8.2MP Digital Camera User Manual

Fujifilm Finepix J10

Fujifilm Finepix J10 8.2MP Digital Camera User Manual

Model: Finepix J10 | Brand: Fujifilm

INTRODUCTION

This manual provides essential instructions for the operation and maintenance of your Fujifilm Finepix J10 8.2MP Digital Camera. The FinePix J10 is designed for ease of use, featuring an 8.2-megapixel CCD sensor, a 2.5-inch LCD, and a 3x Fujinon optical zoom lens. It incorporates Fujifilm's Picture Stabilization Technology to minimize blur and offers various scene modes and movie recording capabilities. Please read this manual thoroughly to ensure proper use and to maximize your camera's performance.



Figure 1: Front view of the Fujifilm Finepix J10 Digital Camera, showcasing the lens and flash.

SETUP

1. Battery Installation and Charging

The Fujifilm Finepix J10 uses a long-life rechargeable Li-ion battery. Ensure the battery is fully charged before first use.

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the cover latch to open the compartment.
3. Insert the Li-ion battery into the compartment, ensuring the correct orientation as indicated by the markings inside.
4. Close the battery compartment cover securely until it clicks into place.
5. Connect the camera to the charger using the provided USB cable and plug it into a power outlet. The charging indicator light will show the charging status.



Figure 2: Side view of the camera, illustrating the battery and memory card compartment.

2. Memory Card Insertion

The Finepix J10 supports xD, SD, and SDHC memory cards (not included). A memory card is required to store photos and videos.

1. Open the battery compartment cover. The memory card slot is usually located next to the battery.
2. Insert the memory card into the slot with the metal contacts facing the correct direction, as shown by the diagram near the slot. Push gently until it clicks into place.
3. Close the battery compartment cover.



Figure 3: Back view of the camera, showing the LCD screen and control buttons for navigation and settings.

OPERATING INSTRUCTIONS

1. Powering On/Off

Press the **ON/OFF** button located on the top of the camera to power it on or off.



Figure 4: Top view of the camera, highlighting the power button and shutter release.

2. Taking Photos

1. Turn on the camera.
2. Frame your shot using the 2.5-inch LCD screen.
3. Press the shutter button halfway down to focus. The focus indicator will light up when focus is achieved.
4. Press the shutter button all the way down to take the picture.

3. Zoom Function

Use the zoom lever (often integrated with the shutter button or a separate toggle) to adjust the 3x optical zoom. Push the lever towards **W** for wide-angle and **T** for telephoto.

4. Scene Modes

The camera features 15 pre-programmed scene modes to optimize settings for various shooting conditions. Access these modes via the **MENU** button and navigate using the directional pad.

5. Movie Mode

To record videos, switch to Movie Mode (refer to your camera's specific button or menu option). The Finepix J10 captures VGA and QVGA-quality movie clips at 30 frames per second with sound.

KEY FEATURES

- **8.2-Megapixel CCD Sensor:** Captures high-resolution images suitable for large prints.
- **3x Optical Zoom Lens:** Provides versatility for capturing subjects at various distances.
- **2.5-inch LCD Screen:** For easy framing, reviewing photos, and navigating menus.
- **Picture Stabilization Technology:** Reduces blur caused by camera shake or subject movement.
- **15 Scene Modes:** Optimizes camera settings for different shooting environments (e.g., Portrait, Landscape, Night).
- **Movie Mode:** Records VGA and QVGA video clips at 30 frames per second with audio.
- **xD/SD/SDHC-Compatible Slot:** Offers flexible memory card options for storage.
- **Long-Life Rechargeable Li-ion Battery:** Ensures extended shooting time.

SPECIFICATIONS

Feature	Detail
Brand	Fujifilm
Model Name	Finepix J10
Effective Still Resolution	8.2 MP
Photo Sensor Technology	CCD
Optical Zoom	3x
Digital Zoom	5.1x
Screen Size	2.5 Inches
Display Type	LCD
Image Stabilization	Digital, Optical
Video Resolution	320 x 240 30 fps (VGA/QVGA)
Supported File Format	JPEG, RAW (Still), MP4 (Video)
Flash Memory Type	xD Picturecard/SD/SDHC/MMC
Battery Type	Lithium Ion (Rechargeable)
Connectivity Technology	USB
Item Weight	0.33 Pounds
Color	Matte Black

MAINTENANCE

- **Cleaning the Camera Body:** Use a soft, dry cloth to wipe the camera body. For stubborn dirt, lightly dampen the cloth with water and then wipe dry. Avoid using alcohol, solvents, or abrasive cleaners.
- **Cleaning the Lens:** Use a lens brush to remove dust and then gently wipe with a lens cleaning cloth. Do not use excessive force or harsh chemicals.
- **Cleaning the LCD Screen:** Gently wipe the screen with a soft, lint-free cloth. Avoid pressing hard on the screen.
- **Battery Care:** Store batteries in a cool, dry place when not in use. Avoid extreme temperatures. Do not short-circuit or disassemble batteries.
- **Storage:** When storing the camera for extended periods, remove the battery and memory card. Store in a dry, well-ventilated area away from direct sunlight and high humidity.

TROUBLESHOOTING

Common Issues and Solutions:

- **Camera does not power on:**
 - Ensure the battery is correctly inserted and fully charged.
 - Check if the battery contacts are clean.
- **Cannot take pictures:**
 - Verify that a memory card is inserted and has sufficient free space.
 - Check if the battery has enough charge.
 - Ensure the lens cap is removed (if applicable).
- **Images are blurry:**
 - Hold the camera steady when pressing the shutter button.
 - Ensure the subject is within the camera's focusing range.
 - Check if the lens is clean.
 - Consider using Picture Stabilization Technology in low-light conditions.
- **Flash does not fire:**
 - Check the flash settings to ensure it is set to an appropriate mode (e.g., Auto, Fill-in Flash).
 - Ensure the subject is within the flash range.

WARRANTY AND SUPPORT

This product is sold "AS IS" as per the legal disclaimer. For any inquiries or technical assistance, please refer to the official Fujifilm support channels or visit their website. Keep your purchase receipt as proof of purchase. For further information, please visit the [Fujifilm Store](#).

© 2023 Fujifilm. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question