

[manuals.plus](#) /

› [Franke](#) /

› [Franke 133.0016.358 18-Liter Grey Kitchen Waste Container User Manual](#)

**Franke 133.0016.358**

# Franke 133.0016.358 18-Liter Grey Kitchen Waste Container User Manual

## INTRODUCTION

Thank you for choosing the Franke 133.0016.358 18-liter grey kitchen waste container. This manual provides essential information for the proper setup, operation, maintenance, and troubleshooting of your new waste container. Please read these instructions carefully before use and retain them for future reference.



*Image: The Franke 133.0016.358 18-liter grey kitchen waste container, shown from a slightly elevated front angle. It is a rectangular, grey plastic bin designed for kitchen waste.*

## SAFETY INFORMATION

Please observe the following safety guidelines to ensure safe and proper use of your waste container:

- Do not overload the container beyond its 18-liter capacity.
- Avoid placing hot ashes or flammable materials directly into the container.
- Keep the container out of reach of small children and pets to prevent accidents.

- Ensure the container is placed on a stable, level surface to prevent tipping.
- Do not use harsh chemicals or abrasive cleaners, as these may damage the plastic material.

## PACKAGE CONTENTS

---

The package should contain the following item:

- 1 x Franke 133.0016.358 18-Liter Grey Kitchen Waste Container

If any components are missing or damaged, please contact Franke customer support.

## SETUP

---

1. **Unpack the Container:** Carefully remove the waste container from its packaging. Inspect it for any signs of damage during transit.
2. **Choose a Location:** Select a suitable location in your kitchen or designated area. The container is designed to be suitable for integration into a cube sorter system or used as a standalone unit.
3. **Ensure Stability:** Place the container on a flat, stable surface to prevent it from wobbling or tipping over when in use.
4. **Insert Waste Bag (Optional):** For easier cleaning and waste disposal, line the container with a standard 18-liter capacity waste bag.

## OPERATION

---

The Franke 133.0016.358 waste container features a simple manual-lift opening mechanism for convenient waste disposal.

1. **Opening:** To open the container, simply lift the lid manually.
2. **Disposing of Waste:** Place your kitchen waste into the container. Ensure that the waste fits within the container's capacity.
3. **Closing:** After disposing of waste, lower the lid back into place. This helps to contain odors and maintain hygiene.

## MAINTENANCE AND CLEANING

---

Regular cleaning will help maintain the hygiene and appearance of your waste container.

- **Emptying:** Empty the container regularly, especially when disposing of organic waste, to prevent odors and bacterial growth.
- **Wiping Down:** Use a soft cloth dampened with mild soap and water to wipe down the interior and exterior surfaces of the container.
- **Rinsing:** For a more thorough clean, you can rinse the container with water. Ensure it is completely dry before reuse to prevent mildew.
- **Drying:** Air dry the container or wipe it dry with a clean cloth.
- **Avoid Harsh Cleaners:** Do not use abrasive sponges, scouring pads, or chemical cleaners containing bleach or ammonia, as these can damage the plastic surface.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Unpleasant Odors	Infrequent emptying, unsealed waste, dirty container.	Empty the container more frequently. Use a waste bag. Clean the container thoroughly as per maintenance instructions.
Container is unstable	Uneven surface, overloaded.	Place the container on a flat, stable surface. Do not overload beyond its capacity.
Lid does not close properly	Obstruction, warped lid.	Check for any waste obstructing the lid. If the lid is warped, contact customer support.

## SPECIFICATIONS

Feature	Detail
Model Number	133.0016.358
Capacity	18 Liters
Color	Grey (Grau)
Opening Mechanism	Manual-Lift
Material	Plastic
Recommended Use	Kitchen
Shape	Rectangular
Product Dimensions (W x D x H)	12.2 x 8.66 x 11.42 inches (310 x 220 x 290 mm)
Item Weight	1 Pound (approx. 0.45 kg)

## WARRANTY AND SUPPORT

Franke products are manufactured to high-quality standards. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Franke website.

For technical support, spare parts, or any inquiries regarding your Franke waste container, please contact Franke customer service through their official website or the contact details provided in your product documentation.

**Official Franke Website:** [www.franke.com](http://www.franke.com)