

[Manuals.plus](#) /

› [Top Knobs](#) /

› Top Knobs M384 Asbury Collection 3-3/4" Bow Pull Installation and Care Manual

Top Knobs M384

Top Knobs M384 Asbury Collection 3-3/4" Bow Pull User Manual

INTRODUCTION

This manual provides instructions for the proper installation, operation, and maintenance of your Top Knobs M384 Asbury Collection 3-3/4" Bow Pull. Please read these instructions carefully before beginning installation to ensure correct application and long-lasting performance.

PRODUCT FEATURES

- **Center to Center:** 3-3/4" (95 mm)
- **Overall Length:** 4-9/16" (116 mm)
- **Width:** 7/16" (11 mm)
- **Projection:** 7/8" (22 mm)
- **Material:** Metal (Zinc)
- **Style:** Traditional / Classic Bow Pull Design

INSTALLATION

Proper installation is crucial for the stability and appearance of your cabinet pull. Ensure you have the necessary tools before starting.

Tools Required:

- Measuring Tape or Ruler
- Pencil
- Drill with appropriate drill bit (typically 3/16" or 5mm for cabinet hardware)
- Screwdriver (Phillips or Flathead, depending on screw type)
- Cabinet Hardware Jig (recommended for accuracy)

Installation Steps:

1. **Measure and Mark:** Determine the desired location for your pull on the cabinet door or drawer. Use a measuring tape and pencil to mark the two drill points, ensuring they are 3-3/4" (95 mm) apart (center to center). A cabinet hardware jig can greatly assist in precise marking.
2. **Drill Holes:** Carefully drill pilot holes through the cabinet door or drawer front at the marked locations. Ensure the drill bit is perpendicular to the surface to prevent splintering.
3. **Attach Pull:** Align the pull with the drilled holes. Insert the provided screws from the inside of the cabinet door or drawer, through the holes, and into the threaded posts of the pull.
4. **Tighten Screws:** Using a screwdriver, carefully tighten the screws until the pull is secure. Do not overtighten, as this can strip the screw threads or damage the cabinet material.



Image: Example of the Top Knobs M384 Asbury Collection Bow Pull. Note: The finish shown in this image may vary from your specific product's finish (Brushed Satin Nickel).



Image: Another view of the Top Knobs M384 Asbury Collection Bow Pull, illustrating its curved design and mounting points. The finish shown is for illustrative purposes.

OPERATING

The Top Knobs M384 Bow Pull is designed for simple and reliable operation. Grasp the pull firmly and apply gentle force to open or close cabinet doors and drawers. Avoid excessive force or twisting motions, which can loosen the pull over time.

MAINTENANCE

To maintain the finish and appearance of your cabinet pull, follow these guidelines:

- **Cleaning:** Wipe the pull regularly with a soft, damp cloth. For stubborn marks, use a mild soap solution and immediately dry with a clean, soft cloth.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, ammonia-based products, or harsh chemicals, as these can damage the finish.
- **Periodic Check:** Periodically check the tightness of the mounting screws. If the pull feels loose, gently tighten the screws with a screwdriver.

TROUBLESHOOTING

- **Pull is Loose:** If the pull becomes loose, gently tighten the mounting screws from the inside of the cabinet door or drawer. Do not overtighten.
- **Screws Spin Freely:** If the screws spin without tightening, the threads in the pull or the screw itself may be stripped. Try using a slightly longer screw of the same diameter, or contact customer support for replacement parts.
- **Difficulty Aligning Holes:** If holes do not align, re-measure and re-mark carefully. A cabinet hardware jig can prevent this issue. If holes are already drilled incorrectly, consider using a backplate or filling and re-drilling (professional assistance recommended).

SPECIFICATIONS

Model Number	M384
Brand	Top Knobs
Collection	Asbury Collection
Finish	Brushed Satin Nickel
Material	Zinc
Center to Center Spacing	3.75 inches (95 mm)
Overall Length	4-9/16 inches (116 mm)
Width	7/16 inches (11 mm)
Projection Distance	0.88 inches (22 mm)
Item Weight	2.24 ounces
Included Components	1 Knob (Pull)
UPC	640841476734, 840355003840

WARRANTY AND SUPPORT

Warranty Information:

This Top Knobs product comes with a One Year Limited Warranty. This warranty covers defects in material and workmanship under normal use. For specific details regarding warranty claims, please refer to the official Top Knobs warranty policy or contact customer support.

Customer Support:

For further assistance, technical support, or to inquire about replacement parts, please visit the official Top Knobs website or contact their customer service department. Contact information can typically be found on the manufacturer's website or product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question